### Available in these regions:

North America, Latin/South America, Australia, & New Zealand

**ORDERING & CABLING GUIDE** 

# Field-IQ **ISOBUS**

TANK-Control Sprayer Orchard/Vineyard





# Field-IQ<sup>™</sup> ISOBUS Configurator Training Requirements

Unlock the full potential of Trimble's Field-IQ<sup>™</sup> ISOBUS Configurator! Begin by delving into our training sessions to master the tool's capabilities. Training is a prerequisite for accessing software modules, and we recommend starting with the Sprayer configurator and then expanding based on your customer's needs.

The available configurator modules include:



Sprayer Hoeing Vineyard/Orchard Planter/Seeder Slurry



### Ready to dive in?

Simply purchase the Field-IQ<sup>™</sup> ISOBUS Configurator software and attend our in-person training. An annual fee also grants you access to this powerful tool, allowing dealers to craft ISO ECU profiles for unique implement setups beyond our standard profiles.

Email your regional training team for customized training details aligned with your dealership's specific needs. Clearly state the modules you're interested in, and we'll design a training program that perfectly matches your requirements, ensuring optimal effectiveness.

### REGIONAL TRAINING TEAMS:

- → NAMER traingcf@trimble.com
- → LATAM treinamentos\_ag@trimble.com
- → APAC APAC\_Training@trimble.com
- → EMEA me-service@trimble.com

### Why training is important?

Dealers are *required* to undergo this training before accessing Field-IQ<sup>™</sup> ISOBUS configuration tools, including PC-based configurators.

These configurators empower technicians to craft custom configuration files tailored to specific device types. Access to the PC-based configuration tool is exclusive to the individual license holder and is granted through an annual license subscription.



	ltem no.
Field IQ ISOBUS Configurator (annual license) (You will not be given a login to the software until you attend training.)	3032259106
Service Case ISOBUS (recommended one per dealership) This case includes a fundamental vehicle harness designed to link an ISOBUS job computer to a terminal independently of a tractor. It comes complete with a power supply unit for 230V operation of the basic cable harness. Additionally, the package features a PCAN dongle and various adapter cables for diagnostic purposes. *You will receive two free training registrations when you purchase the Service Case.	30309982

### **TANK-Control**





The	JK-Control (optional for all sprayer control systems) first. number in the article text is the maximum measurement value, while the second number is the overall th of the sensor.	Item no.
	TANK-Control with level sensor 1200/1380	30252003
	TANK-Control with level sensor 1440/1620	30252006
1	TANK-Control with level sensor 1600/1780	30252011
1	TANK-Control with level sensor 1840/2020	30252021
	TANK-Control with level sensor 2080/2260	30252045
	TANK-Control with level sensor 2400/2580	30252051
Acc	essories	ltem no.
2	Connection cable for sensors, with 3-pin AMP socket on junction box available in different cable lengths (is required for connection to the junction box).	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table

### Field-IQ<sup>™</sup> ISOBUS for Sprayer<sup>\*</sup>

\*requires a Field-IQ<sup>™</sup> ISOBUS Configurator tool for configuration





ISC	BUS ECU for sprayers	Item no.
1	Field-IQ™ ISOBUS ECU-MIDI 3.0	75774-20
2	Connector cable ISOBUS ECU, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
3	Universal junction box for ECU-MIDI 3.0, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
Acc	cessories	Item no.
4	Connector cable, primary to secondary ECU, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
5	Sensor X (speed), trailed sprayer, 1 m cable with AMP connector, 12 magnets	30303621
6	GPS speed sensor	30258330
7	Connector cable for sensors, with 3-pin AMP socket on junction box, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
Flo	w meter	Item no.
8	Inline flow meter (Bürkert) DN 20, 10 bar, 7 m cable without connector, 8 - 140 l/min	30244510
0	Inline flow meter (Bürkert) DN 25, 10 bar, 7 m cable without connector, 14 - 220 l/min	30244710
9	Flow meter Polmac 1 <sup>''</sup> Turbo-Flow 30 bar, 7 m cable without connector, 6 - 140 l/min	30244910
Pre	ssure sensor	Item no.
10	Pressure sensor 0 - 16 bar, 1 m cable with AMP connector	30303591
11	Connector cable, 8 m, for sensors, with 3-pin AMP socket to junction box	30303297
12	Accessory bag pressure sensor	31243210
Sin	gle nozzle switching	Item no.
Corr	munication module for Hypro-EDS	3030308533
Ext	ernal operation	Item no.
13	CAN Keypad with accessories	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table



ISC	BUS ECU for orchard/vineyard sprayers	Item no.
1	Field-IQ™ ISOBUS ECU-MIDI 3.0	75774-20
2	Connector cable ISOBUS ECU, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
3	Universal junction box for ECU-MIDI 3.0, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
4	Connector cable, primary to secondary ECU, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
5	Sensor X (speed), trailed sprayer, 1 m cable with AMP connector, 12 magnets	30303621
6	GPS speed sensor	30258330
7	Connector cable for sensors, with 3-pin AMP socket on junction box, available in different cable lengths	see <i>MIDI 3.0 - Standard</i> <i>Components</i> table
8	Universal cable harness orchard/vineyard	3030383002
	Adapter AMP 3-pin to valve connector, 1.5 m	3030383003
9	Adapter AMP 3-pin to valve connector, 3 m	3030383004
	Adapter AMP 3-pin to motorized valve connector	3030383009
Flo	w meter	Item no.
10	Flow meter Polmac 1 <sup></sup> Turbo-Flow 30 bar, 7 m cable without connector, 6 - 140 l/min	30244910
11	Flow meter (Bürkert), Inline DN 20, 10 bar, 7 m cable without connector, 8 - 140 l/min	30244510
11	Flow meter (Bürkert), Inline DN 25, 10 bar, 7 m cable without connector, 14 - 220 I/min	30244710
Pre	ssure sensor	Item no.
12	Pressure sensor 0 - 16 bar, 1 m cable with AMP connector	30303591
13	Pressure sensor, 0 - 50 bar, 1 m cable	312428
TAT	NK-Control	Item no.
14	TANK-Control with fill level sensor, available in different versions	
Hea	adland detection using the GPS compass direction – ISOBUS Weather Station	Item no.
15	Connection of the ISOBUS Weather Station to the ISOBUS	3030247110
16	Connection cable ISOBUS with connection ISOBUS Weather Station, 6.5 m	3030314005
Gap	o detection using ultrasonic sensors	Item no.
	Ultrasonic sensor 130 4 – 20 mA (working area 20 – 130 cm)	3030383006
17	Ultrasonic sensor 340 4 – 20 mA (working area 35 – 340 cm)	3030383007
	Ultrasonic sensor 600 4 – 20 mA (working area 60 – 600 cm)	3030383008
	Extension connection cable ultrasonic sensors, 12 m	31303042
18	Extension connection cable ultrasonic sensors, 16 m	31303045
19	Connection cable ultrasonic sensors to junction box, 20 m	31303050
20	Accessory bag (brackets, mounting material) for 2 ultrasonic sensors	31303051
Ext	ernal operation	Item no.
21	CAN Keypad with accessories	see MIDI 3.0 - Standard

# MIDI 3.0 - Standard components

Cor	nnector cable, ISOBUS ECU	Item no.	
	Connector cable, ISOBUS ECU, 1 m	3030314303	1
	Connector cable, ISOBUS ECU, 2.5 m	3030314603	
	Connector cable, ISOBUS ECU, 4 m	3030314403	
1	Connector cable, ISOBUS ECU, 5.5 m	3030314803	
1	Connector cable, ISOBUS ECU, 6.5 m	3030314003	
	Connector cable, ISOBUS ECU, 8.5 m	3030314203	2
	Connector cable, ISOBUS ECU, 11 m	3030314103	
	Connector cable, ISOBUS ECU, 14 m	3030314703	
Cor	nnector cable, primary to secondary ECU	Item no.	
	Connector cable, primary to secondary ECU, 0.3 m	30322355	
	Connector cable, primary to secondary ECU, 0.6 m	3032235804	3
	Connector cable, primary to secondary ECU, 1.5 m	30322359	
	Connector cable, primary to secondary ECU, 3.2 m	30322358	
2	Connector cable, primary to secondary ECU, 4 m	3032235801	HILL AND
	Connector cable, primary to secondary ECU, 6.5 m	30322357	the for the second seco
	Connector cable, primary to secondary ECU, 8 m	3032235802	1
	Connector cable, primary to secondary ECU, 10 m	30322356	4
	Connector cable, primary to secondary ECU, 14 m	3032235803	
Uni	versal junction box	Item no.	
	Universal junction box for ECU-MIDI 3.0, 0.6 m cable	3032247001	
2	Universal junction box for ECU-MIDI 3.0, 1.5 m cable	3032247501	
3	Universal junction box for ECU-MIDI 3.0, 2 m cable	3032247101	5
	Universal junction box for ECU-MIDI 3.0, 4 m cable	3032247201	
Ser	nsors & accessories	Item no.	
4	GPS speed sensor	30258330	
5	Work position sensor	30303615	

### **AEF** Certified



ME ECUs comply with ISOBUS standard 11783 and are AEF-certified. You can find the current status of the certified functions \* in the AEF database.

subject to change

Stand ard C omponent

Sensors & a ccessories	Item no.	
6 Rotational speed sensor with AMP connector	30303623	6
Connection cable for sensors with 3-pin AMP socket to junction box, 1.10 m	3030329706	
Connection cable for sensors with 3-pin AMP socket to junction box, 2 m	30303294	
Connection cable for sensors with 3-pin AMP socket to junction box, 4 m	30303296	
Connection cable for sensors with 3-pin AMP socket to junction box, 6 m	30303295	7
Connection cable for sensors with 3-pin AMP socket to junction box, 8 m	30303297	
Connection cable for sensors with 3-pin AMP socket to junction box, 10 m	3030329705	
Connection cable for sensors with 3-pin AMP socket to junction box, 12 m	30303298	, and the second s
Connection cable for sensors with 3-pin AMP socket to junction box, 20 m	30303289	
External operation	Item no.	8
		9
	/	
8 CAN Keypad, additional control panel	30303156	10 11
	30303156 3025208030	
9 Flexwire cable to MIDI with Y cable, 6-pin, AMP Extansion cable 6-pin AMP, 3.5 m		
9 Flexwire cable to MIDI with Y cable, 6-pin, AMP Extansion cable 6-pin AMP, 3.5 m	3025208030	10 11 () () () () () () () () () () () () ()
9 Flexwire cable to MIDI with Y cable, 6-pin, AMP 10 Extansion cable 6-pin AMP, 3.5 m Extansion cable 6-pin AMP, 7.5 m	3025208030 3025208035	10 11 () () () () () () () () () ()
9 Flexwire cable to MIDI with Y cable, 6-pin, AMP 10 Extansion cable 6-pin AMP, 3.5 m Extansion cable 6-pin AMP, 7.5 m	3025208030 3025208035 3025208036	10 11 () () () () () () () () () ()

Licenses	item no.
Raven Sidekick Pro	30303074
US.Sen. SECTION Switch	3030383005
Vario-Select License	30303080
NIR Sensor License	30303081

# Spare parts

Sensors	Item no.
Sensor X for drive shaft/wheel, 6 m cable without connector, for junction box, with installation equipment	312580
Inductive sensor 12 mm, 1 m cable with AMP connector, 4 mm switching distance	30303625
Inductive sensor 18 mm, 1 m cable with AMP connector, 8 mm switching distance	30303631
Level sensor, 1 m cable with AMP connector	30303650
Angle sensor 30° with AMP connector, without cable, with boom	30303672
Angle sensor 60° with AMP connector, without cable, with boom	30303673
Angle sensor 120° with AMP connector, without cable, with boom	30303675
Cabling	Item no.
AMP socket, 3-pin, for sensor	31300571
Parts set 3-pin AMP plug	31300561
Connection cable for sensors with 3-pin AMP socket to junction box, 1.10 m	3030329706
Connection cable for sensors with 3-pin AMP socket to junction box, 2 m	30303294
Connection cable for sensors with 3-pin AMP socket to junction box, 4 m	30303296
Connection cable for sensors with 3-pin AMP socket to junction box, 6 m	30303295
Connection cable for sensors with 3-pin AMP socket to junction box, 8 m	30303297
Connection cable for sensors with 3-pin AMP socket to junction box, 10 m	3030329705
Connection cable for sensors with 3-pin AMP socket to junction box, 12 m	30303298
Connection cable for sensors with 3-pin AMP socket to junction box, 20 m	30303289
Extension cable AMP, 3-pin, 6m	30303292
Others	Item no.
P-Can Dongle	32745670
Adapter harness for ISOBUS In-Cab connector	31322591
Adapter harness for Sub-D connection	327360
Service Case	30309980
Service Case ISOBUS	30309982
Contains basic vehicle harness to connect an ISOBUS ECU from Müller-Elektronik to a display without a tractor. A power supply unit is included for operating the basic vehicle harness with 230 V. In addition, a PCAN dongle and various adapter cables for diagnostic purposes are included.	

### **Notes**



Müller-Elektronik GmBH Franz-Kleine-str. 18 . 33154 Salzkotten GERMANY Tel. +49-5258-9834-0 Fax +49-5258-9834-90

### TRIMBLE AGRICULTURE

DIVISION 10368 Westmoor Drive Westminster, CO 80021 USA Tel. +1-720-887-6100 Fax +1-720-887-6101

TRIMBLE INC Corporate Headquarters 10368 Westmoor Drive Westminster, CO 80021 USA Tel. +1 (720) 887-6100

### EUROPE

EUROPE Trimble gmbH Am Prime Parc 11 65479 Raunheim GERMANY Tel. +49-6142-2100-226 Fax +49-6142-2100-140

