


Easy Switch User Manual

Hardware connection

There are two models of Easy Switch:

1. ES1, with a button. The customers can click the button to switch driving mode(Manual / Auto)
2. ES1-F, with a button and a pedal. The customers can click the button or press the pedal to switch driving mode(Manual / Auto)

The wiring diagram is as follows:

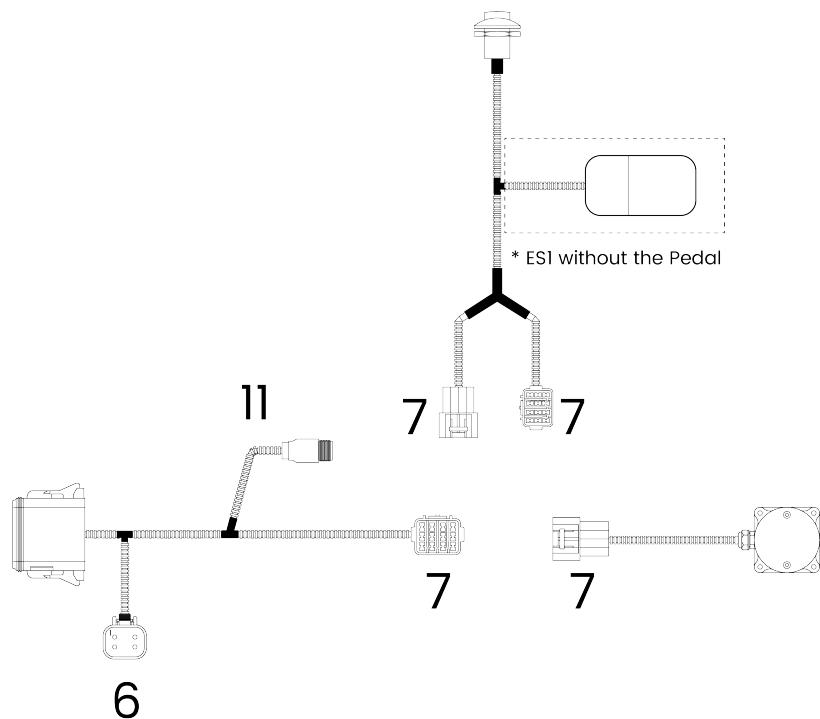


Note:


1. Easy Switch needs to be connected to the 7 connector of spare main wiring harness;
2. When you need to use attitude sensor as well, you can connect the Easy Switch to the 7 connector of spare main wiring harness, then connect the attitude sensor to Easy Switch

Software usage


1. After confirming that the hardware is connected and the network is connected, click on the MENU - APPLICATIONS - Easy Switch, and a page for entering the activation code will pop up.

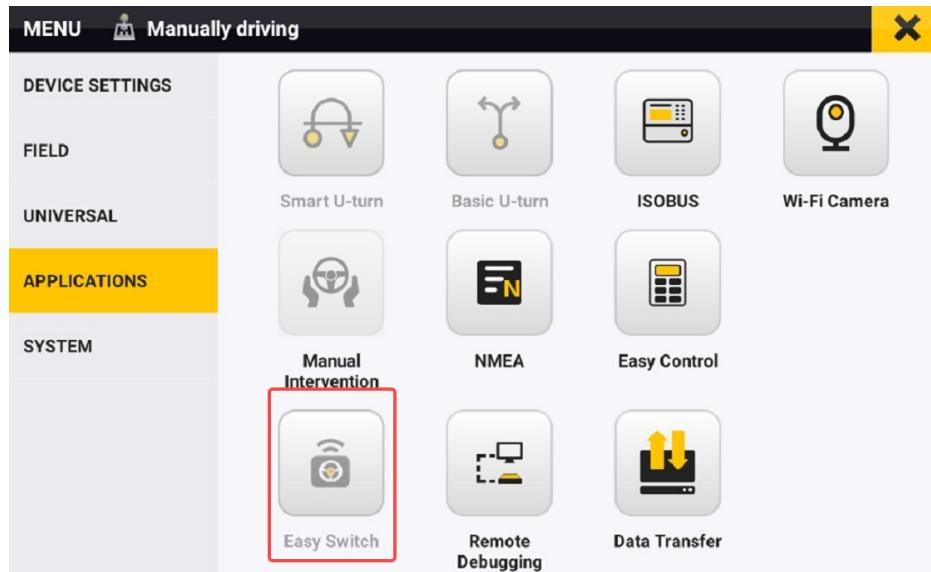


2. Fill in the activation code and click confirm.

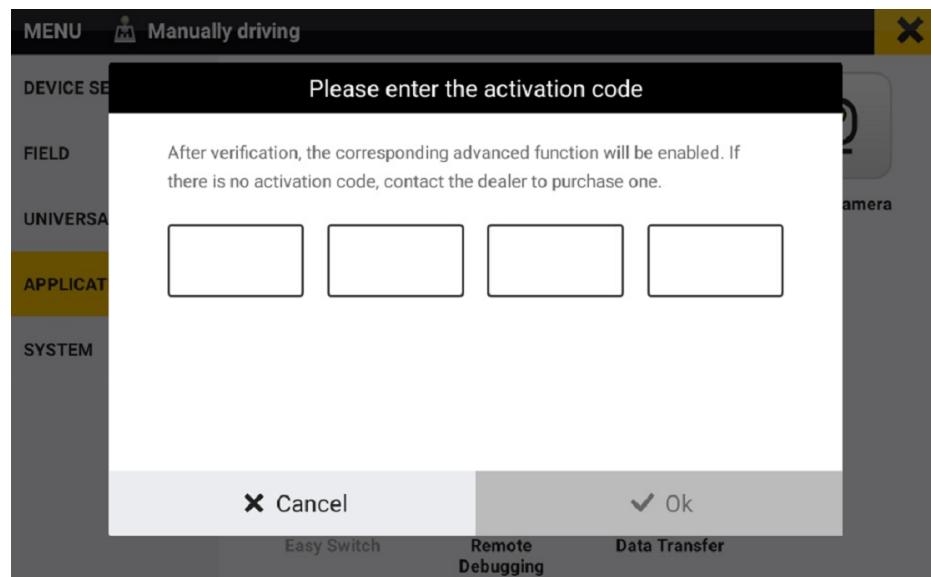

3. Enter the Easy Switch interface and enable the function.

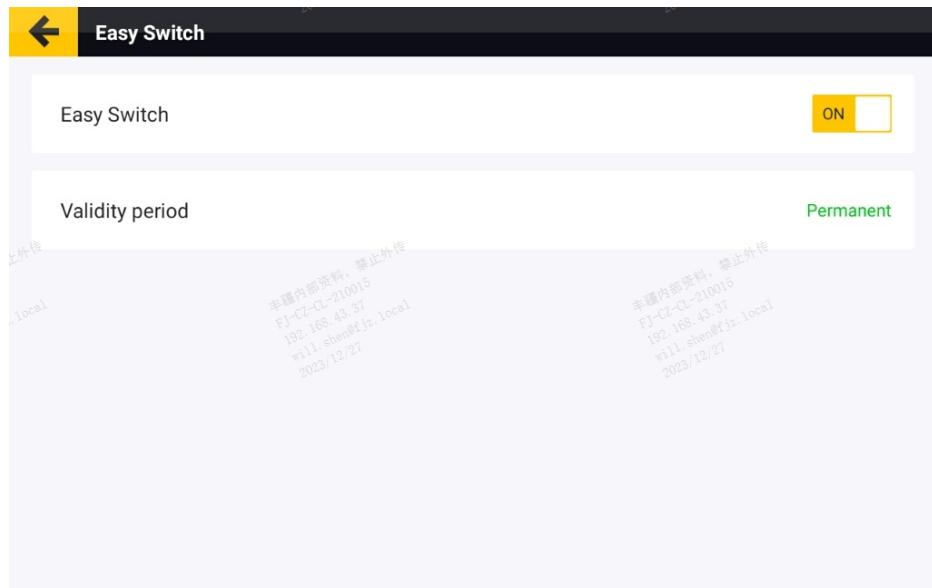

4. Returning to the homepage, when the Easy Switch button is connected and the function is enabled, the button icon will be displayed in the upper left corner.

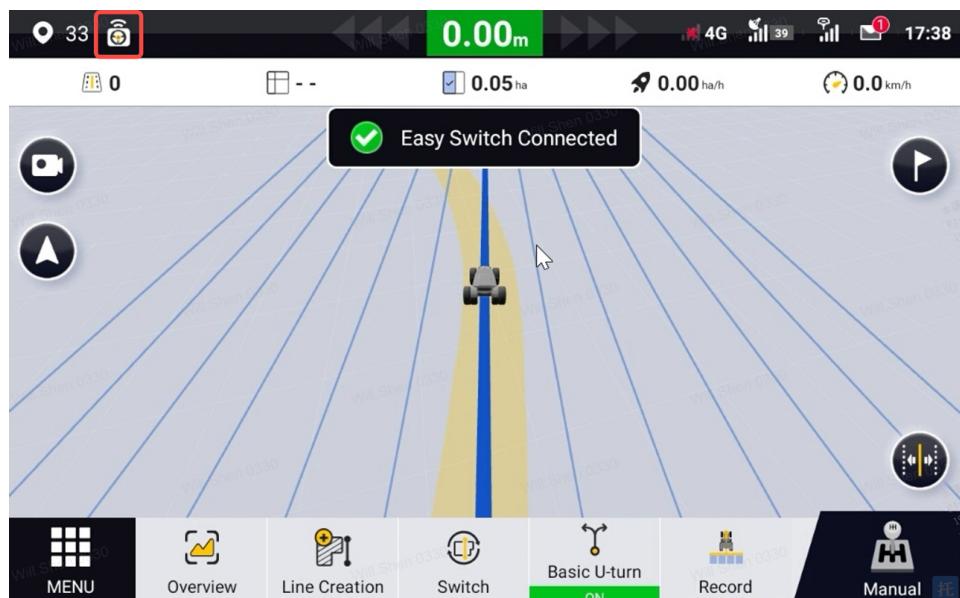

5. Press the hardware button or press the foot pedal to control the automatic/manual driving buttons on the interface.

Note:

1. Please do not plug or unplug the button while the control box is turned on.
2. If the button is pressed and lifted too quickly, it may not respond.
3. Continuous clicks will only respond once.
4. If the user is using the Hall angle sensor or hydraulic pressure sensor when the function is turned on, a prompt will be displayed indicating that Easy Switch cannot be used simultaneously with the current function. Do you want to go to the xx interface to disable the function? (See figure below)

