Autopilot

AUTOMATED STEERING SYSTEM

INSTALLATION INSTRUCTIONS

John Deere Tractors ▶ 5000E

Version 8.00
Revision A
April, 2019
P/N 54035-1165-E08

Trimble

Legal Notices

Agriculture Business Area

Trimble Agriculture Division
10368 Westmoor Drive
Westminster, CO 80021-2712
USA
www.trimble.com

Copyright and Trademarks

©1999–2019, Trimble Inc. All rights reserved.

Trimble, the Globe & Triangle logo, AgGPS, FmX, and OmniSTAR are trademarks of Trimble Inc., registered in the United States and in other countries. Autopilot, AutoSense, CFX-750, GFX-750, and TMX-2050 are trademarks of Trimble Inc. Developed under a License of the European Union and the European Space Agency.

All other trademarks are the property of their respective owners.

Official Language

THE OFFICIAL LANGUAGE OF THESE TERMS AND CONDITIONS IS ENGLISH. IN THE EVENT OF A CONFLICT BETWEEN ENGLISH AND OTHER LANGUAGE VERSIONS, THE ENGLISH LANGUAGE SHALL CONTROL.

Release Notice

This is the April 2019 release (Revision A) of the *Autopilot Automated Steering System Installation Instructions*, part number 54035-1165-E08. It applies to version 8.00 of the Autopilot automated steering system.

The following limited warranties give you specific legal rights. You may have others, which vary from state/jurisdiction to state/jurisdiction.

Product Limited Warranty

Trimble warrants that this Trimble product and its internal components (the "Product") shall be free from defects in materials and workmanship and will substantially conform to Trimble's applicable published specifications for the Product for a period of one (1) year, starting from the earlier of (i) the date of installation, or (ii) six (6) months from the date of product shipment from Trimble. This warranty applies only to the Product if installed by Trimble or a distributor authorized by Trimble to perform Product installation services.

Software Components and Enhancements

All Product software components (sometimes hereinafter also referred to as "Software") are licensed and not sold. Any Software accompanied by a separate End User License Agreement ("EULA") shall be governed by the terms, conditions, restrictions and limited warranty terms of such EULA notwithstanding the preceding paragraph. During the limited warranty period you will be entitled to receive, at no additional charge, such Fix Updates and Minor Updates to the Product software as Trimble may develop for general release, subject to the procedures for delivery to purchasers of Trimble products generally. If you have purchased the Product from an authorized Trimble distributor rather than from Trimble directly, Trimble may, at its option, forward the software Fix Update or Minor Update to the Trimble distributor for final distribution to you. Major Upgrades, new products, or substantially new software releases, as identified by Trimble are expressly excused from this enhancement process and limited warranty. Receipt of software updates shall not serve to extend the limited warranty period.

For purposes of this warranty the following definitions shall apply: (1) "Fix Update" means an error correction or other update created to fix a previous software version that does not substantially conform to its published specifications; (2) "Minor Update" occurs when enhancements are made to current features in a software program; and (3) "Major Upgrade" occurs when significant new features are added to software, or when a new product containing new features replaces the further development of a current product line. Trimble reserves the right to determine, in its sole discretion, what constitutes a significant new feature and Major Upgrade.

Warranty Remedies

Trimble's sole liability and your exclusive remedy under the warranties set forth above shall be, at Trimble's option, to repair or replace any Product that fails to confirm to such warranty ("Nonconforming Product"), and/or issue a cash refund up to the purchase price paid by you for any such Nonconforming Product, excluding costs of installation, upon your return of the Nonconforming Product to Trimble in accordance with Trimble's standard return material authorization process.

Such remedy may include reimbursement of the cost of repairs for damage to third-party equipment onto which the product is installed, if such damage is found to be directly cause by the Product as reasonably determine by Trimble following a root cause analysis. Where *Trimble* elects to replace a Product or parts, repair parts and replacement Products will be provided on an exchange basis and will be either new, equivalent to new, or reconditioned.

Warranty Exclusions and Disclaimer

These warranties shall be applied only in the event and to the extent that (i) the Products and Software are properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's relevant operator's manual and specifications, and; (ii) the Products and Software are not modified or misused. The preceding warranties shall not apply to, and Trimble shall not be responsible for defects or performance problems resulting from (i) the combination or utilization of the Product or Software with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Trimble; (ii) the operation of the Product or Software under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized, installation, modification, or use of the Product or Software; (iv) damage caused by accident, lightning or other electrical discharge, fresh or salt water immersion or spray; or (v) normal wear and tear on consumable parts (e.g., batteries). Trimble does not warrant or guarantee the results obtained through the use of the Product.

THE WARRANTIES ABOVE STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO PERFORMANCE OF THE PRODUCTS AND SOFTWARE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND BY EITHER TRIMBLE NAVIGATION LIMITED OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCTS OR SOFTWARE. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
TRIMBLE NAVIGATION LIMITED IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF GPS SATELLITES OR THE AVAILABILITY OF GPS SATELLITE SIGNALS.

Limitation of Liability

TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT OR SOFTWARE LICENSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANY

WAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS), REGARDLESS WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. NOTE: THE ABOVE LIMITED WARRANTY PROVISIONS MAY NOT APPLY TO PRODUCTS OR SOFTWARE PURCHASED IN THE EUROPEAN UNION. PLEASE CONTACT YOUR TRIMBLE DEALER FOR APPLICABLE WARRANTY INFORMATION.

Notices

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

Notice to Our European Union Customers

For product recycling instructions and more information, please go to: http://www.trimble.com/Corporate/Environmental_Compliance.aspx

Recycling in Europe: To recycle Trimble WEEE, Call +31 497 53 2430, and ask for the "WEEE Associate"

Or

Mail a request for recycling instructions to:

Trimble Europe BV
c/o Menlo Worldwide Logistics
Meerheide 45
5521 DZ Eersel, NL



Safety Information

Always follow the instructions that accompany a Warning or Caution. The information they provide is intended to minimize the risk of personal injury and/or damage to property. In particular, observe safety instructions that are presented in the following format:

⚠ **WARNING –** This alert warns of a potential hazard, which, if not avoided, can cause severe injury.

⚠ **CAUTION –** This alert warns of a hazard or unsafe practice which, if not avoided, can cause injury or damage.

NOTE – An absence of specific alerts does not mean that there are no safety risks involved.

Warnings

⚠ **WARNING –** When you are working on the vehicle's hydraulic systems, vehicle attachments that are suspended can drop. If you are working around the vehicle, you could suffer serious injury if an attachment dropped on you. To avoid this risk, lower all vehicle attachments to the ground before you begin work.

⚠ **WARNING –** If someone else attempts to drive the vehicle while you are working on or under it, you can suffer serious or fatal injuries. To avoid this possibility, install a lockout box on the battery terminal to prevent the battery from being reconnected, remove the key from the vehicle's ignition switch, and attach a "Do not operate" tag in the cab.

⚠ **WARNING –** Agricultural chemicals can pose serious health risks. If the vehicle has been used to apply agricultural chemicals, steam clean the vehicle to remove any chemical residue from the areas of the vehicle where you will be working.

⚠ **WARNING –** Vehicle cabs can be quite high in the air. To avoid potentially serious injury through falling from this height, always use the steps and handrails, and face the vehicle, when you enter or exit it.

Cautions

⚠ **CAUTION –** When the vehicle has been running, parts of the vehicle, including the engine and exhaust, can become extremely hot and can cause serious burns. To avoid burns, allow hot machine parts to cool before you begin working on them.

⚠ **CAUTION –** The system installation may bring you into contact with chemical substances, such as oil, which can cause poisoning. Wash your hands thoroughly after you finish working on the system.

⚠ **CAUTION –** Battery posts, terminals, and related accessories contain lead and lead compounds, which can cause serious illness. To avoid ingesting lead, wash your hands thoroughly after touching the battery.

⚠ **CAUTION –** Always wear protective equipment appropriate to the job conditions and the nature of the vehicle. This includes wearing protective glasses when you use pressurized air or water, and correct protective welder's clothing when welding. Avoid wearing loose clothing or jewelry that can catch on machine parts or tools.

⚠ **CAUTION –** Parts of the vehicle may be under pressure. To avoid injury from pressurized parts, relieve all pressure in oil, air, and water systems before you disconnect any lines, fittings, or related items. To avoid being sprayed by pressurized liquids, hold a rag over fill caps, breathers, or hose connections when you remove them. Do not use your bare hands to check for hydraulic leaks. Use a board or cardboard instead.


⚠ **CAUTION –** Do not direct pressurized water at:
- Electronic or electrical components or connectors
- Bearings
- Hydraulic seals
- Fuel injection pumps
- Any other sensitive parts or components



Set the hose pressure as low as practicable, and spray at a 45° to 90° angle. Keep the nozzle of the power washer away from the machine at the distance recommended by the manufacturer.

⚠ **CAUTION –** To prevent damage to the system, make sure that no wires or hoses interfere with or catch on any mechanical linkages, or contact any machine parts that get hot.

⚠ **CAUTION –** If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example.
Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

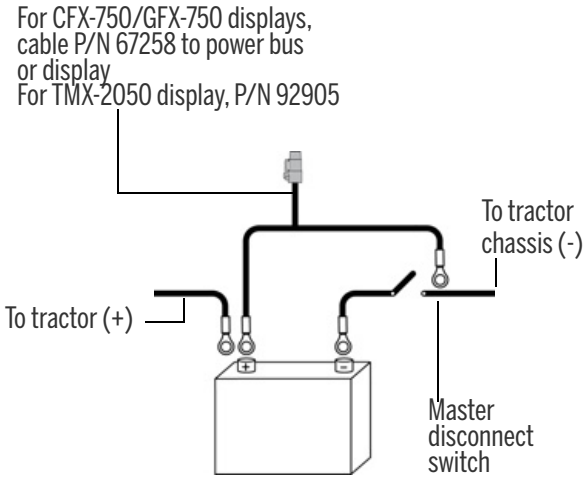

Contents

Legal Notices 2

Safety Information. 4

Warnings. 4

Cautions 5

1 Introduction. 10

Technical assistance. 10

Manual system upgrade to Autopilot. 11

Displays 11

Required components 11

Antenna mounting kits 11

Accessory kits 11

Autopilot hardware organization: As shipped 12

Preparing the vehicle for installation 13

2 Hydraulic Control Valve Installation 14

Hydraulic system components 15

Assembling the hydraulic control valve 16

Connecting the manual override pressure transducer to the H4 manifold 16

Mounting the hydraulic manifold 22

Connecting the hydraulic lines 23

Machine hydraulic connections. 23

Connecting the Autopilot manifold. 27

Checking the hydraulics 29

3 IMD-900/AutoSense Steering Device Installation 30

IMD-900/AutoSense steering device components 31

Installing the IMD-900 steering device 32

Connecting the IMD-900 harness to the 54602 harness 34

4 Antenna / External Receiver (if used) Installation 35

Antenna and receiver installation options 35

Possible mounting methods 36

Mounting an adjustable spar to roof bolts. 36

Attaching the plate with VHB adhesive 39

Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor 41

AG-372 receiver with AgGPS 450/900 radio module (if equipped) components 45

Installing the AG-372 GPS receiver with AgGPS 450/900 radio module (if equipped) 46

Removable installation 46

Permanent installation 47

Installing an AG-372 receiver with magnetic feet 52

AgGPS 542 receiver components . . . 54
Installing the AgGPS 542 receiver . . . 55

5 Display Installation . . . 58
CFX-750 display: Components . . . 59
CFX-750 display: Preparation . . . 60
CFX-750 display: Installation. . . . 61
CFX-750 display: Installing the wiring harness . . . 61
TMX-2050 display: Components . . . 62
TMX-2050 display: Preparation . . . 63
Installing the display and mount . . . 63
TMX-2050 display: Installing the wiring harness . . . 66
TMX-2050 display: AG-25 GNSS antenna. . . . 69
CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate . . . 70
Spar mount method . . . 70
VHB adhesive method . . . 70
CFX-750 and TMX-2050 displays: Installing the RTK radio antenna . . . 74
GFX-750/XCN-1050 display: Components . . . 76
GFX-750/XCN-1050 display: Preparation . . . 77
GFX-750/XCN-1050 display: Installation . . . 78
GFX-750/XCN-1050 display: Installing the wiring harness . . . 80

6 Power Harness Installation . . . 82
CFX-750 display: Components . . . 83
GFX-750/XCN-1050 display: Components . . . 85
CFX-750 and GFX-750 displays: Installing the power harness . . . 86
CFX-750 and GFX-750 displays: Configuring the power bus options . . . 88
Display power button is used to turn on the Autopilot system . . . 88
External switch is used to turn on the Autopilot system . . . 88
Ignition is used to turn on the Autopilot system . . . 90
TMX-2050 display: Components . . . 91
TMX-2050 display: Installing the power harness . . . 92
TMX-2050 display: Configuring the power options . . . 94
Ignition sensing . . . 94

7 Remote Engage Switch Installation . . . 96
Remote engage switch components: Rocker switch . . . 97
Remote engage switch components: Foot switch . . . 98
Preparing the remote engage cable . . . 99
Installing the Remote Engage push button (P/N 101250) . . . 102
Using the remote engage switch . . . 107

8 Controller Installation . . . 108
Installing the controller . . . 108
Controller connections . . . 111

9 Isolation Models Setup Instructions 114
Connecting the isolation solenoid cable 115
Isolation manifold power connection (available only with NavController III) 115
Configuring the NavController III to turn on the electronic isolation manifold 120
Setting the load sense relief pressure 122
Preparing to set the relief pressure 122
Adjusting the isolation manifold pressure reducing valve (PRV) 124
10 Final Machine Check 125

1

Introduction

- Technical assistance
- Manual system upgrade to Autopilot
- Autopilot hardware organization: As shipped
- Preparing the vehicle for installation

This manual describes how to install the Trimble® Autopilot™ automated steering system.

Even if you have used another GNSS (Global Navigation Satellite System), such as the United States' GPS (Global Positioning System), before, spend some time reading this manual to learn about the special features of this product. If you are not familiar with GNSS, go to the Trimble website (www.trimble.com) for an interactive look at Trimble and GNSS.

Technical assistance

If you have a problem and cannot find the information you need in the product documentation, contact Trimble technical support:

1. Log into http://agpartners.trimble.com.
2. Click the Feedback link at the right of the screen. A form appears.
3. Complete the form and then click **Submit Feedback**.

Manual system upgrade to Autopilot

Displays

Retain
TMX-2050™ display: P/N 96500-xx
CFX-750™ display: P/N 94110-xx
Antenna to receiver cable: P/N 50449
Power cable: P/N 67258 & 66694
GFX-750™/XCN-1050: P/N 121000-XX
Power cable GFX-750/XCN-1050: P/N 110551
Base power cable: P/N 67258
NAV-900 guidance controller: P/N 108993-05
GFX-750 to NAV-900 Comms cable: P/N 110540

Required components

Kits required	Special tools
Platform kit: P/N 54035-1165	Drill
Hydraulic hose kit: 81146-2000	$^{5}/_{16}$" drill bit
TMX-2050/CFX-750 display installs: P/N 64425-07	$^{3}/_{8}$-16 tap
GFX-750 display installs: P/N 64425-08	2" hole saw

Antenna mounting kits

Kits required
Antenna brackets: - Ag15 antenna mounting plate: P/N 62034 - Bracket, GPS - V Base plate indexing: P/N 62388-02
John Deere quick release: P/N 84804
Antenna V plate mount and AgGPS 262/AG-372 receiver magnetic mount: P/N 62388-01 (includes magnets for quick release of the AgGPS 262/AG-372 receiver – see Chapter 4, Antenna / External Receiver (if used) Installation).

Accessory kits

Kits required
Remote engage switch assembly – standard Euro: P/N 57227-10
Remote engage switch assembly – full Euro: P/N 57227-20
Remote engage foot pedal: P/N 57259
Remote engage push button: P/N 101250

Autopilot hardware organization: As shipped

Hardware	Component	See...
Platform kit: P/N 54035-1165	Hydraulic valve	Chapter 2
	Hydraulic manifold	
	Transducer flow switch	
	Manual override cable	
	Hydraulic brackets and bolt kits	
	Hydraulic valve cable	
	AutoSense™ steering device and cabling	Chapter 3
	AutoSense mounting bracket and hardware	
	Power switch	Chapter 6
	Bolt kit controller	Chapter 8
Hydraulic hose kit: • P/N 81146-2000	Hydraulic hoses	Chapter 2
	Hydraulic adaptors	
Antenna kits: • Ag15 antenna mounting plate (included with CFX-750 display): P/N 62034 • Bracket, GPS - V Base Plate indexing: P/N 62388-02	Roof brackets	Chapter 4
	Bolt kit, roof bracket	
GNSS receiver	GNSS receiver	Chapter 4
	GNSS antenna	
	GNSS receiver power/data cable	
	RTK radio, cable, and radio antenna	
Display	CFX-750, GFX-750, TMX-2050 display	Chapter 5
	Display cable	
	Mounting bracket	
Common parts	Controller	Chapter 8
	Controller mounting bracket	
	Cable kit: Main wiring harness Power bus auxiliary wiring harness Sonalert alarm	

Preparing the vehicle for installation

NOTE – The left and right sides of the vehicle are referenced while standing behind the unit, facing the normal direction of travel.


1. Park the vehicle on a hard, level surface. Block the front and rear wheels.
2. Align the steering straight ahead. On an articulated vehicle, install the articulation locks.
3. Remove all dirt and debris from the areas of the vehicle where the Autopilot system will be installed.
4. Open all kit boxes and check the contents of the box against the packing list/s. Lay all of the parts out on a clean workbench.

2

Hydraulic Control Valve Installation

- Hydraulic system components
- Assembling the hydraulic control valve
- Mounting the hydraulic manifold
- Connecting the hydraulic lines
- Checking the hydraulics

Hydraulic system components

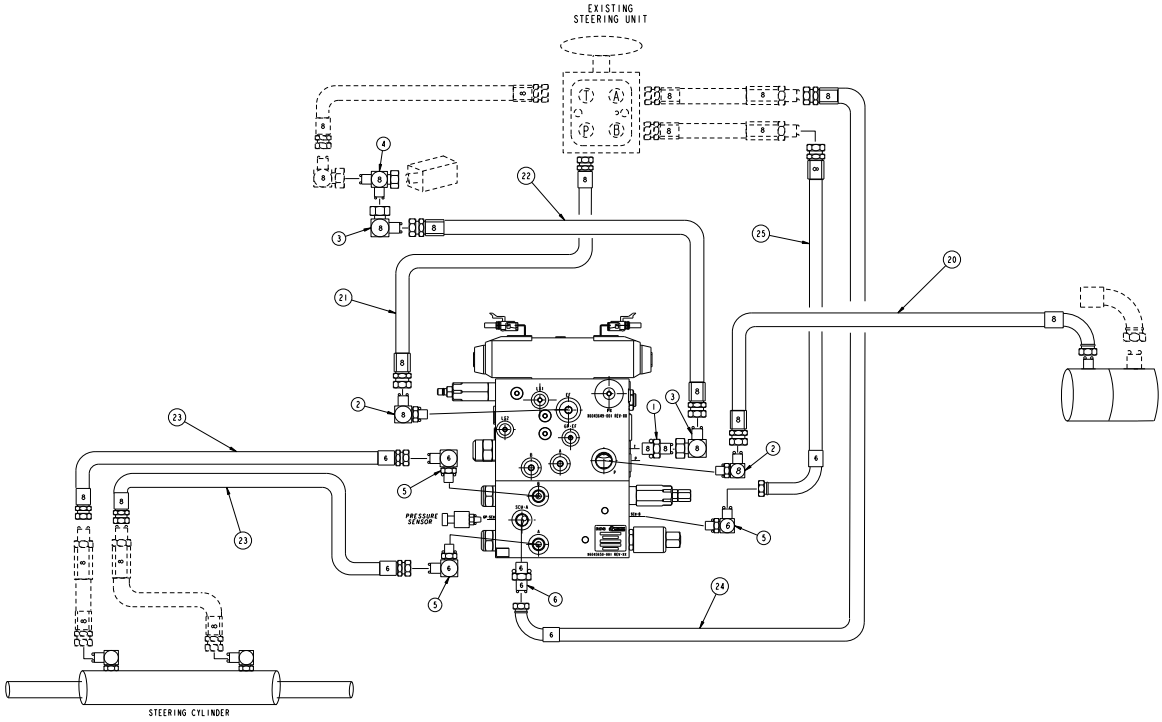

Fittings

Item	Part number	Quantity
1	8 F50LO	1
2	8 C50LO	2
3	8 C60LO	2
4	8 R6LO	1
5	6 C50LO	3
6	6 F50LO	1

Hoses

Item	Length (Inches)	Part number	Line	Quantity
20	45'' (115 cm)	451TCJSJ9-08-08-08-45"	P	1
21	25'' (84 cm)	451TCJSJS-08-08-08-25"	EF	1
22	40'' (102 cm)	451TCJSJS-08-08-08-40"	T	1
23	16'' (41 cm)	451 TCJSJS-08-06-06-16"	A, B	2
24	28'' (72 cm)	451TCJSJ9-08-06-06-28''	SCU-A	1
25	28'' (72 cm)	451TCJSJI-08-06-06-28''	SCU-B	1

NOTE – Part numbers are Parker numbers and are for reference only.

Assembling the hydraulic control valve

Connecting the manual override pressure transducer to the H4 manifold

If the reaction / isolation block is present, the GP-SCU port should be used for the manual override pressure transducer.

If the isolation valve is not present, the manual override pressure transducer may be installed in either the PX ports or the GP-EF port.



With the isolation block present, the manual override pressure transducer is installed into the GP-SCU port as shown.




Step 1

Configure the manifold for open center applications.

For open center the EF plug is removed and the EF hose is connected.


Locate and remove the orifice plug from its parking location shown here.

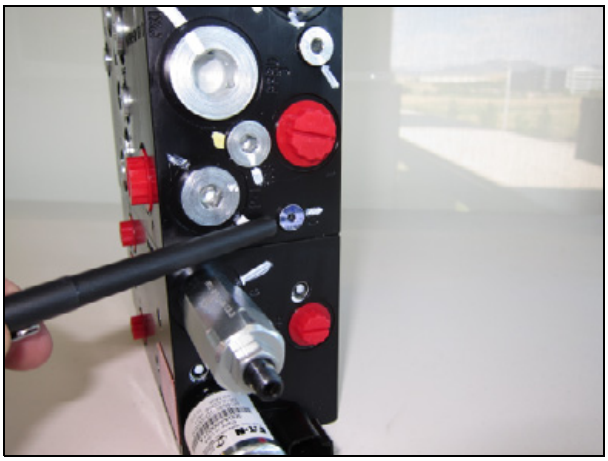


Step 2

Remove the plug from the 18B location (shown).


The orifice plug should be installed behind this plug.

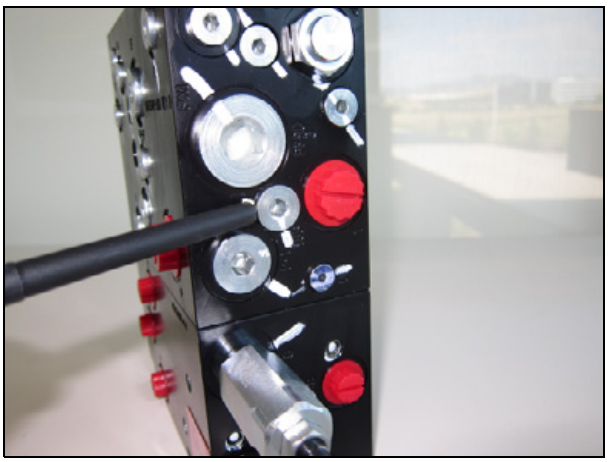

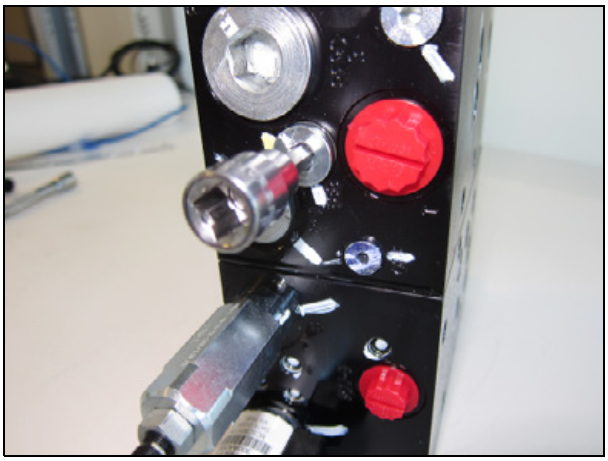


Step 3

Remove the solid plug located behind the 18B plug previously removed.

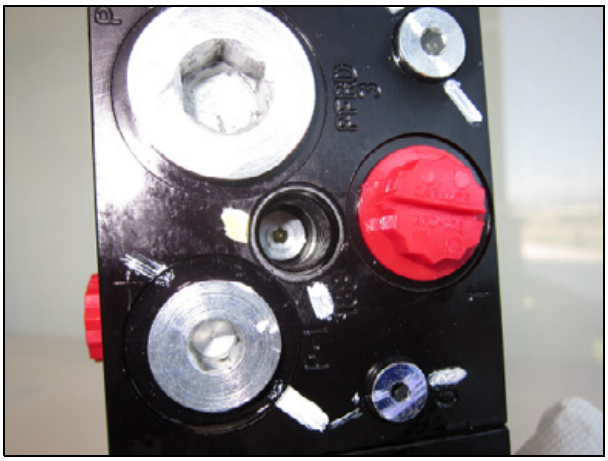

Step 4

Install the orifice plug in the location behind the 18B plug.

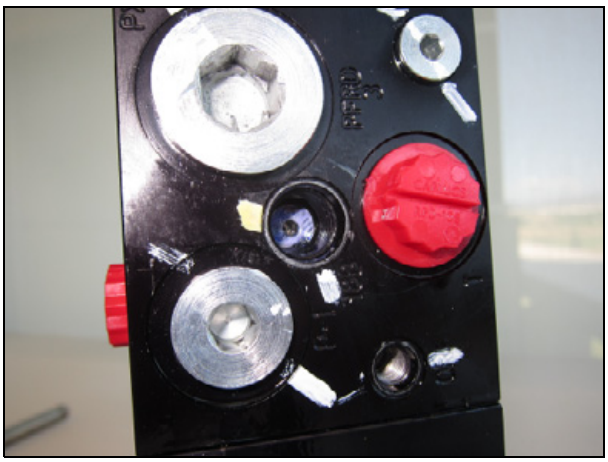


The solid plug may be stored in the parking location.



Step 5


The PFRD cartridge is used as a priority flow cartridge in open center application with an EF hose connected to the manifold.

TIP – Tapping on the plug with a hammer can make the plug easier to loosen.

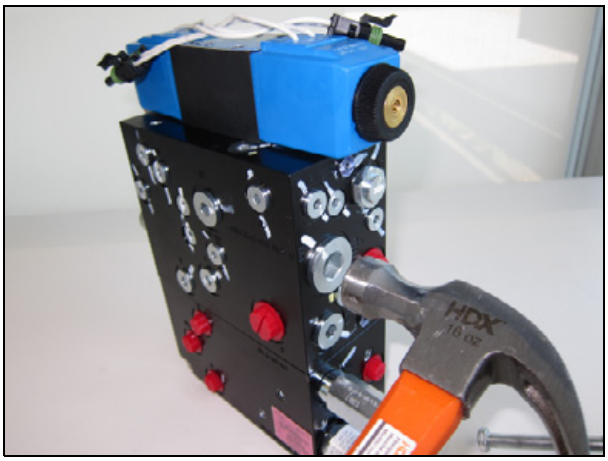

Step 6


Remove the plug from the PFRD port.

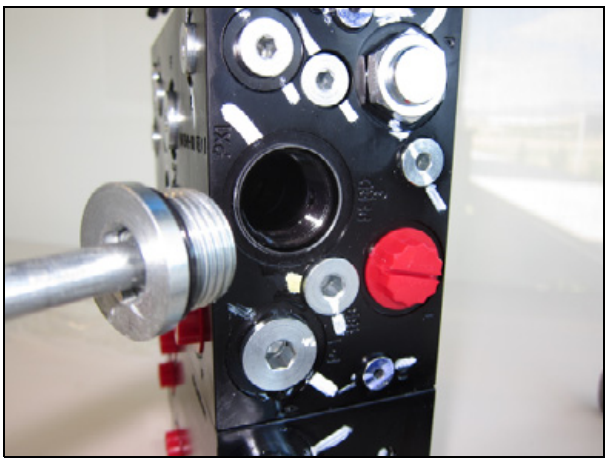

Step 7


Install the PFRD cartridge as shown here.

- 110 PSI PFRD, Trimble P/N 66113

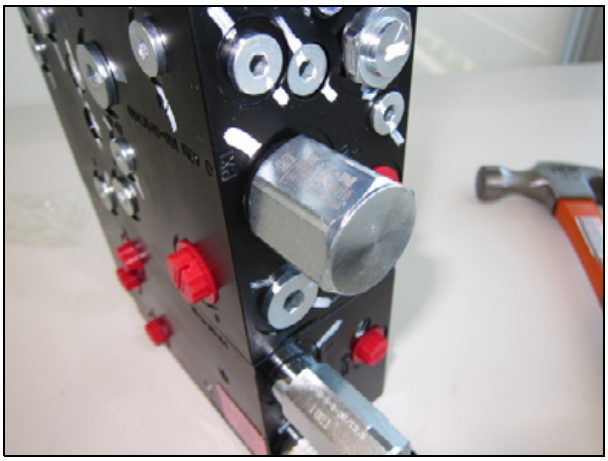


Step 8

Assemble an -08 ORB-ORF 90° fitting into the P and EF ports as shown.

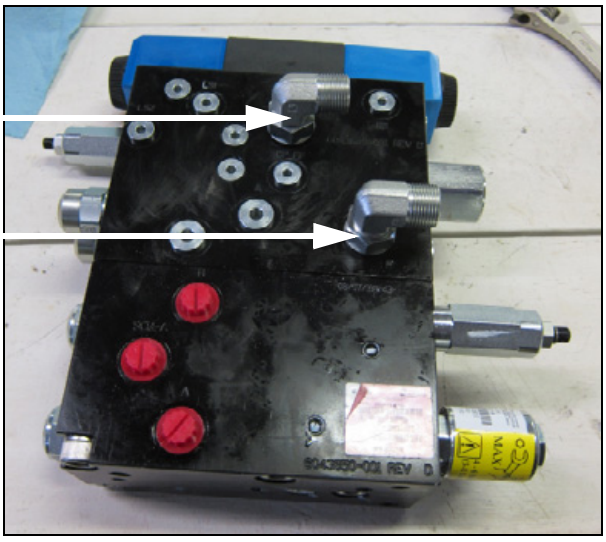


Step 9

Assemble an -06 ORB-ORF 90° fitting into the A and B ports as shown.

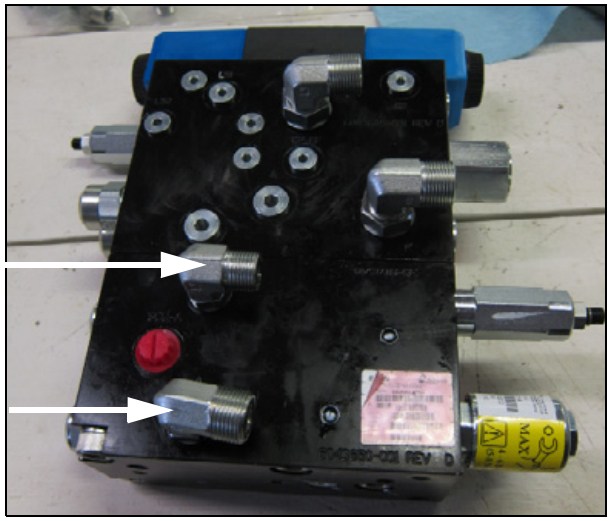


Step 10

Assemble an -06 ORB-ORF straight fitting into the SCU-A port as shown.

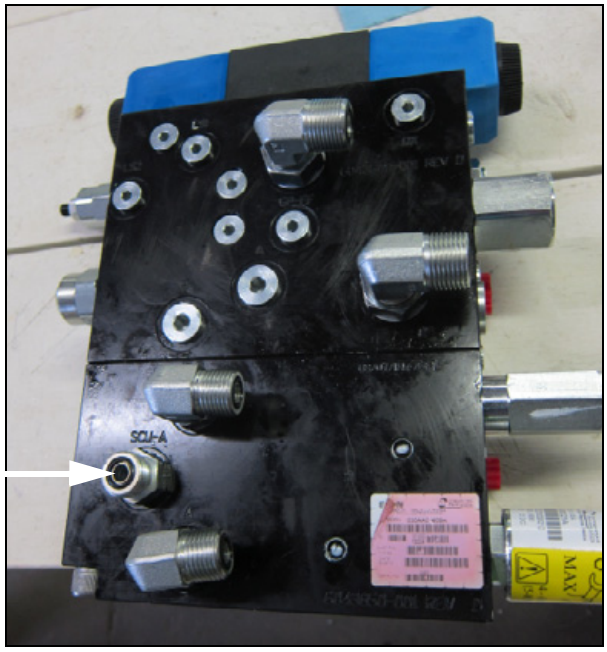


Step 11

Assemble an -06 ORB-ORF 90° fitting into the SCU-B port as shown.

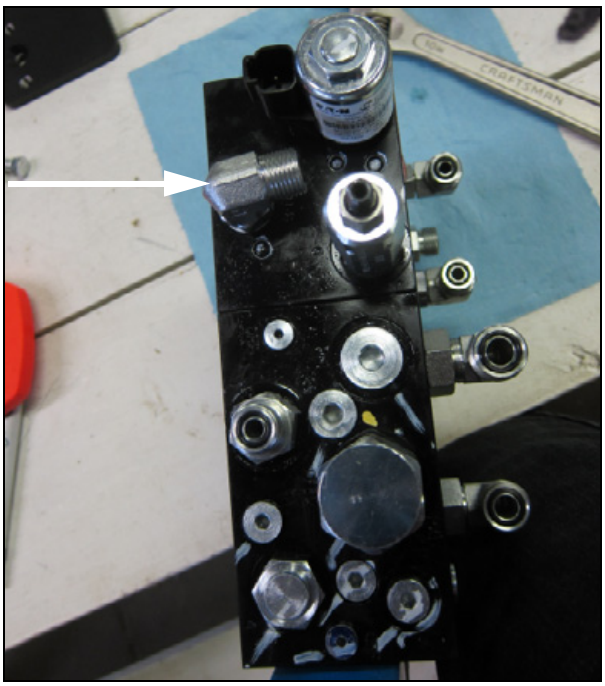

Step 12

Assemble an -08 ORB-ORF straight fitting into the T port as shown.

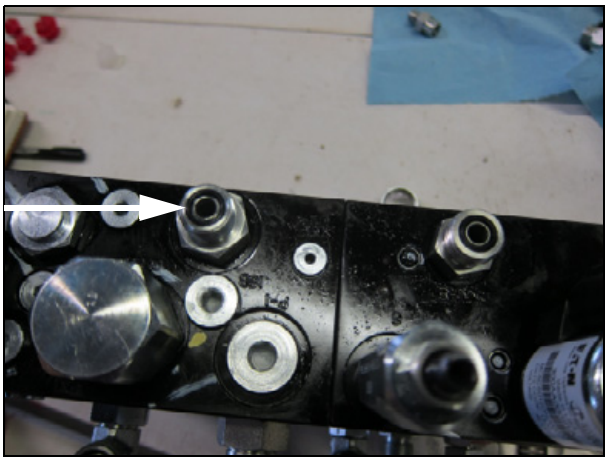

Mounting the hydraulic manifold

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.


Step 1

Locate the two bolt holes just below and in front of the cab on the left side.




Step 2

Attach the bracket to the machine using the provided M20 bolts.

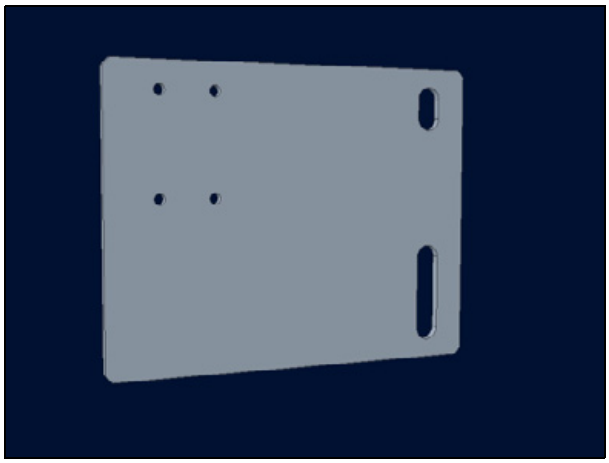

Step 3

Attach the manifold to the bracket using the provided 3/8" bolts as shown.

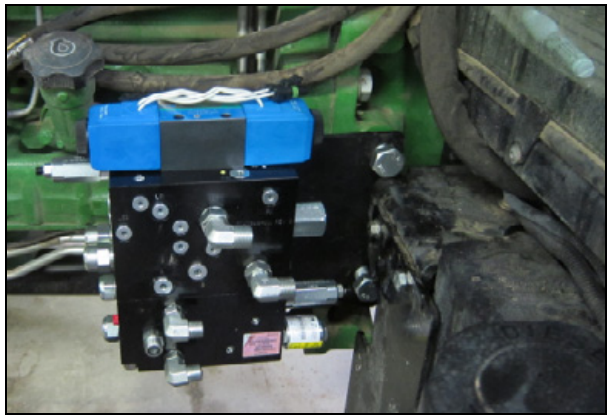

Connecting the hydraulic lines


Machine hydraulic connections

Pressure and EF line connections

Step 1

Locate the Pressure connection on the right side of the machine. Remove the machine line from the pump and the hand pump.


Connect the provided P line to the pressure port on the machine and then route the hose to the manifold.

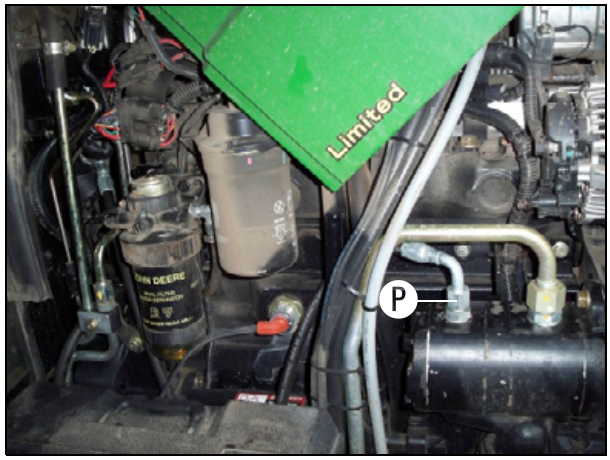

Step 2


Connect the provided EF line to the P port of the hand-pump (the pressure line was removed from this port in the previous step).



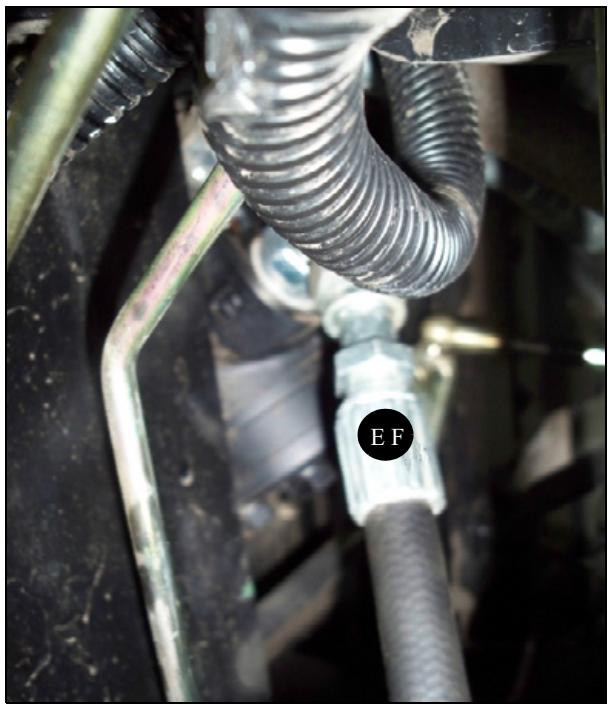


Tank line connection

Connect the Autopilot tank line to the machine tank line near the steering hand pump, as shown.

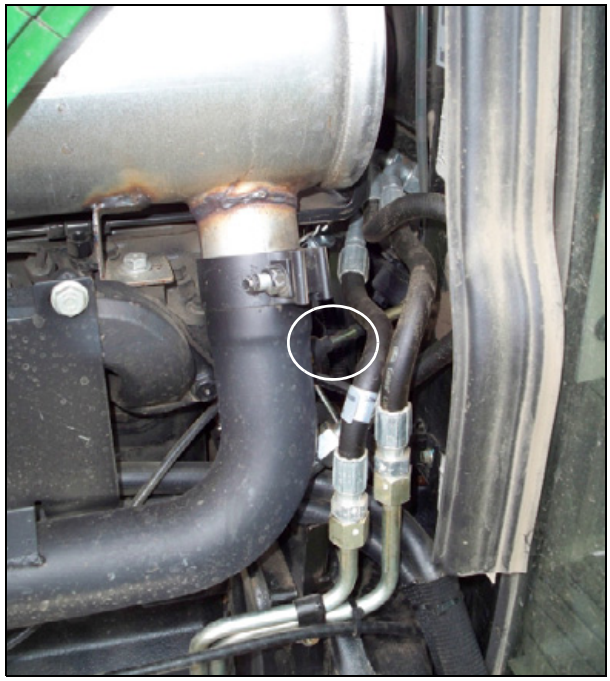

Step 1


Locate the machine's tank line that runs near the engine ❶. Remove the tank line and then install a -8 run tee fitting on the line.

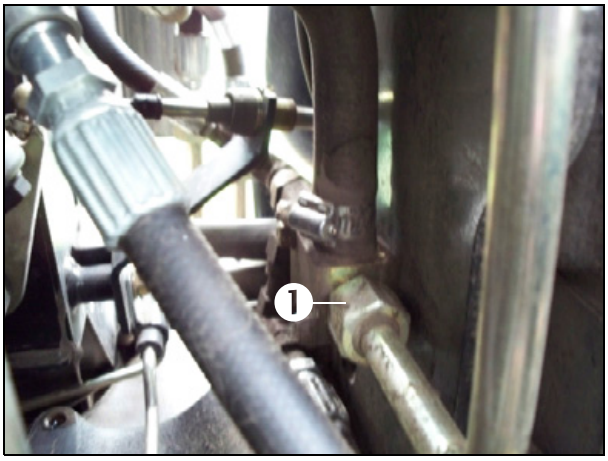

Step 2


Use a -8 swivel 90° fitting ❶ to attach the Autopilot tank line to the branch ❷ of the -8 run tee fitting.

NOTE – Make sure that the lines do not contact any moving parts on the machine.

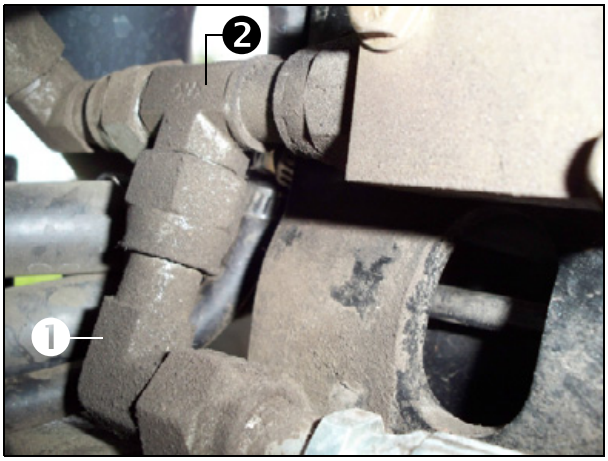

Step 3

Connect the machine's tank line to the *end* of the -8 run tee fitting ❶.

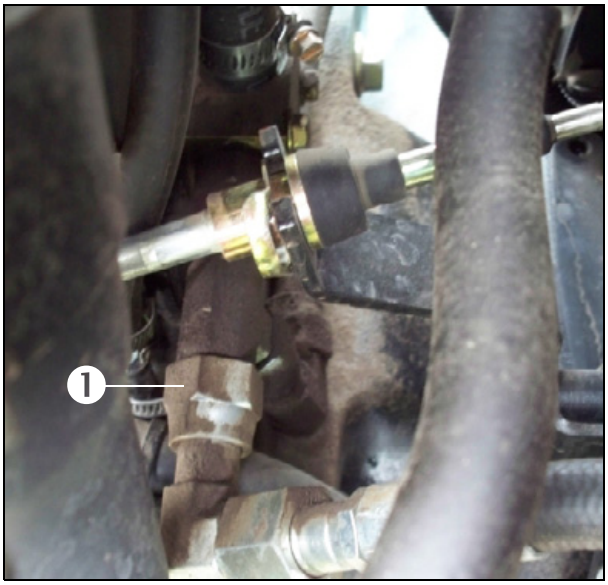


A and B lines connections

Step 1

Label the steering line that connects to the left side of the steering cylinder "A", and the line that connects to the right side of the cylinder "B'.

Disconnect the soft lines from the machine hardlines.


Connect the provided A and B hoses to the machine lines going to the steering cylinder.

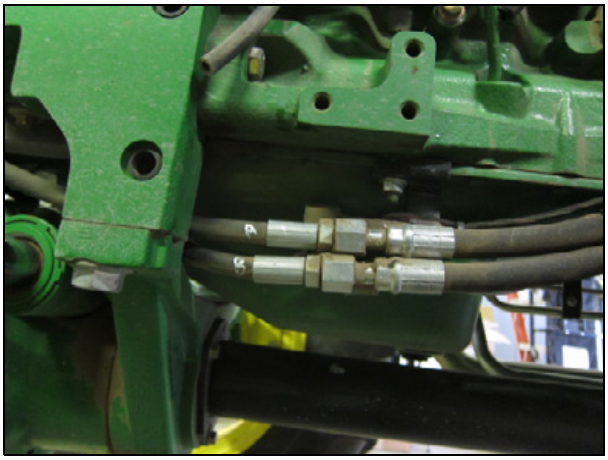

SCU-A and SCU-B lines connections

Step 1

Label the steering lines that connect to the steering orbital "SCU-A" and "SCU-B", corresponding to the labels in "A and B line Connections", Step 1.

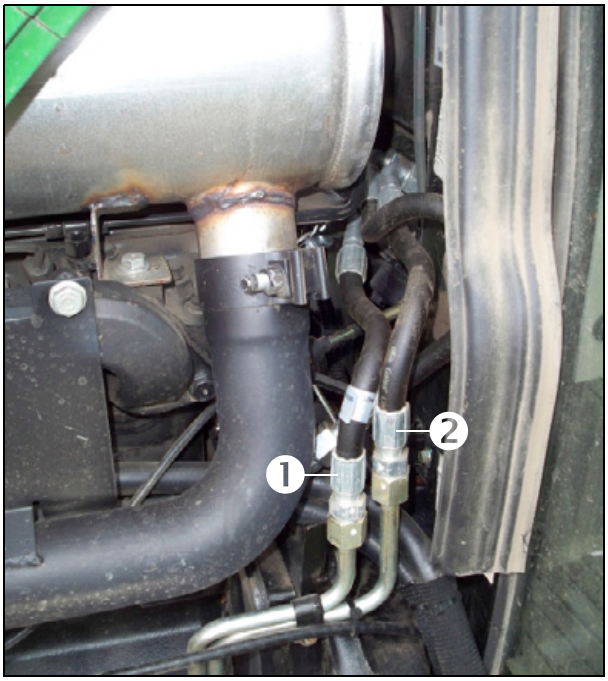

Step 2

Connect the provided SCU-A and SCU-B hoses to the machine lines going to the steering pump.




Connecting the Autopilot manifold

Make sure all of the lines are routed so they are not pinched or pulled and do not contact any moving parts on the machine.

Pressure and EF line connections

Step 1


Connect the P hose to the P port on the manifold.

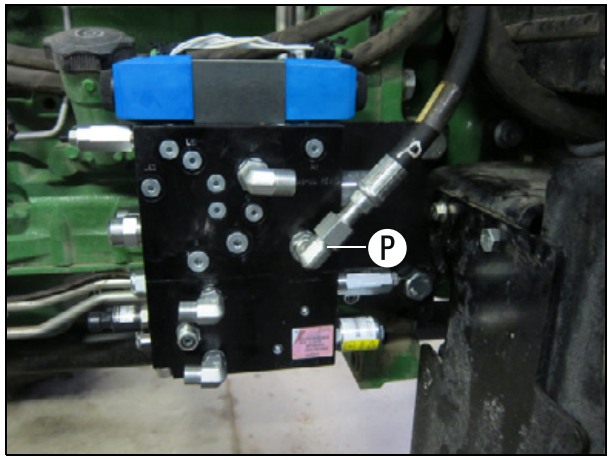

Step 2

Connect the EF hose to the EF port on the manifold.


NOTE – Pictured hose routing may be different.

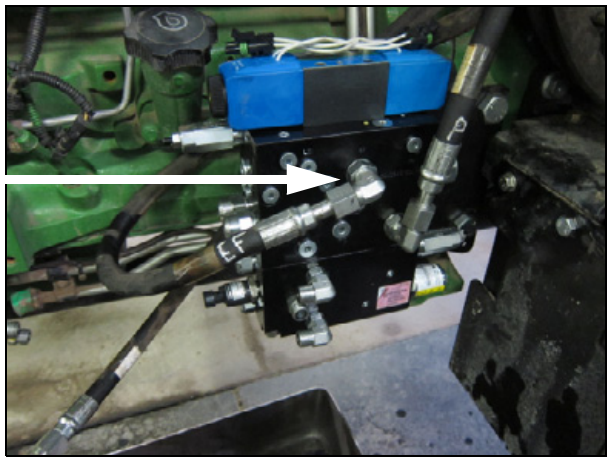

Tank line connection


Connect the T hose to a -08 Swivel 90° attached to the T port on the manifold.

NOTE – Pictured hose routing may be different.

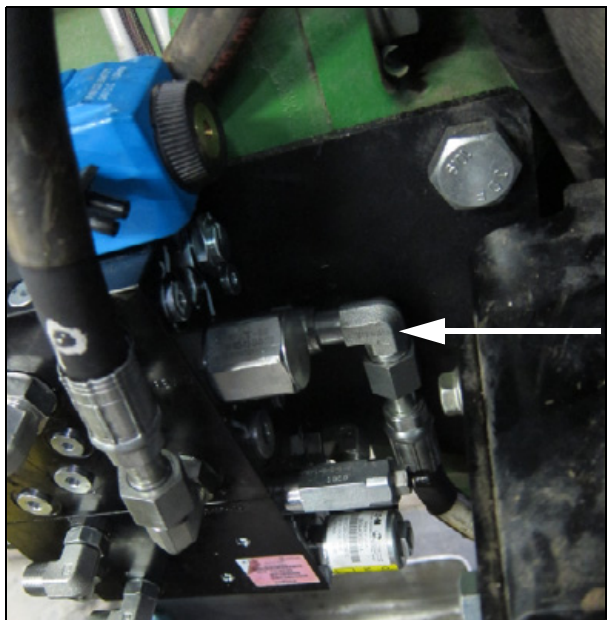


SCU-A and SCU-B connection

Connect the SCU-A and SCU-B hoses to the manifold in the SCU-A and SCU-B ports.

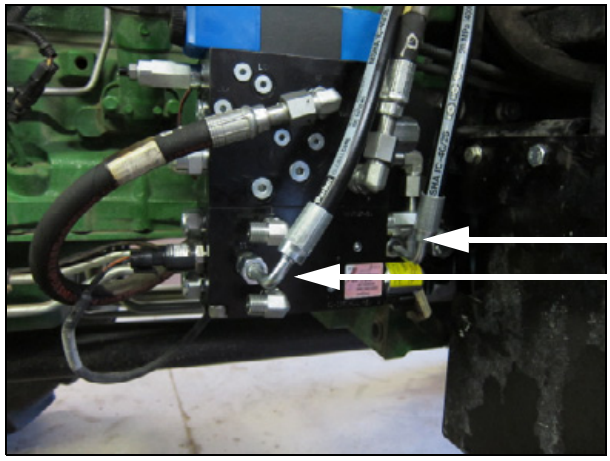

A and B line connection

Connect the A and B hoses to the manifold in the A and B ports.

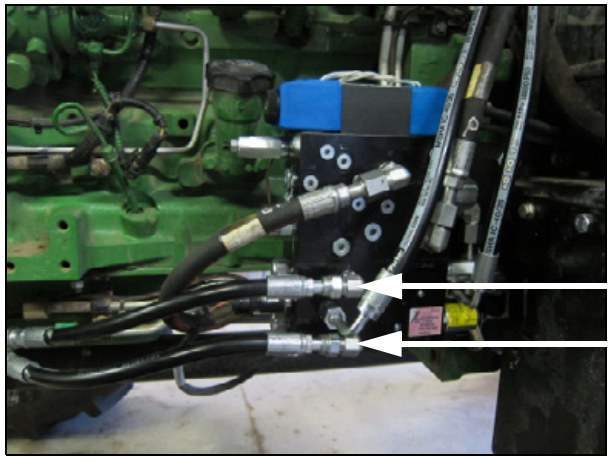

Checking the hydraulics

1. Make sure that all the hydraulic connections are tight.
2. Check the oil level in the hydraulic tank. If necessary, top it up.
3. Check for hydraulic leaks. Connect the battery and then start the machine. Once you complete the leak check, disconnect the battery.

3

IMD-900/AutoSense Steering Device Installation

- IMD-900/AutoSense steering device components
- Installing the IMD-900 steering device
- Connecting the IMD-900 harness to the 54602 harness

This chapter describes how to install the *Ag*GPS AutoSense™ steering device.


If the described mounting location is not accessible, chose a different place. To ensure proper function, the AutoSense device must be located where it is free of obstructions and can rotate with the wheels when they turn.

On articulated vehicles, mount the AutoSense device on the opposite side of the pivot point to the Autopilot controller.

Mount the device base down or base up so that it maintains a level orientation. Do not mount it on its side. An angle of up to 10° in any direction is acceptable.

To avoid stretching the cable, leave adequate length on the service loop.

IMD-900/AutoSense steering device components

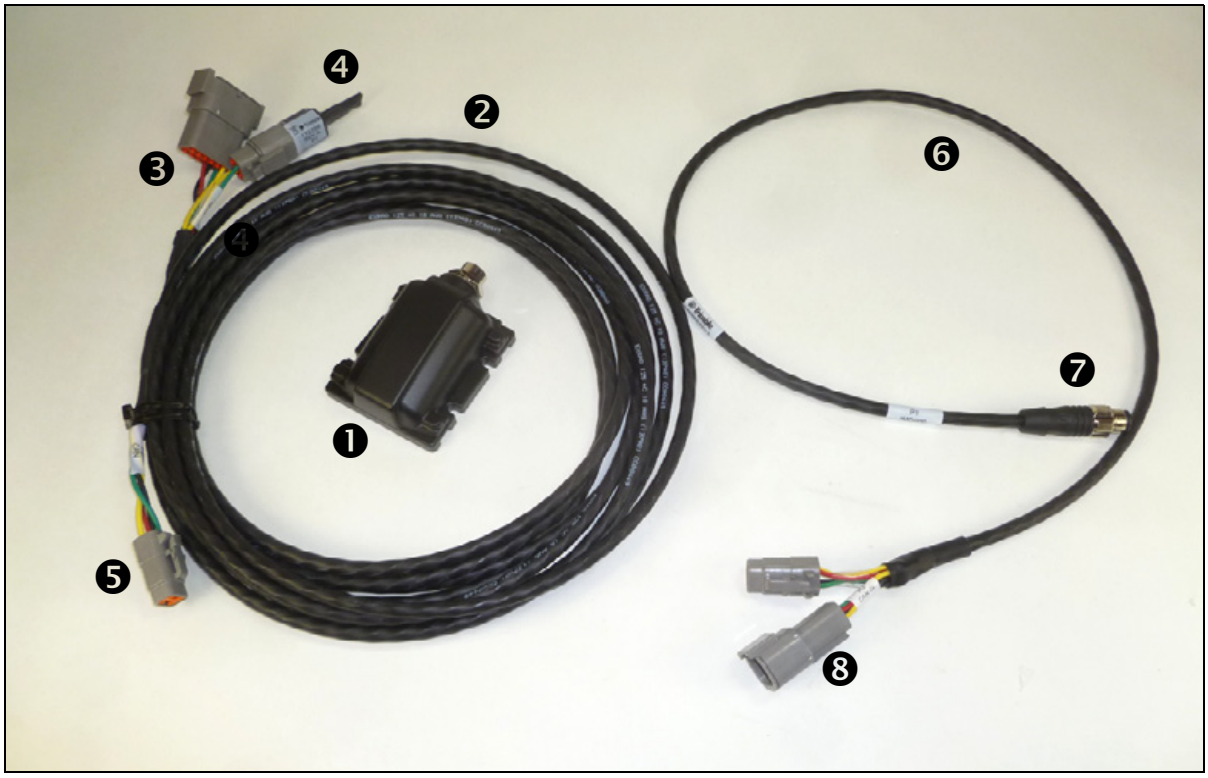

Item	Description
❶	IMD-900 steering sensor (P/N 109256-00)
❷	Cable (P/N 114675)
❸	R1-CAN connector
❹	CAN terminal (× 2)
❺	P3 CAN connector
❻	Cable (P/N 112759)
❼	P1-IMD-900
❽	P3/R3 CAN out/CAN in

Installing the IMD-900 steering device

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

The new IMD-900/AutoSense steering device is shown on the right.

The process below describes how to install the AutoSense device onto the right front hub of the machine.




NOTE – The new sensor will install in the same way as the original AutoSense sensor shown here.



Step 1

On the left-front-wheel upright, locate the two bolts shown and remove them from the bearing cap.

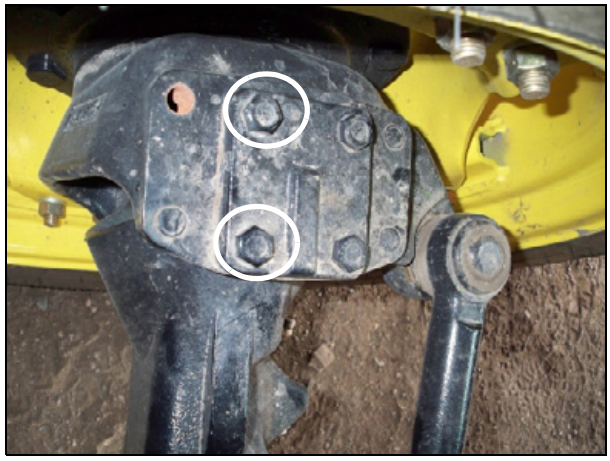

Step 2

Use the provided socket head cap screws to attach the IMD-900/AutoSense device to the mounting bracket.



Step 3

Connect the IMD-900/AutoSense cabling to the IMD-900/AutoSense device and then route the cabling to the NavController II harness.

Make sure that the cabling is not pinched or pulled as the wheels are steered from left to right and that it does not contact any moving or hot components on the machine.




Connecting the IMD-900 harness to the 54602 harness

Step 1


Connect the P1 connector of the 112759 cable to the IMD-900 ❶.

Connect the R3 connector to the 114675 cable ❷.

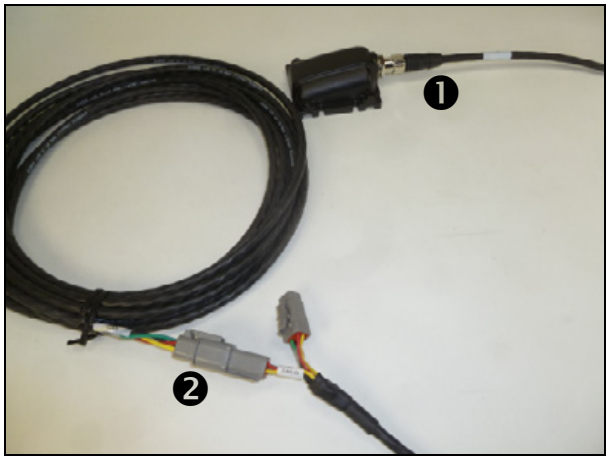

Step 2

Connect the CAN terminal to the P3 connector of the 112759 cable ❸.

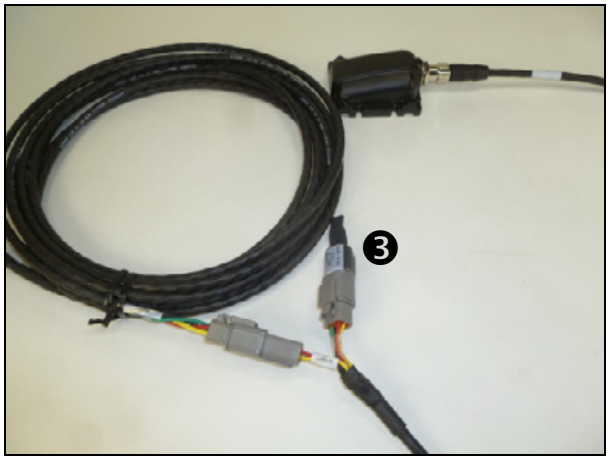

Step 3

With the cable routed to the NavController, the R1 connector will connect to the P12 connector on the 54602 harness on the NavController as shown.

NOTE – There should be a terminator next to the P12 connection as well as near the IMD-900 base cable 112759.



4

Antenna / External Receiver (if used) Installation

- Antenna and receiver installation options
- Mounting an adjustable spar to roof bolts
- Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor
- AG-372 receiver with AgGPS 450/900 radio module (if equipped) components
- Installing the AG-372 GPS receiver with AgGPS 450/900 radio module (if equipped)
- Installing an AG-372 receiver with magnetic feet
- AgGPS 542 receiver components
- Installing the AgGPS 542 receiver

To install the antenna for the display, see Chapter 5, Display Installation.

Antenna and receiver installation options

There are several options for mounting components (the antenna, radio module, or GNSS receiver) on the cab roof depending on the accuracy required and the antenna type:

- **Spar mount** – This bracket mounts directly to the roof bolts and is required for all high accuracy applications such as RTK and OmniSTAR. Trimble recommends this method for mounting an AG-372 receiver. Bolt a metal spar to the roof or to a light bracket and then attach either a V plate for magnetic mounting or an AG-372 receiver plate for permanent mounting.
- **VHB mount** – Attach a 4" x 6" plate or a V plate directly to the roof with VHB (Very High Bond) adhesive for magnetic mounting. See page 39.
- Starfire quick release mount – Attach the required receiver or receiver mount plate as described in the Starfire adaptor section. See page 34.
- **Magnetic mounting** – Magnetic mounting for quick release is available for both VHB and spar type mounting.

Possible mounting methods

GPS receiver	V plate on spar (removable)	VHB plate on roof (removable)	Standard AG-372 plate bolted to spar (permanent)	Starfire mount (removable)
AG-372 receiver	✓	✗	✓	✓
AgGPS 542 receiver	✓	✗	✗	✓
CFX-750 display GFX-750 display TMX-2050	✓	✓	✓	✓

NOTES –

- For quick release magnetic mounting with an AG-372 receiver, order the kit listed in Antenna mounting kits, page 11 and bolt the V plate to the spar.
- With all other antennas, bolt the V plate to the spar for high accuracy and repeatability.
- For WAAS, EGNOS, OmniSTAR VBS, Beacon, and DGPS applications, place either of the plates in a firm location using the VHB.

Mounting an adjustable spar to roof bolts

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1


Locate the cab bolts on the roof of the vehicle.

Measure the length between the bolts on the roof of the vehicle and order the appropriate spar:

- Spar 36.5" - 46.5": P/N 53676
- Spar 54" - 64": P/N 66774




If a light bracket already occupies the roof studs, mount the spar directly onto the light bracket.

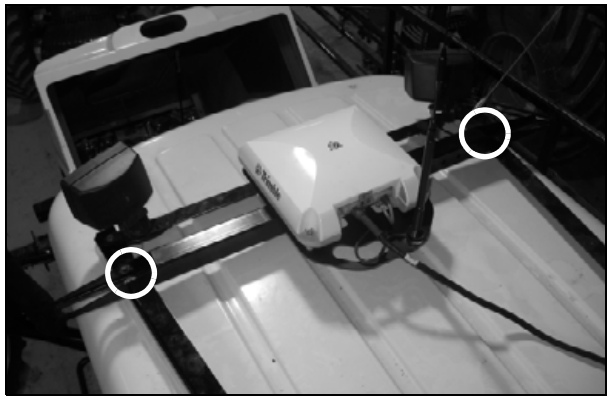


Step 2

If required, replace the existing bolts with longer bolts.

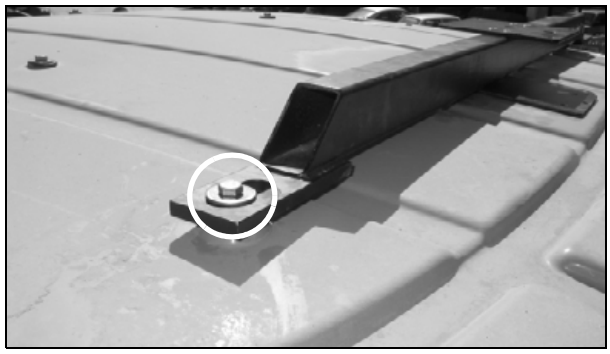

If you use the light bracket, drill two holes to match the spar width.

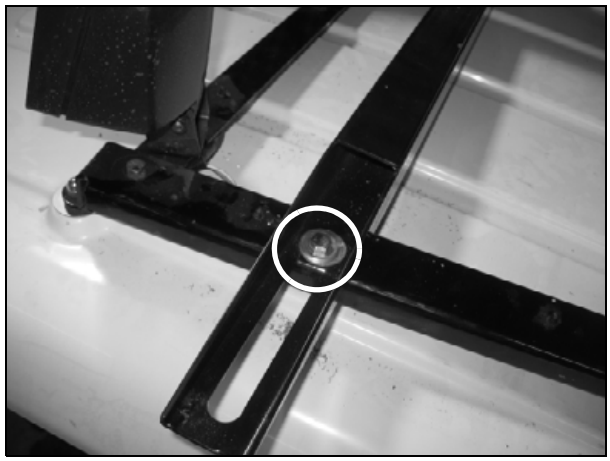

Step 3

Use the slotted holes to center the spar and then tighten the bolts. If required, use the spacers and flat washers provided to secure the spar.

NOTE – If the receiver is offset to the left or the right of the vehicle, Autopilot system performance may be affected. Before you tighten the cab bolts, make sure that the GNSS antenna is aligned with the center of the vehicle.




Step 4

For either of the following applications:


- A single magnet antenna mount
- An AG-372 receiver with magnetic option for quick removal

Attach a V plate with four ¼" flathead screws.

The narrow end points to the front of the vehicle.

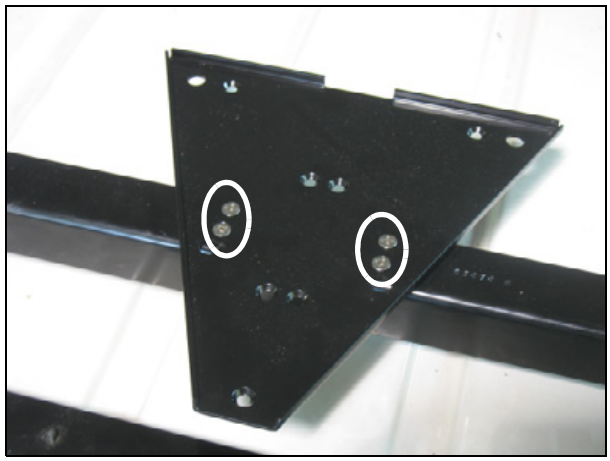

V plate on the spar

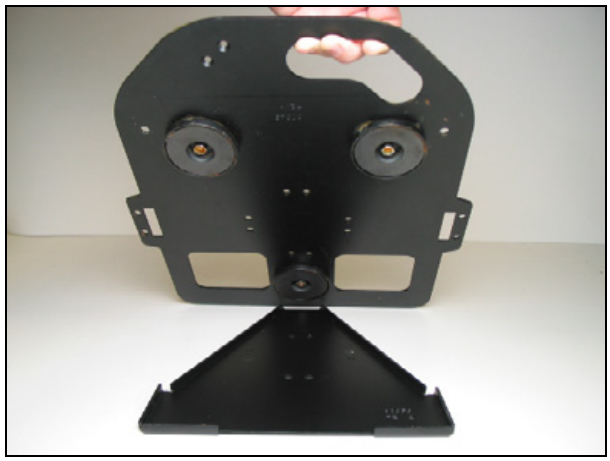

Magnetic mount on the V plate

If you use a standard AG-372 plate for permanent mounting, install the radio antenna first. Use four ¼" flathead screws to attach the plate, with the handle toward the back of the vehicle.

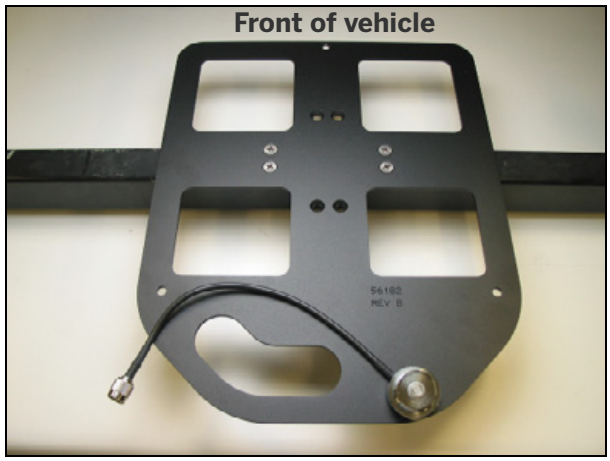


Plate on the spar

Attaching the plate with VHB adhesive

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Standard 4" x 6" plates are provided in most kits. You can use the VHB mounting method to attach either a 4" x 6" plate or a V plate.

- **RTK, OmniSTAR, DGPS, GLONASS applications** – To use this method for high accuracy, the surface must be rigid and free of "oil panning". For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a 4" x 6" plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust. Apply force to the roof to find a firm location.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


NOTE – The VHB strips are pre-applied to the 4" x 6" plate.

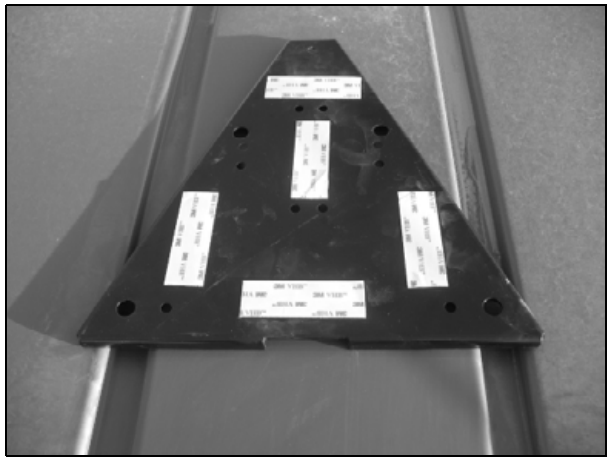


Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end of the plate points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

NOTE – The arrow points to the front of the vehicle.

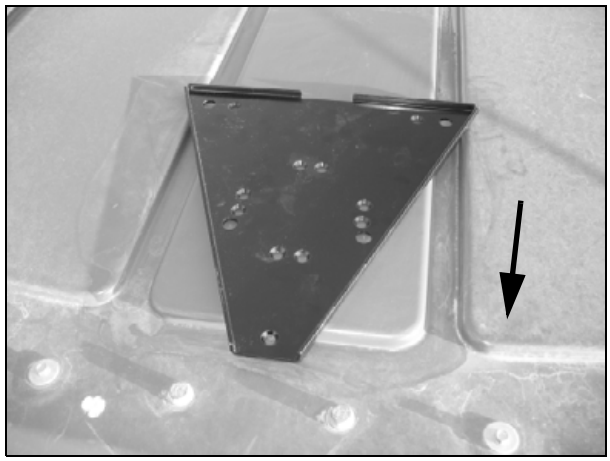

V plate

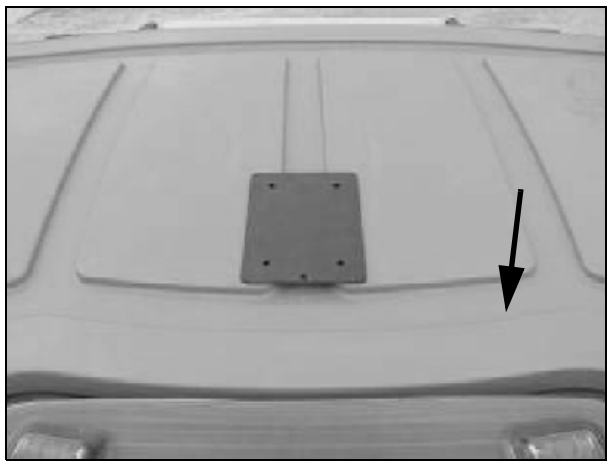

4" x 6" plate

Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor

On vehicles equipped with the John Deere optional Starfire antenna bracket, you can use the Trimble JD ATR antenna bracket to provide a fast release antenna mount.

Step 1

Layout the bracket and hardware on a clean surface.



Step 2

Using the hardware provided, install the lock-pin and the lanyard as shown.



Step 3

Install two washers onto a stud.



Step 4

Install a T-knob locking handle onto the stud and then repeat Steps 3 to 4 for the second stud.



Step 5

Standard mount


For antennas using a standard $^{5}/_{8}$" - 11 threaded mount, attach the antenna to the bracket with a $^{5}/_{8}$" - 11 bolt.



Plate mount

For antennas that use a plate mount, attach the adaptor to the plate with four ¼" - 20 flat head screws.

NOTE – A standard mount (P/N 56182) is shown; others, such as the NAV-900 base mounting plate P/N 109315, are similar.

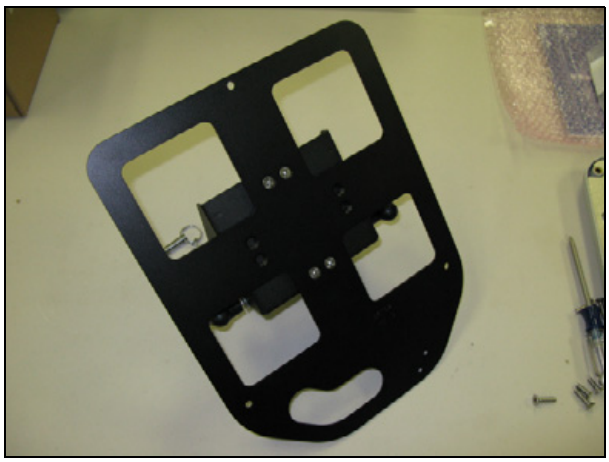


Step 6

If you are using an external radio antenna with this option, attach the radio antenna to the AG-372 flat mount plate as shown.



Step 7

Insert the tab situated at the bottom of the adaptor into the slot in the vehicle mounted antenna bracket.

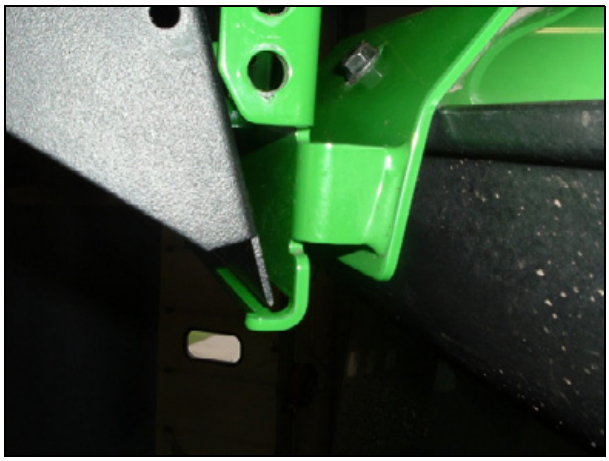

Step 8

Tighten both knobs securely.



Step 9

Tip the adaptor back until the pin holes line up and insert the attached steel lock pin through the bracket and the adaptor.

NOTE – The pin prevents the bracket from falling should you forget to tighten the locking knobs.




Step 10

When using the Starfire antenna bracket adaptor with an external radio antenna

Provision for mounting the radio antenna can be made using the standard adhesive backed steel plate with a standard magnetic mount as shown.



AG-372 receiver with AgGPS 450/900 radio module (if equipped) components

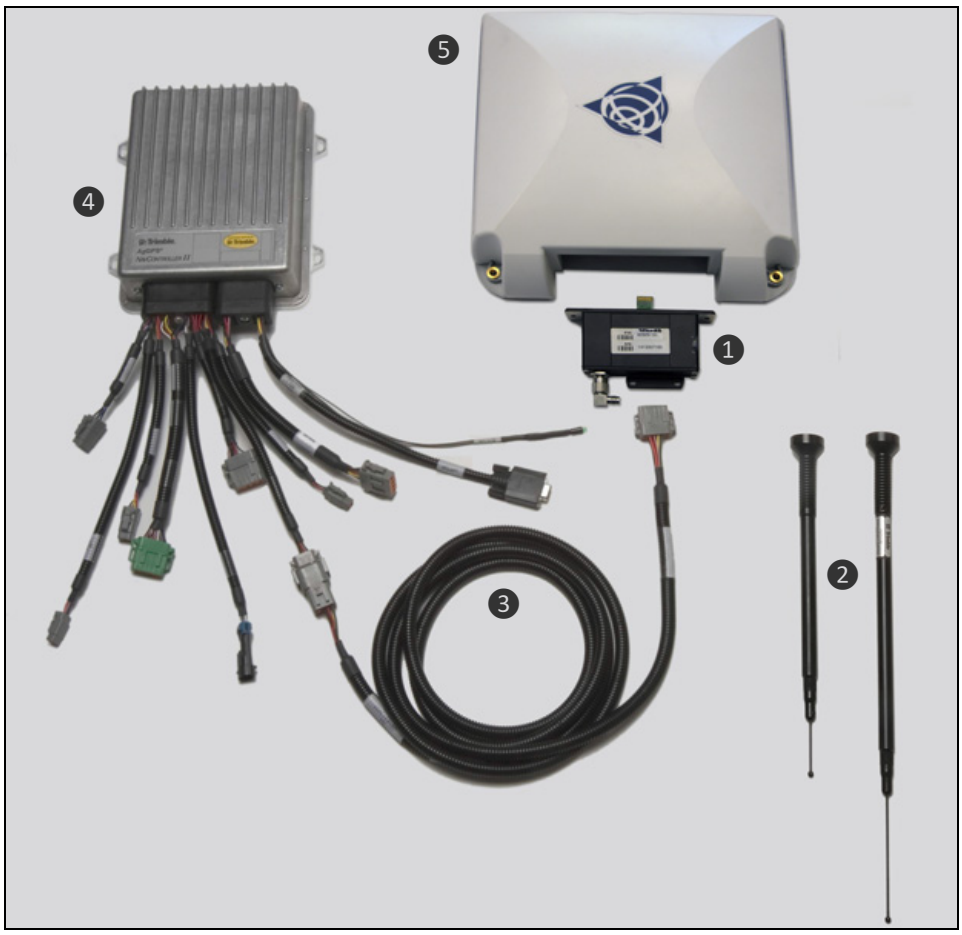

Item	Description	Trimble part number
1	AgGPS® 450 or 900 radio (if equipped)	
2	Radio antenna cable and magnetic mount	
3	AgGPS 450 or 900 radio antenna	
4	Antenna/receiver cable	54608
5	Autopilot controller	

Installing the AG-372 GPS receiver with AgGPS 450/900 radio module (if equipped)

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

To attach the AG-372 receiver plate to the cab roof, do one of the following:

- For a removable installation, attach a V plate to a spar and then stick the receiver plate to the V plate with magnets.
- For a permanent installation, bolt the receiver plate to a spar.


Removable installation

Step 1

V plate


Attach the V plate to the spar using the ¼" flathead screws provided in the V plate bolt kit. Ensure that the narrow end points forward.

For spar mounting instructions, see page 36.

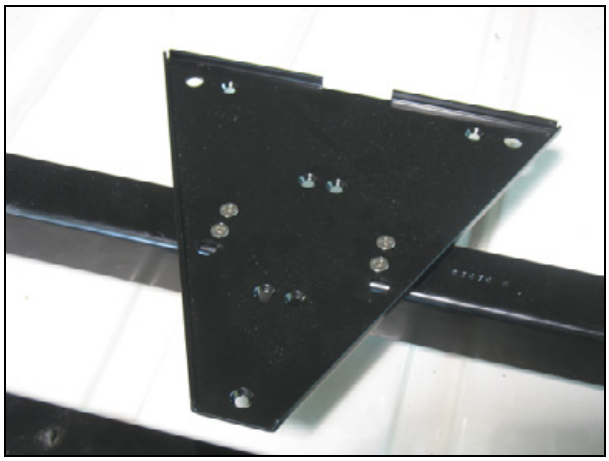

Mounting plate

Attach the three provided magnets to the plate with the ¼" flathead screws and hardware provided.

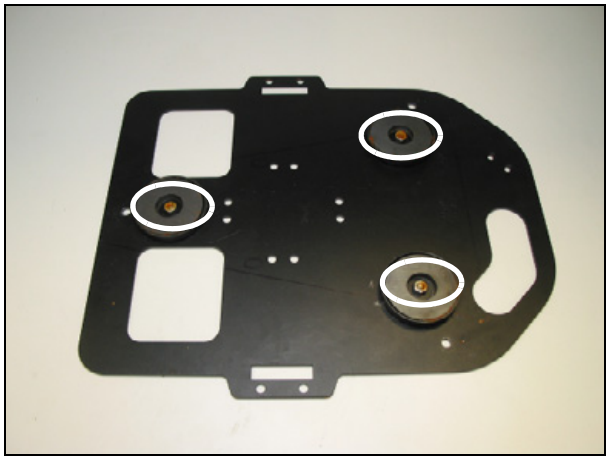


Underside of plate

Permanent installation

Step 1

Use the four provided ¼" flathead screws ❶ to attach the receiver mounting bracket to the spar.

For spar mounting instructions, see page 36.

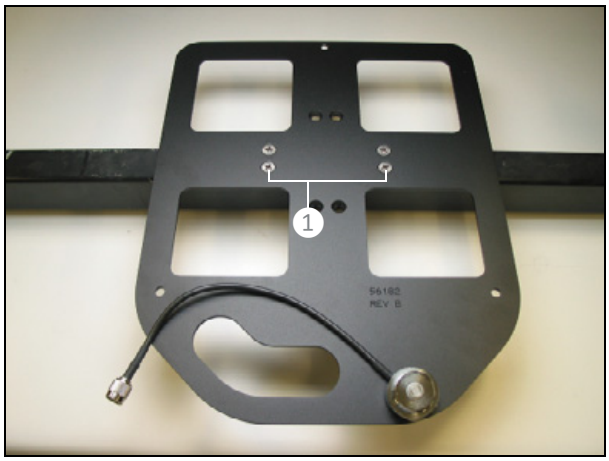


Step 2

Remove the blanking plate and set it aside.




Step 3

Place the integrated radio inside the AG-372 receiver. Ensure that the circuit board is aligned with the slot in the vertical wall of the receiver.

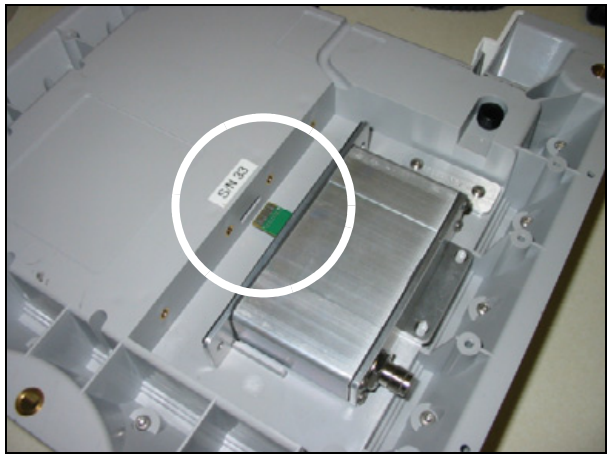


Step 4

Slide the integrated radio back so that it is flush with the vertical wall of the receiver.

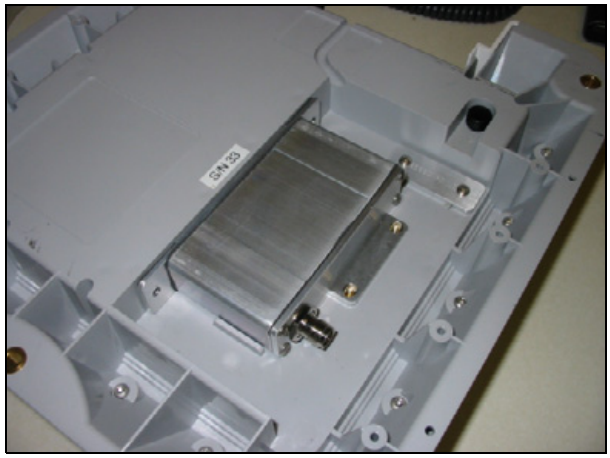

Step 5


Use a #1 or #2 Phillips screwdriver and the supplied screws to install the integrated radio. First insert and tighten the two screws on the horizontal wall (arrowed), and then insert the remaining screws.

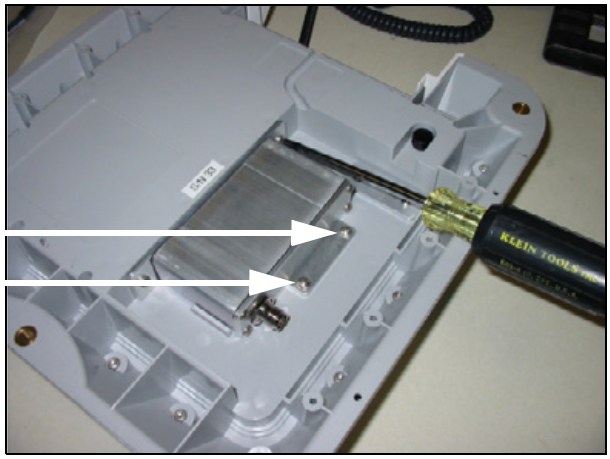

Step 6

Install the supplied antenna cable.

NOTE – The housing can accommodate a cable diameter of up to ¼".

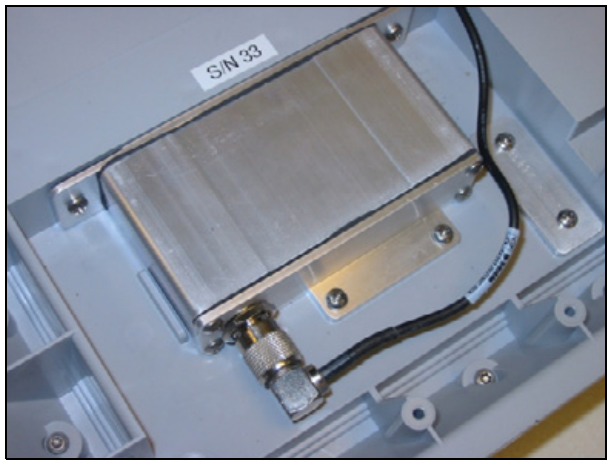


Step 7

Route the cable through the cable channel and then insert the cable cover.




This image shows the unit with the cable routed through the channel.

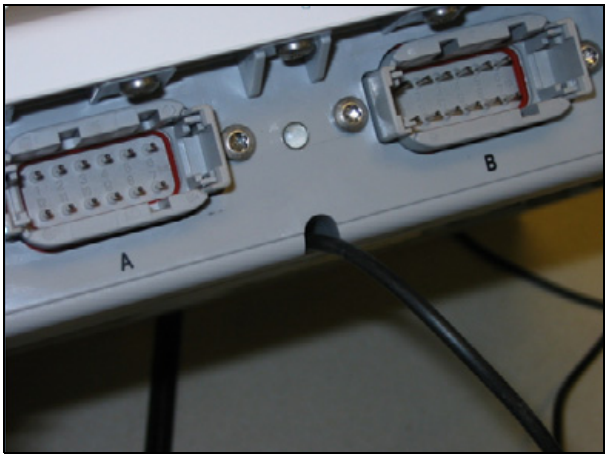


Step 8

Attach the antenna base to the rear of the plate with the two flathead screws provided.

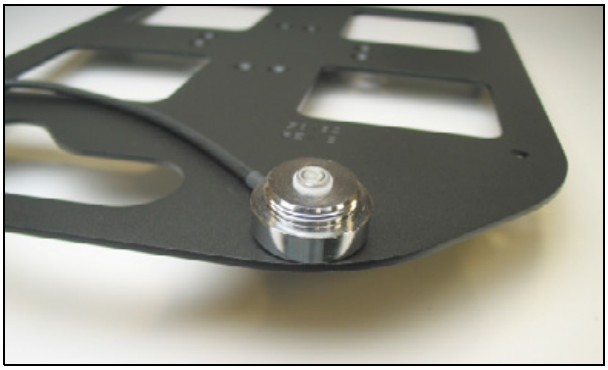

Step 9

Attach the radio antenna to the antenna base.

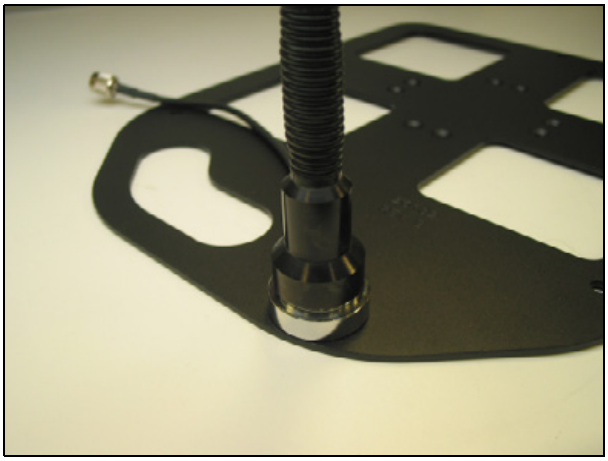

Step 10

Position the AG-372 receiver and radio on the mounting plate with the connector ports facing the radio antenna. Align the three bolt holes with the receiver, radio, and mounting plate.




Step 11

Insert the nylon bushings provided.



Step 12


Insert the bolts through the receiver, radio, and mounting bracket. Place nuts on the bolt ends and then tighten them.

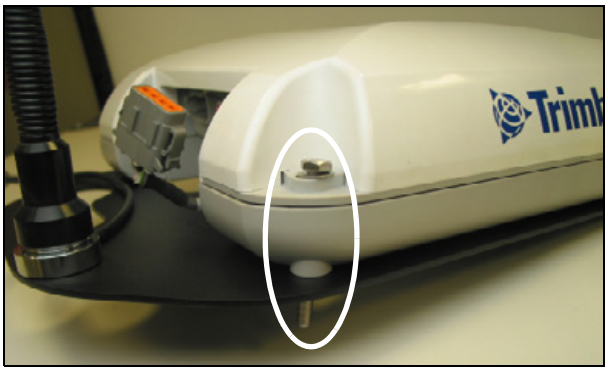

Step 13

Magnet method

Place the receiver on the roof by aligning the magnets with the V plate. Ensure that the handle 1 is toward the back of the vehicle.

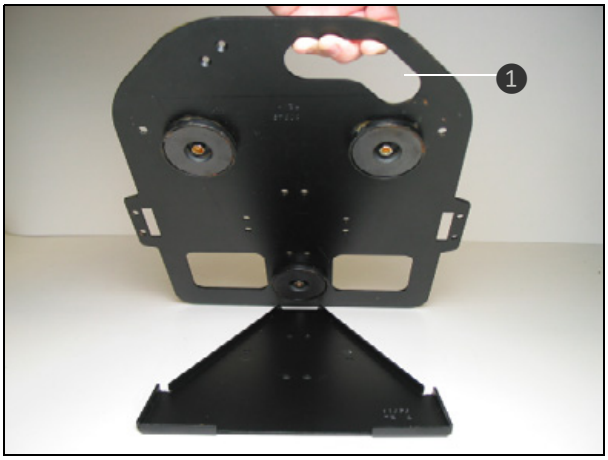


Step 14

Both methods

Connect the cable from the cab controller into port A 1 of the AG-372 receiver. Bolt the cable clamp 2 to the left side of the receiver.

Route the cable into the cab and into the controller.

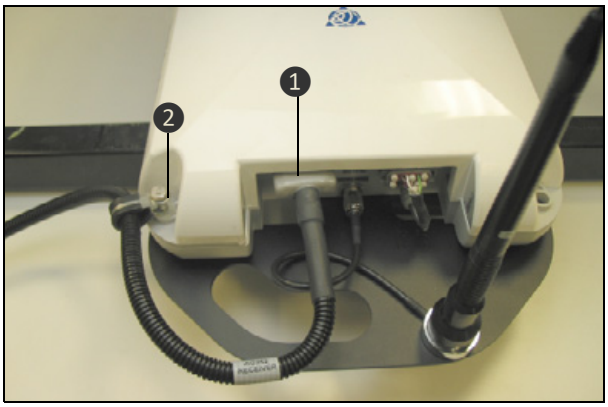

Installing an AG-372 receiver with magnetic feet

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Use this option only when all other options are unavailable. It requires a firm surface for mounting to avoid vertical vibration and is not an easily repeatable location when moving receivers. Many cabs do not offer roof bolts; you may need to drill or to construct a firm location.

Step 1


Attach the magnets to the receiver mounting plate. Use the three ¼" bolts to mount the AG-372 receiver.

Place the nuts on the receiver side.



Step 2

Turn the mounting plate upside down. Stick the covers onto the magnets as shown.

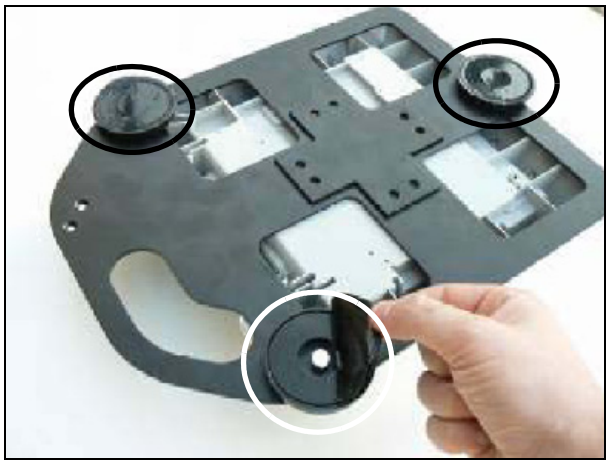


Step 3

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.


Remove the backing from the VHB strips and then apply the plates to the cab roof.

Attach the three mounting plates so that the receiver is as firm as possible.

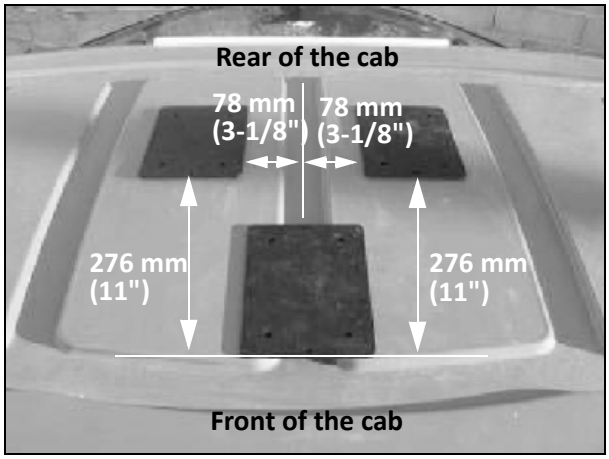


Step 4

Stick the antenna magnetic mounts at the center of the mounting plates.

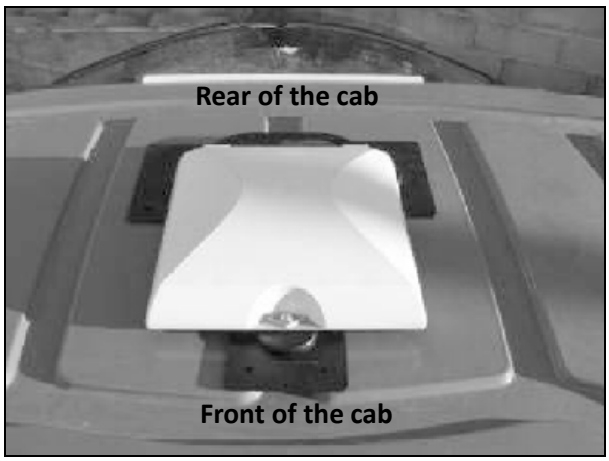


Step 5

Connect the antenna cable to port A of the AG-372 GPS receiver and then route the cable toward the NavController harness.

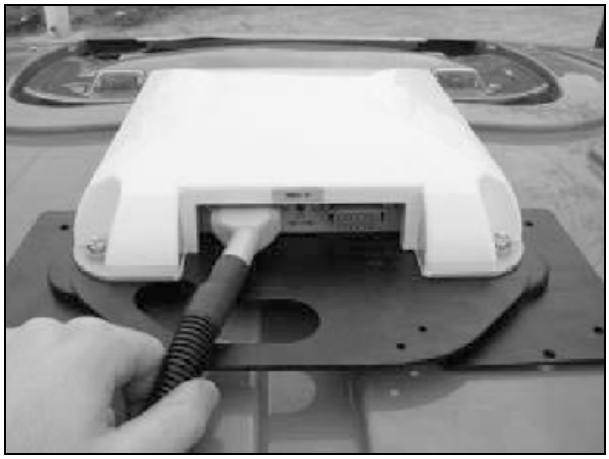

AgGPS 542 receiver components

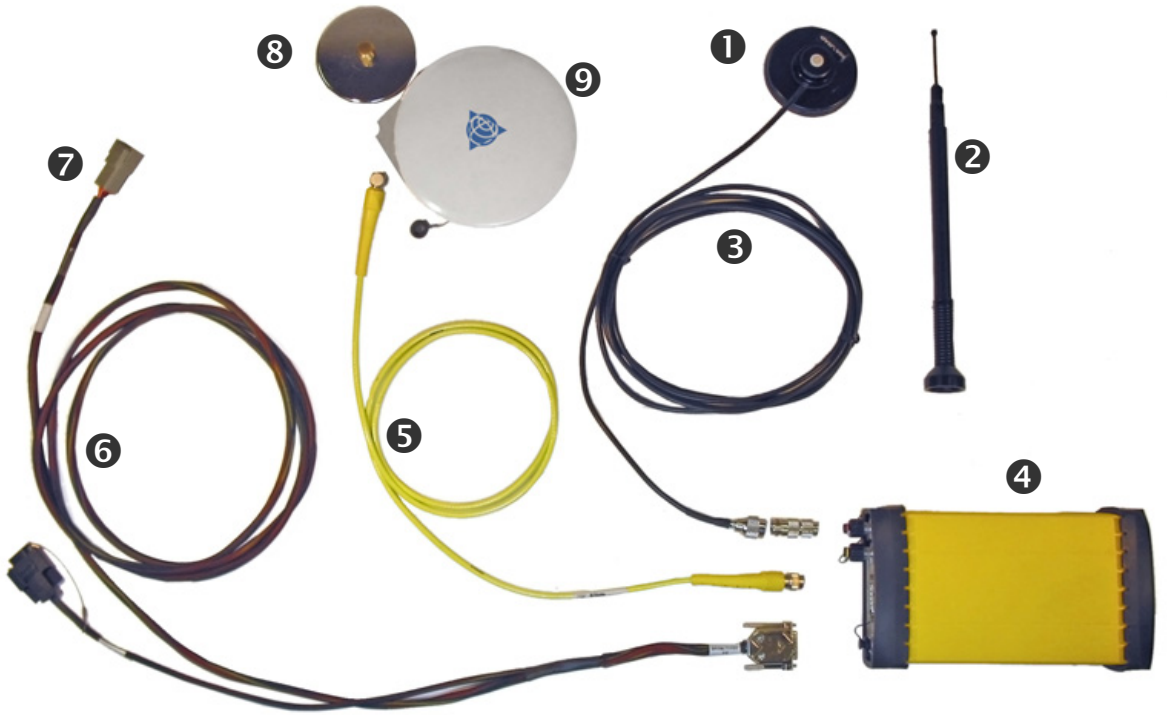

Item	Description	Trimble part number
1	Radio antenna magnetic base	
2	Radio antenna	
3	Radio antenna cable	
4	AgGPS 542 GPS receiver	
5	Antenna cable	
6	Receiver cable	62037
7	To controller “P3 GPS”	
8	Antenna magnetic mount	
9	AgGPS 542 GPS receiver	

Installing the AgGPS 542 receiver


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Attach the large magnet with a $^{5}/_{8}$" stud to the GPS antenna.



If the antenna has magnets built in, skip this step.

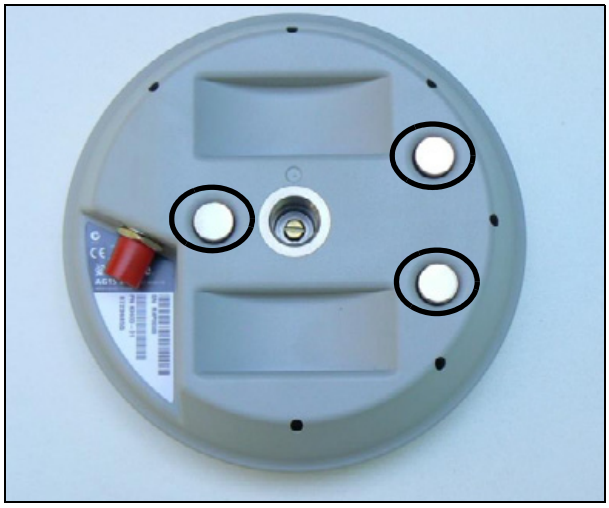

Step 2

GLONASS,RTK, OmniSTAR, DGPS applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



Step 3

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



Step 4


Mount the receiver in a convenient location in the cab. Route the antenna cable to the receiver and then connect it.



Step 5

Identify the correct adaptor for the radio connection:

- ❶ Reverse polarity TNC-to-N for 900 MHz radios
- ❷ Normal polarity TNC-to-N for 400 MHz radios

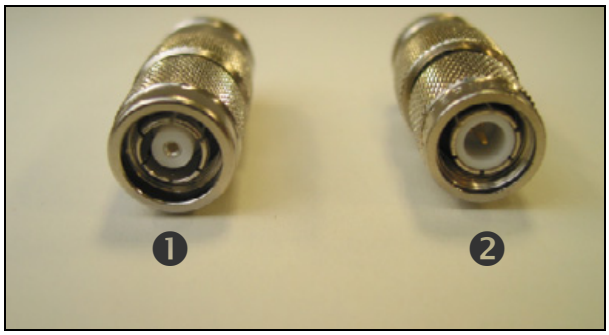

Step 6

Attach the adaptor to the radio port.




Step 7

Connect the radio antenna cable to the radio port adaptor.



Step 8

Connect the controller cable to the 26-pin connector of the receiver. Controller cable connections will be completed in Chapter 8, Controller Installation.

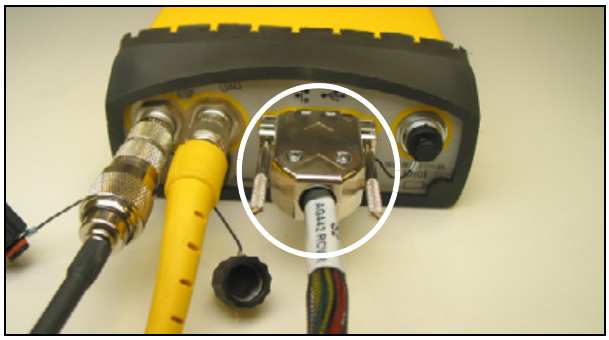

Step 9

Connect the radio antenna to the magnetic antenna base.



Step 10

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the 4" x 6" plate with the VHB provided to relocate the antenna.




5

Display Installation

- CFX-750 display: Components
- CFX-750 display: Preparation
- CFX-750 display: Installation
- CFX-750 display: Installing the wiring harness
- TMX-2050 display: Components
- TMX-2050 display: Preparation
- TMX-2050 display: Installing the wiring harness
- TMX-2050 display: AG-25 GNSS antenna
- CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate
- CFX-750 and TMX-2050 displays: Installing the RTK radio antenna
- GFX-750/XCN-1050 display: Components
- GFX-750/XCN-1050 display: Preparation
- GFX-750/XCN-1050 display: Installation
- GFX-750/XCN-1050 display: Installing the wiring harness

CFX-750 display: Components

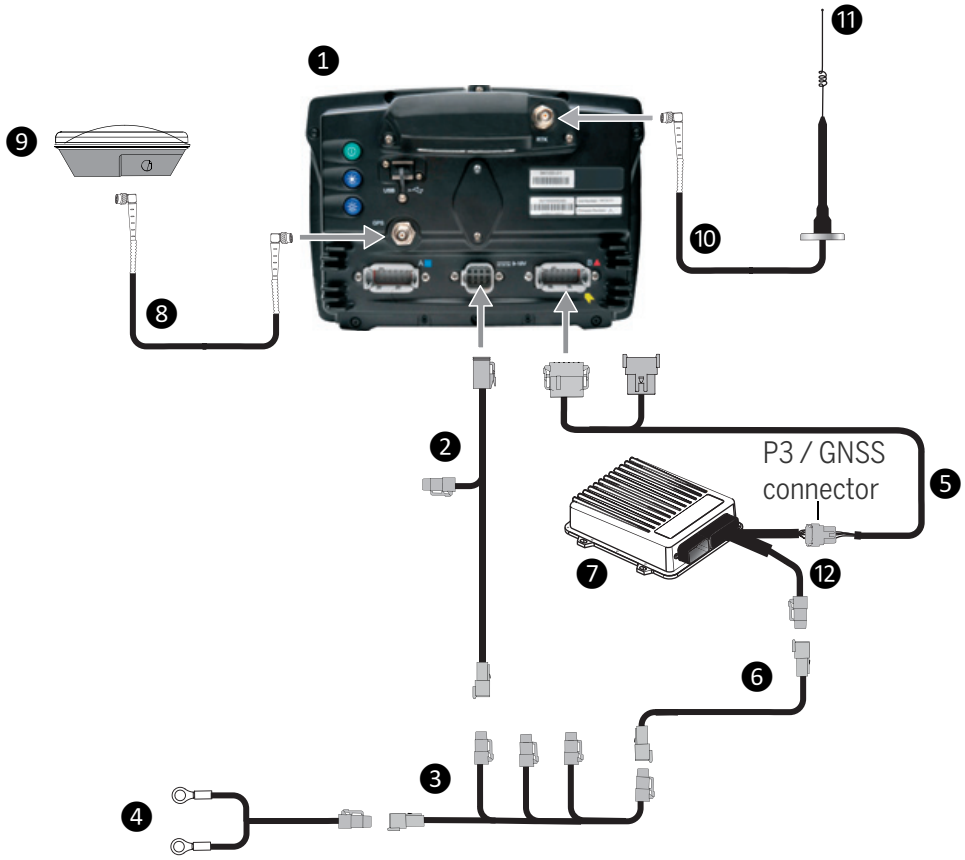

⚠ **CAUTION –** Connecting the Port Replicator on the CFX-750 to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓬ will result in damage to the display, and will void the warranty.

Item	Description	Trimble part number
1	CFX-750 display **NOTE –** RTK password required.	93100-02
2	CFX-750 power cable	66694
3	CFX-750 power cable with relay and switch (power bus)	67259
4	Basic power cable	67258
5	CFX to NavController II cable with port replicator	75741
6	2 pin DTM to 2 pin DT power adaptor	67095
7	NavController II	55563-00
8	8 m GNSS TNC/TNC RT angle cable	50449
9	AG25 GNSS antenna	77038-00
10	NMO to TNC 20ft antenna cable and base	72122
11	900 MHz radio antenna kit	22882-10
12	Main NavController II cable	54601

CFX-750 display: Preparation

Step 1

Locate the CFX-750 display, the RAM mount, and the RAM mount clamp.



Step 2

Use the provided metric hardware to attach the RAM mount to the rear of the display.



Step 3

Attach the RAM mount to the rear of the display.



CFX-750 display: Installation

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1


Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the bar mount to the rail.

Attach the free end of the RAM mount to the bar mount and then tighten the clamp on the RAM mount so that the display is secure.

Step 2

Connect the cable to the B port of the CFX-750 display.

To connect power to the CFX-750 display, see Chapter 8, Controller Installation.

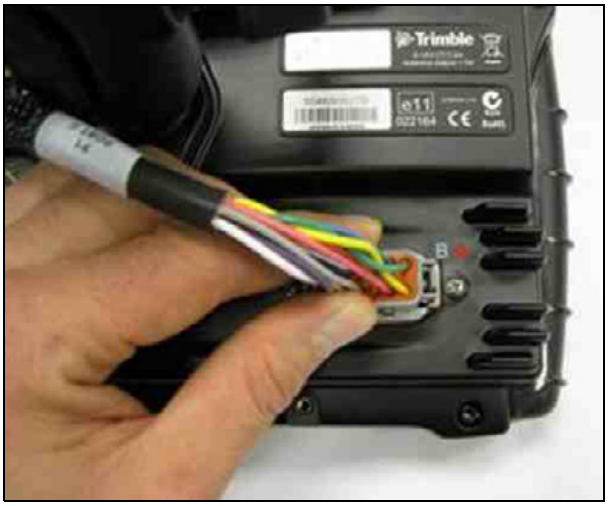

CFX-750 display: Installing the wiring harness

Step 1

Locate the cable that connects the CFX-750 display to the NavController II.


Step 2

Connect the cable to the P3 connector on the NavController II main harness and then route the cable from the NavController II to the mounting location on the CFX-750 display.



TMX-2050 display: Components

This graphic shows how to connect the TM-200 Module and the Autopilot system for after-market installations.

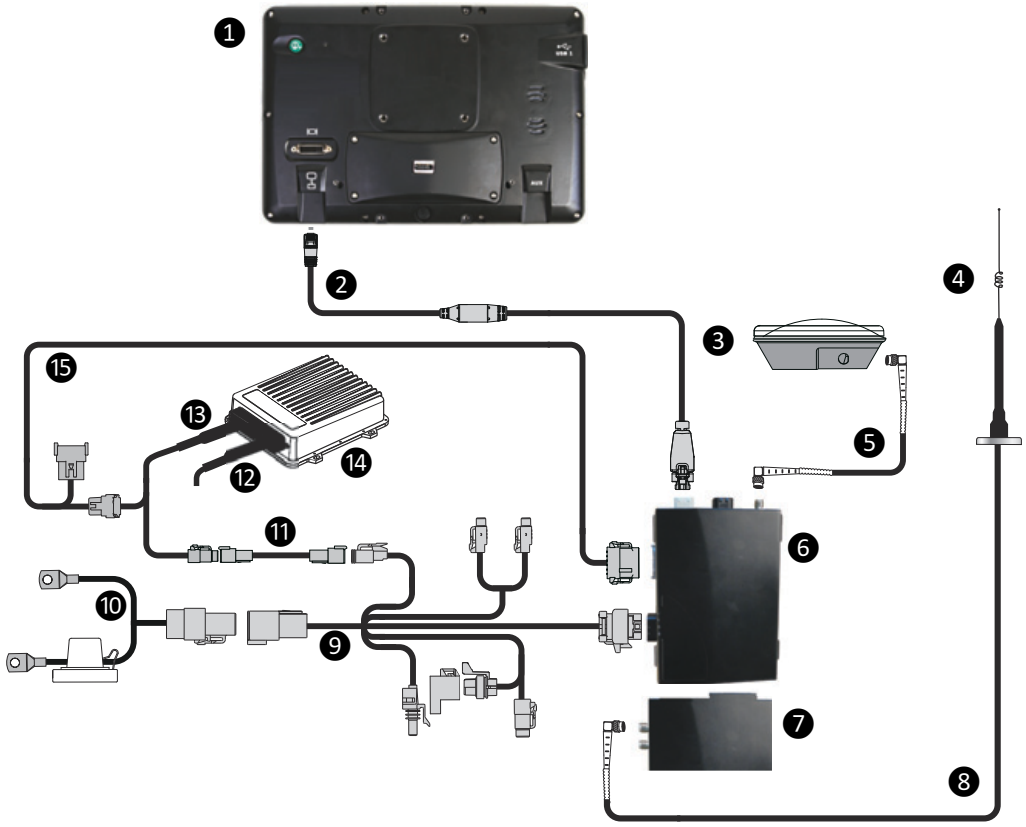

Item	Description	Trimble part number
1	TMX-2050 display	96700-00
2	TM-200 Module to display cable	93843
3	AG-25 GNSS antenna	77038-00
4	900 MHz radio antenna kit	22882-10
5	8 m GNSS TNC/TNC RT angle cable	50449
6	TM-200 Module	95060-00
7	AG-815 radio	
8	NMO-to-TNC 20 ft antenna cable and base	72122
9	TM-200 Module power and I/O cable	92676
10	Cable, battery	92905
11	2-pin DTM to 2-pin DT power adapter cable	67095
12	Cable, NavController diagnostic	54602
13	Main NavController cable	54601
14	NavController	55563-00 55566-00
15	TM-200 Module to NavController cable with port replicator	75741

TMX-2050 display: Preparation

The display mount attaches to a rail in the cab of the vehicle. The TMX-2050 display connects to the display mount.

The TM-200 Module connects to the display with a single cable.

Additional components to install depend on your connection and correction services, and the features you are using.

⚠ **CAUTION –** Make sure the vehicle power is off when you are connecting system components.

Installing the display and mount

Use the mounting hardware supplied in the display kit to mount the display in the vehicle cab.

⚠ **CAUTION –** Make sure the vehicle power is off when you are connecting system components.

Before completing installation steps, select a position in the cab where the bar mount (4) can be attached to a rail. Hold the display in the selected location and make sure that it:

- Is easy to see, but does not block the driver's view.
- Is within the driver's reach so that the USB drive is easy to remove and replace.
- Does not interfere with the driver getting in or out of the cab, or any other activities.

.

Item	Description
1	Mounting plate
2	Zirkona mount
3	Tightening arm
4	Bar mount



Step 1

Locate the TMX-2050 display and the Zircona mount and mounting hardware.



Step 2

Use the provided hardware to attach the Zircona mount to the display as shown





Step 3

Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the rail mount of the Zircona display mount to the rail of the vehicle.



Step 4

The Zircona mount has a tightening arm 3. Loosen the arm to let the display move on the mount.

Step 5

Adjust the TMX-2050 display until it is positioned where you want it.

Turn the tightening arm clockwise to tighten the Zircona mount and lock the display in the desired position.

Step 6

Connect the display cable to the display.



Step 7

Route the other end of the display cable to the TM-200 Module and then connect it to the TM-200 Module.



TMX-2050 display: Installing the wiring harness

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the P5 and P2 connectors on the harness, P/N 106111, to the TM-200 Module.

Step 2

On the TM-200 Module locate the display connection point.




Step 3

Connect the display cable P/N 93843 to the TM-200 Module.



Step 4

Route the cable between the TMX-2050 display and the TM-200 Module.

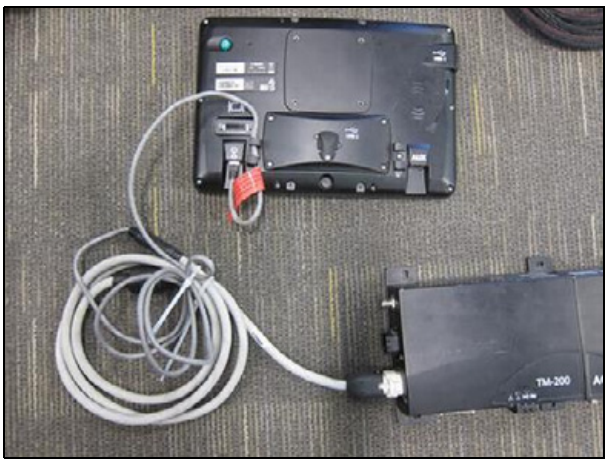


Step 5

Locate the Port labeled **A** on the TM-200 Module and then connect NavController connection cable, P/N 75741.




Step 6

Route the other end of the P/N 75741 cable to the plug on the P/N 54601 harness labeled **GPS**.

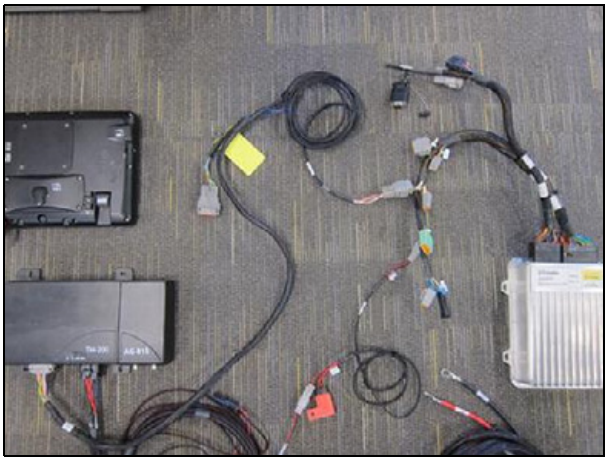

Step 7


Connect the cable to the P3 connector on the NavController main harness.

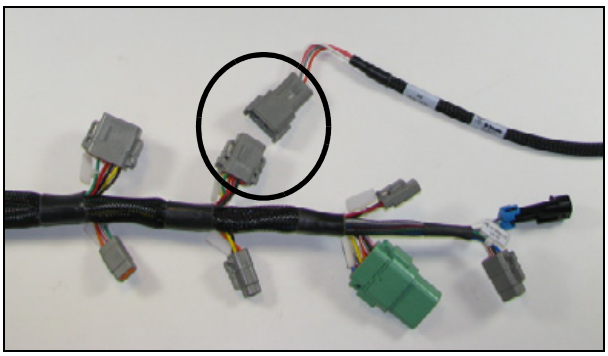

TMX-2050 display: AG-25 GNSS antenna

The AG-25 GNSS antenna is required for all correction services. It enables the GNSS receiver in the TM-200 Module to receive GPS / GNSS corrections. The antenna connects to the antenna connector on the TM-200 Module

⚠ **CAUTION –** Wireless cellular radio and GNSS signals can interfere with each other. For best performance, mount antennas at least 1 meter away from each other.

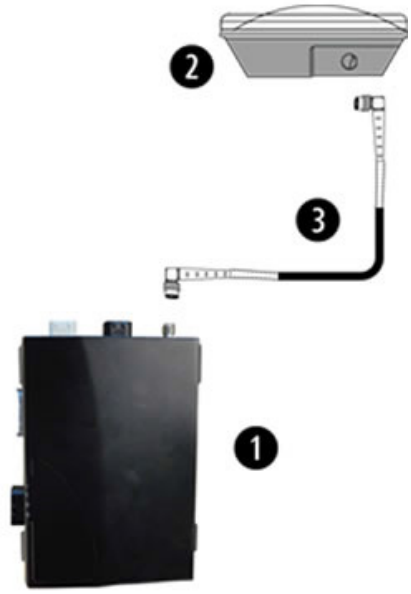

Item	Description
1	TM-200 Module
2	AG-25 GNSS antenna
3	AG-25 antenna to TM-200 Module cable

The AG-25 GNSS antenna has integrated magnets for easy installation. To attach the antenna to a non-metal surface, use the mounting plate.

NOTE – If you are using the AG-25 GNSS antenna with a steering system, refer to the installation instructions for the steering system to determine the correct location for mounting the antenna.

CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

NOTE – The V plate antenna bracket is available on the Autopilot price list. See Antenna mounting kits, page 11.

Use one of the following methods:

- Spar mount
- VHB adhesive

Spar mount method

Trimble recommends that you use this method for RTK and OmniSTAR operations. For more information, see Antenna and receiver installation options, page 35.

Use a ⅝" bolt to attach the AG25 antenna to the spar, as shown.

Measure the length between the bolts on the roof of the vehicle and order the appropriate spar:

- Spar 36.5" - 46.5": P/N 53676
- Spar 54" - 64": P/N 66774



VHB adhesive method

Standard 4" x 6" plates are provided in most kits. You can use Very High Bond (VHB) to attach either a 4" x 6" plate or a V plate.

- **GLONASS, RTK, OmniSTAR, DGPS applications** – To use this method for high accuracy, the surface must be rigid and free of "oil panning". For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a 4" x 6" plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


NOTE – The VHB strips are pre-applied to the 4" x 6" plate.

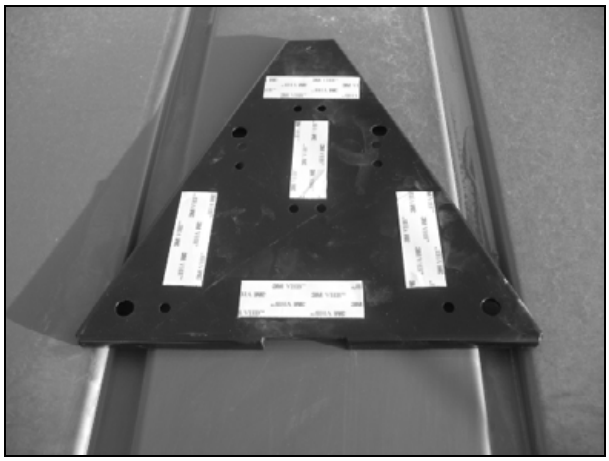


Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

NOTE – The arrow in this figure points to the front of the vehicle.

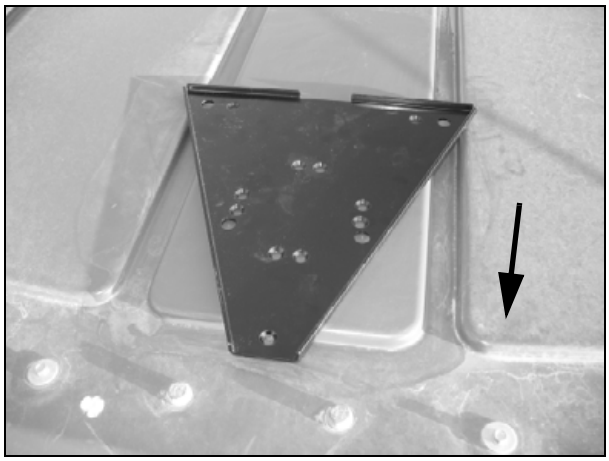


V plate

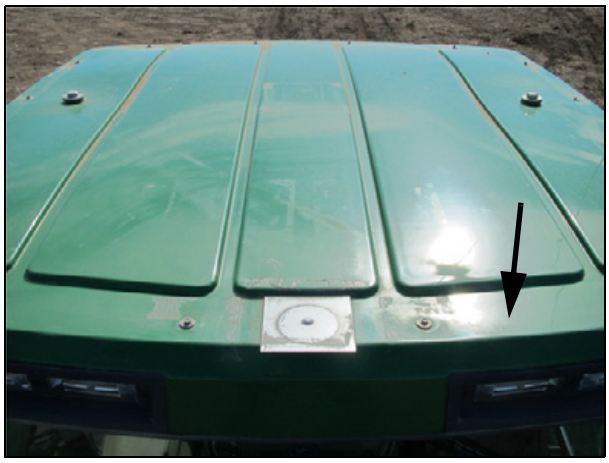

4" x 6" plate

Step 4

If the antenna has magnets built in, omit this step.

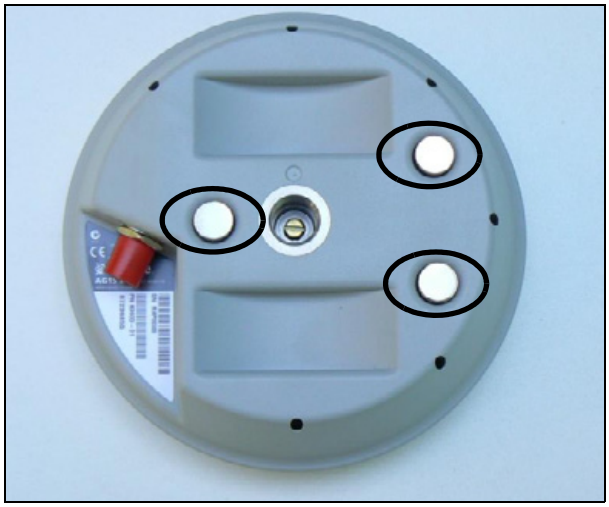

Otherwise, attach the large magnet with a ⅝" stud to the GNSS antenna.



Step 5

GLONASS, RTK, OmniSTAR, DGPS, applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



WAAS, EGNOS, VBS, Beacon applications

Attach the antenna to the center of the 4" x 6" plate.



Step 6

Both models

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



CFX-750 and TMX-2050 displays: Installing the RTK radio antenna

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the radio antenna to the magnetic antenna base.



Step 2

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the 4" x 6" plate with the VHB provided to relocate the antenna.



Step 3

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the P/N 62034 plate with the VHB provided to relocate the antenna.


Step 4

Route cable from the vehicle roof into the cab, and connect the radio cable to the display.



GFX-750/XCN-1050 display: Components

This graphic shows the Autopilot system using NAV-900 as an external guidance device.

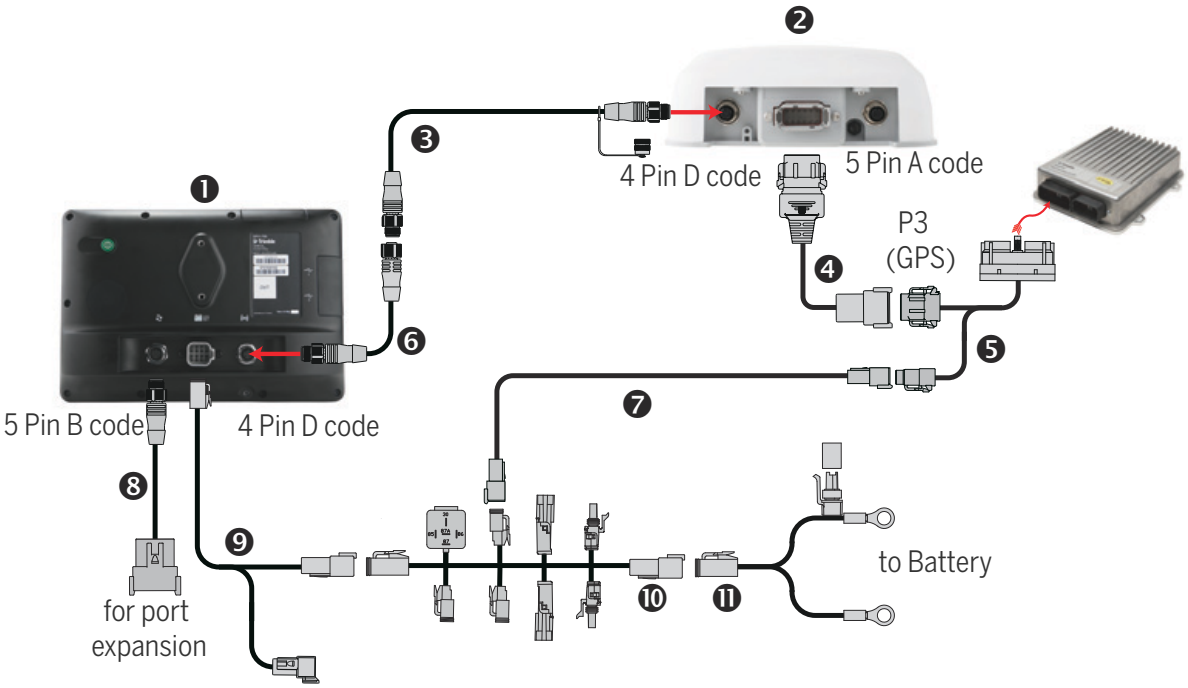

Item	Description	Trimble part number
1	GFX-750/XCN-1050 display, with PIQ App	121000-XX
2	NAV-900 Guidance controller	108993-05
3	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR), 5 m	110540
4	Cable Assy, NAV-900 to Nav II/III, AutoPilot™	110547
5	Cable, NavController II/III, Main	54601
6	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR) Extension, 2.5 m. Optional extension for large vehicles	112082
7	Cable Assy, 2 PIN DTM to 2 PIN DT Power Adapter	67095
8	Cable Assy, GFX-750/XCN-1050, Expansion Port Basic, RS-232, Dig I/O, 2.5 m	110545
9	Cable Assy, GFX-750/XCN-1050, Power to display, CAN, 2.5 m	110551
10	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Power with Relay and Switch (Acc)	67259
11	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Basic Power, 4 m	67258

GFX-750/XCN-1050 display: Preparation

The GFX-750/XCN-1050 display utilizes the RAM mount system.



Attach the diamond-based ram mount to the back of the display using the provided fasteners.



GFX-750/XCN-1050 display: Installation

Step 1

Connect the RAM base mount ball to the desired bracket using the supplied V bolts or alternate (non supplied) hardware.



Step 2

Use the provided RAM clamp to join the RAM base ball and the ball attached to the display.



Step 3

Position the display as desired, with good visibility by the operator, and then tighten the handle to fix in place.




GFX-750/XCN-1050 display: Installing the wiring harness

The GFX-750 display requires a nominal 12 volt power source. The P/N 67258 cable has ring terminal leads for connecting to a battery or other cable mount point.

⚠ **WARNING –** If the machine has a master electrical disconnect, ensure that the display/receiver will be disconnected from the battery when the master disconnect is used. Failure to do so may result in hardware damage and void warranty. Additionally, it is suggested to utilize power terminals located within the cab of the vehicle that ground in the same location as the cab components to avoid ground shifts between the display and any vehicle ECUs.

Step 1

Connect the other 4-pin Deutsch connector of cable P/N 110551 to the P/N 67258 base power cable.

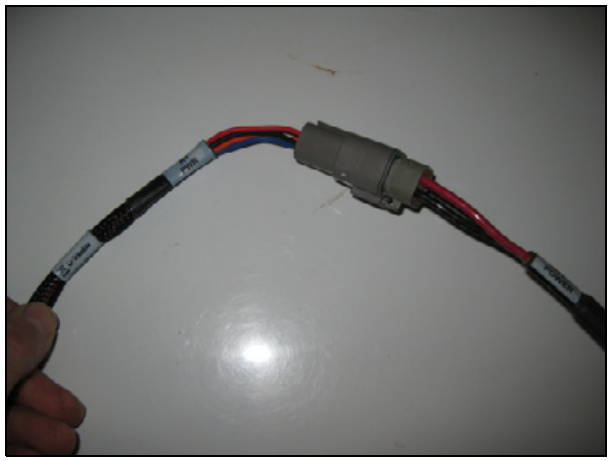

Step 2

Connect the 6-pin DT power/CAN cable P/N 110551 to the middle port of the display.



Step 3

Connect the 4-pin M12 connector to the 4-pin receiver connector. Note the Keying and number of pins.






6

Power Harness Installation

- CFX-750 display: Components
- GFX-750/XCN-1050 display: Components
- CFX-750 and GFX-750 displays: Installing the power harness
- CFX-750 and GFX-750 displays: Configuring the power bus options
- TMX-2050 display: Components
- TMX-2050 display: Installing the power harness
- TMX-2050 display: Configuring the power options

CFX-750 display: Components

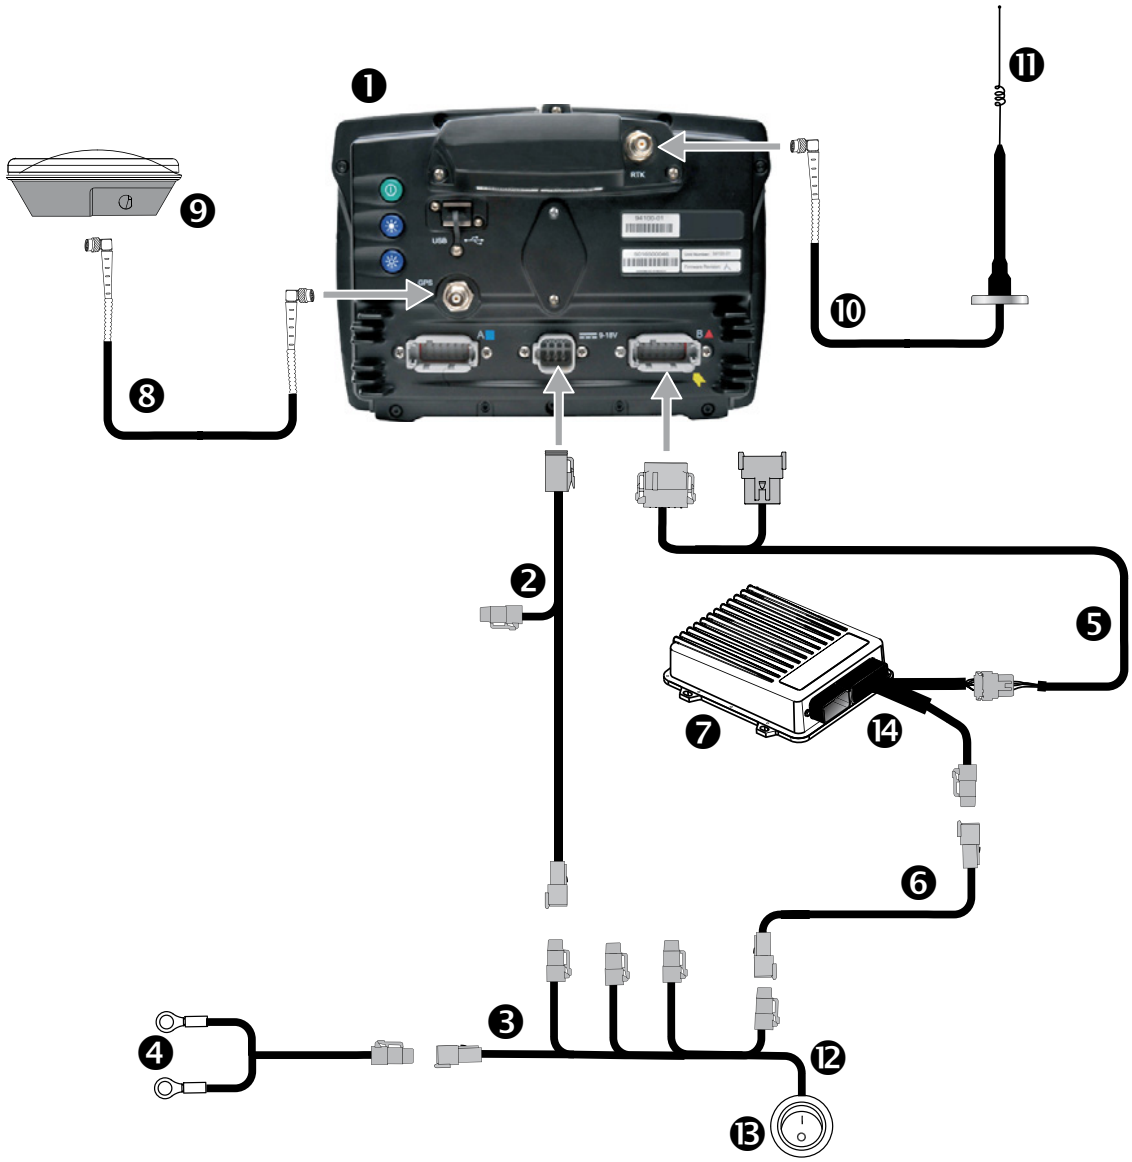


⚠ **CAUTION –** Connecting the Port Replicator on the CFX-750 display to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓮ will result in damage to the CFX-750 display and will void the warranty.

Item	Description	Trimble part number
1	CFX-750 display **NOTE –** RTK password required.	94100-02
2	CFX-750 power cable	77282
3	CFX-750 power cable with relay and switch (power bus)	67259
4	Basic power cable	67258
5	CFX-750 to NavController II cable with port replicator	75741

Item	Description	Trimble part number
6	2 pin DTM to 2 pin DT power adaptor	67095
7	NavController II	55563-00
8	8 m GPS TNC/TNC RT angle cable	50449
9	AG25 GNSS antenna	77038-00
10	NMO to TNC 20ft antenna cable and base	62120
11	900 MHz radio antenna kit	22882-10
12	External switch cable included with kit	Part of P/N 67259
13	External switch included with kit	Part of P/N 67259
14	Main NavController II cable	54601

GFX-750/XCN-1050 display: Components

This graphic shows the Autopilot system using NAV-900 as an external guidance device.

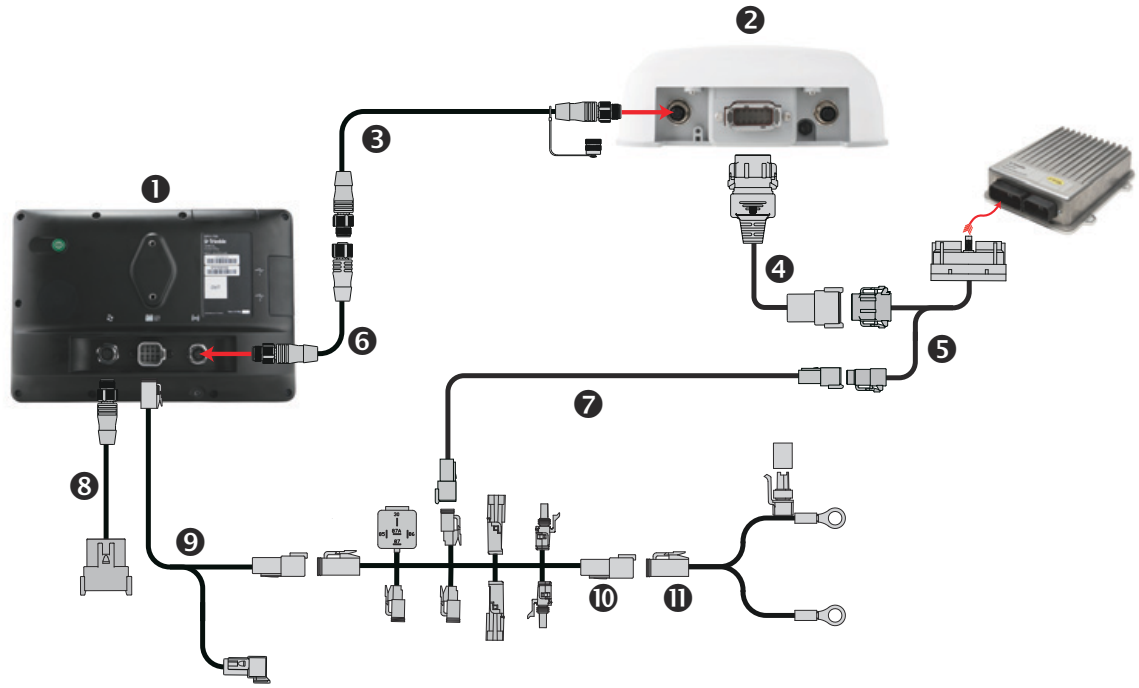

Item	Description	Trimble part number
1	GFX-750/XCN-1050 display, with PIQ App	121000-XX
2	NAV-900 Guidance controller	108993-05
3	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR), 5 m	110540
4	Cable Assy, NAV-900 to Nav II/III, AutoPilot™	110547
5	Cable, NavController II/III, Main	54601
6	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR) Extension, 2.5 m. Optional extension for large vehicles	112082
7	Cable Assy, 2 PIN DTM to 2 PIN DT Power Adapter	67095
8	Cable Assy, GFX-750/XCN-1050, Expansion Port Basic, RS-232, Dig I/O, 2.5 m	110545
9	Cable Assy, GFX-750/XCN-1050, Power to display, CAN, 2.5 m	110551
10	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Power with Relay and Switch (Acc)	67259
11	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Basic Power, 4 m	67258


CFX-750 and GFX-750 displays: Installing the power harness

NOTE – Unless otherwise stated, instructions for "the display" refer to either the CFX-750 display or the GFX-750 display.


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Connect the basic power cable to the vehicle battery and then route the cable into the cab.

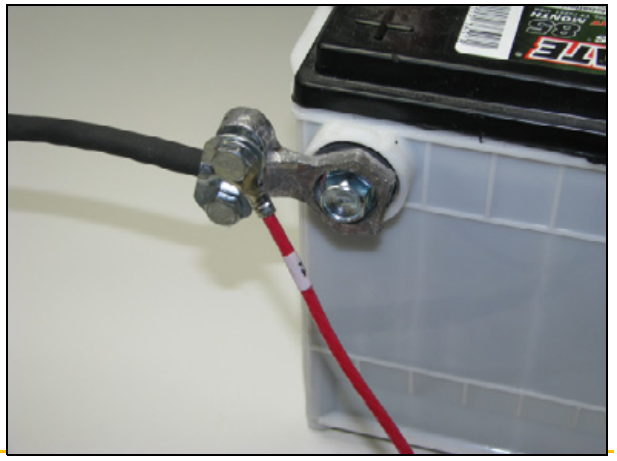


CAUTION – If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example.
Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

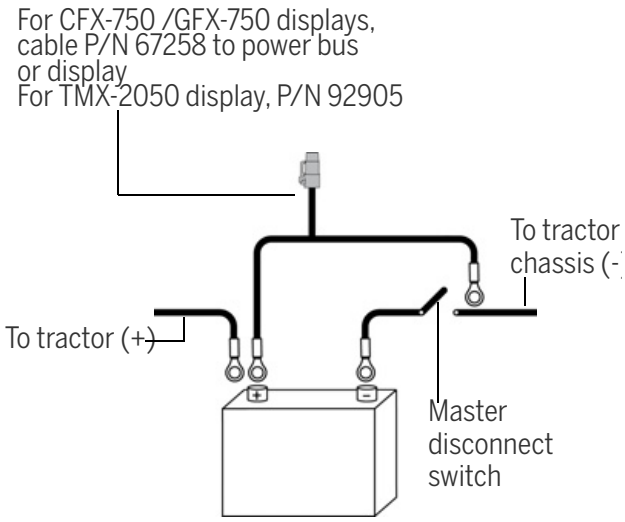

Step 2

Locate and connect the 4-pin Deutsch DTP receptacle on the power bus ❶ to the 4-pin Deutsch DTP plug ❷ on the basic power cable and then remove the protective cap from the 4-pin Deutsch DTP plug ❸ on the power bus and connect the plug to the 4-pin Deutsch DTP receptacle ❹ on the display power adaptor.

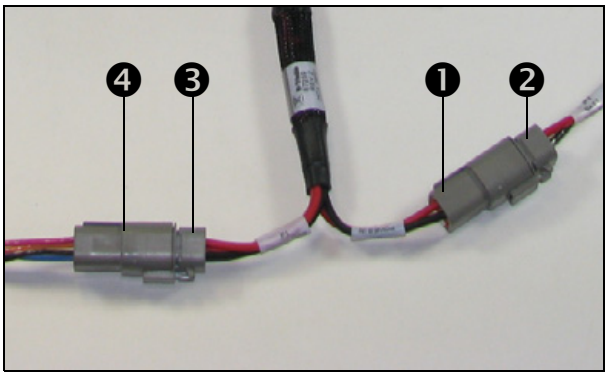

Step 3

Route the display power adapter to the display mounting location and then connect it to the display.



CFX-750 display

CFX-750 and GFX-750 displays: Configuring the power bus options

NOTE – Unless otherwise stated, instructions for "the display" refer to either the CFX-750 display or the GFX-750 display.


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

When you use the power bus cable, use one of the following configuration methods to turn on the Autopilot system:

- Display power button is used to turn on the Autopilot system
- External switch is used to turn on the Autopilot system
- Ignition is used to turn on the Autopilot system

Display power button is used to turn on the Autopilot system

Connect the 2 pin connectors labeled **R2** and **P2** on the power bus.

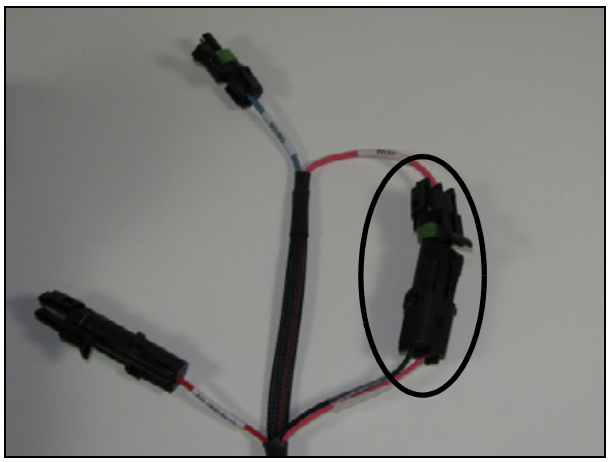


External switch is used to turn on the Autopilot system

Step 1

Connect the cable labeled **R7** switch ❶ (included with the power bus) to connector labeled **P2** on the power bus ❷ and then route the cable labeled **R7** to a switch location.


NOTE – To install the switch provided, drill a ¾" hole.

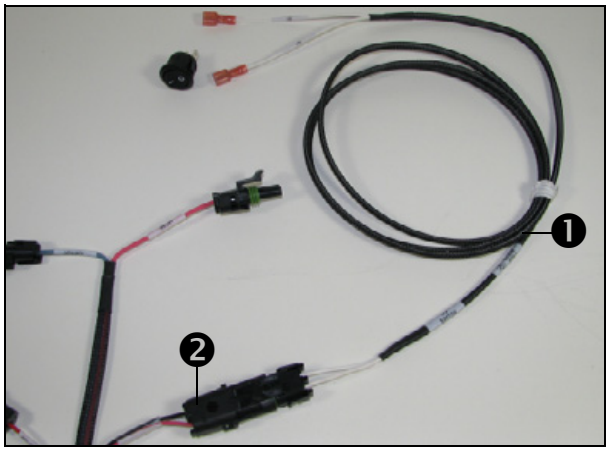

Step 2

Connect the cable labeled **R7** to the switch pins.

NOTE – Polarity is not important.

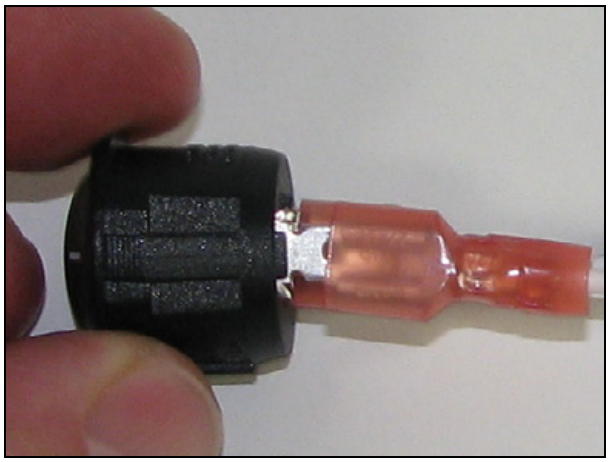


Installing the optional illuminated full or standard Euro switch

Step 1

Find an available knockout location on the vehicle console.

NOTE – An alternative location is required for the switch provided.

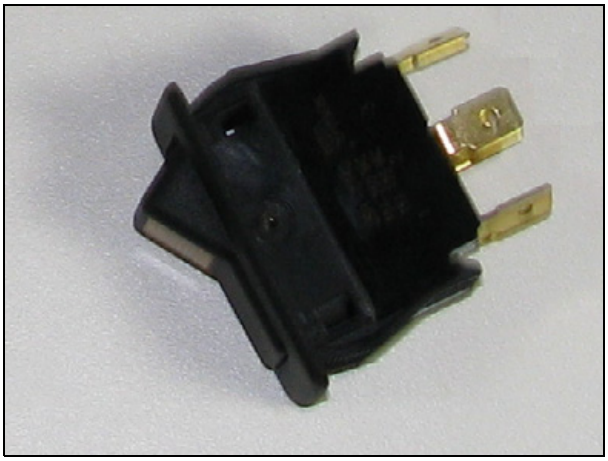


Step 2

Route the cable labeled **R7** to the switch location and then connect the cable to the illuminated switch.

Connect the wire labeled **S1** to pin 5 on the switch and then connect the wire labeled **S2** to pin 4 on the switch.


NOTE – Polarity is important.

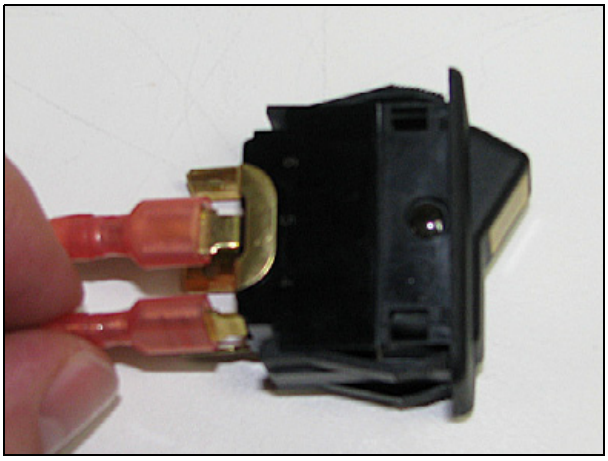

Step 3

Connect a separate wire to pin 3 on the switch using a spade connector. Route the wire and then connect it to the vehicle switched power.


NOTE – This additional wire is required to allow the switch to illuminate.

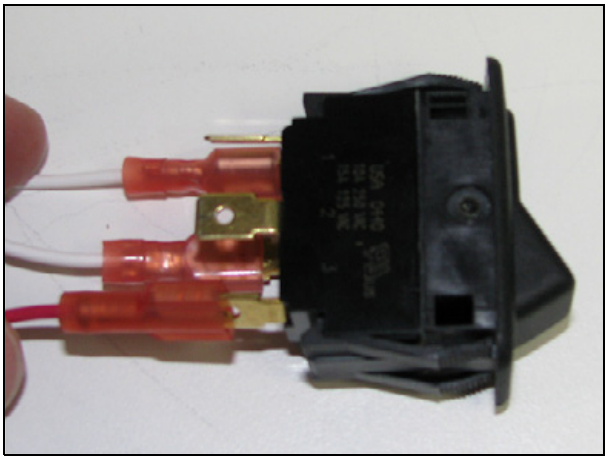

Ignition is used to turn on the Autopilot system

Step 1

Connect the 2-pin connectors labeled **R2** and **P2** on the power bus.

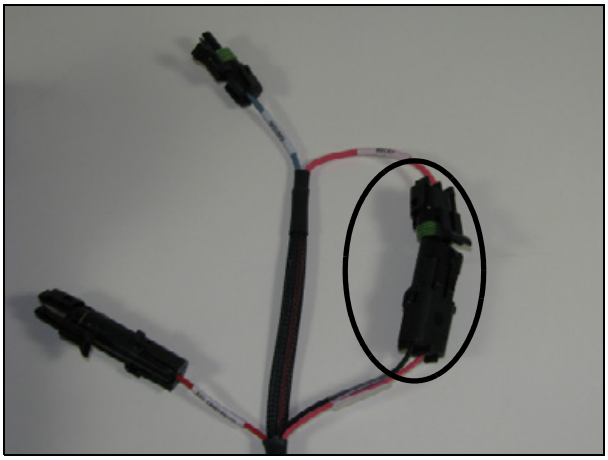


Step 2


Connect the cable labeled **R8 Ignition** (included with the power bus) to connector **P3 Ignition** on the power bus.

Step 3

Route the cable to the vehicles ignition.

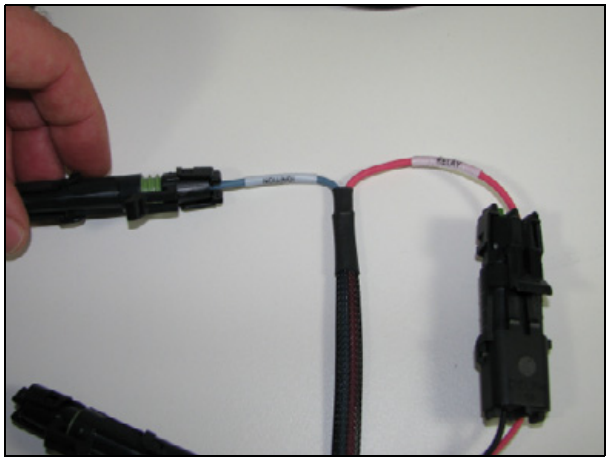

TMX-2050 display: Components

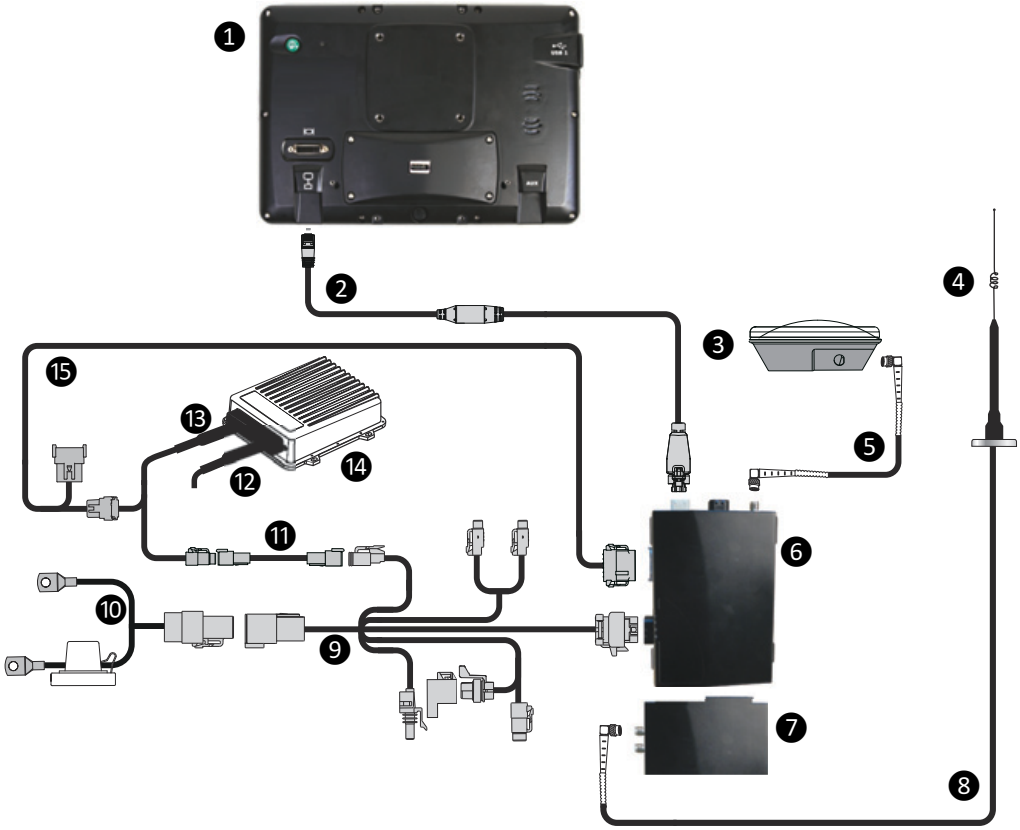


Item	Description	Trimble part number
1	TMX-2050 display	96700-00
2	TM-200 Module to display cable	93843
3	AG-25 GNSS antenna	77038-00
4	900 MHz radio antenna kit	22882-10
5	8 m GNSS TNC/TNC RT angle cable	50449
6	TM-200 Module	95060-00
7	AG-815 radio	
8	NMO-to-TNC 20 ft antenna cable and base	72122
9	TM-200 Module power and I/O cable	92676
10	Cable, battery	92905
11	2-pin DTM to 2-pin DT power adapter cable	67095
12	Cable, NavController diagnostic	54602
13	Main NavController cable	54601
14	NavController	55563-00 55566-00
15	TM-200 Module to NavController cable with port replicator	75741

TMX-2050 display: Installing the power harness


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the basic power cable to the vehicle battery and then route the cable into the cab.

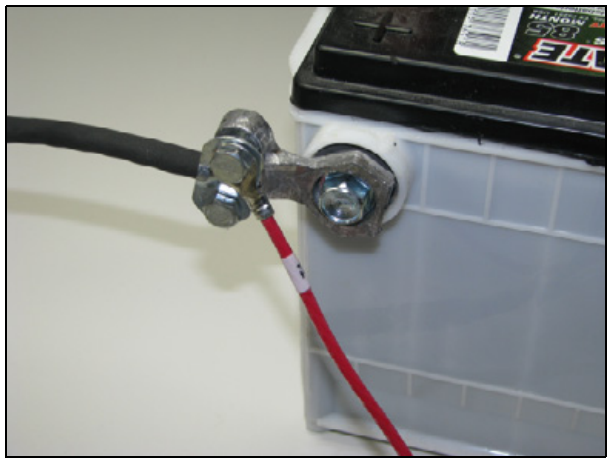

⚠ **CAUTION –** If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example.
Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

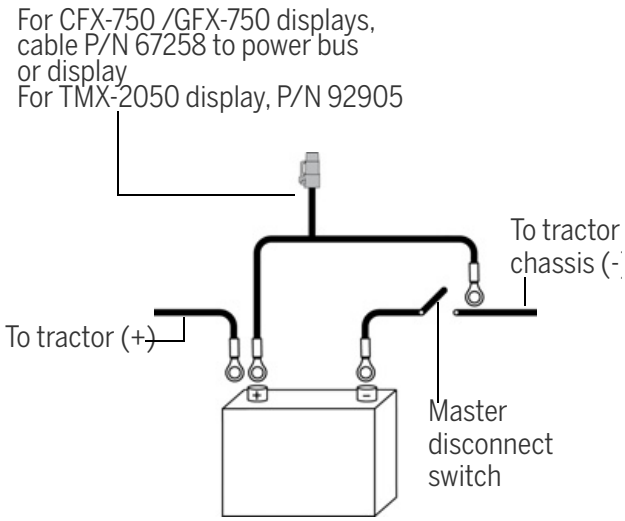


Step 2

Connect the power I/O cable P/N 92676 to the power port on the TM-200 Module.



Step 3


Route the power cable P/N 92905 that you previously connected to the battery and connect it to the R3 power in plug on the P/N 92676 cable.

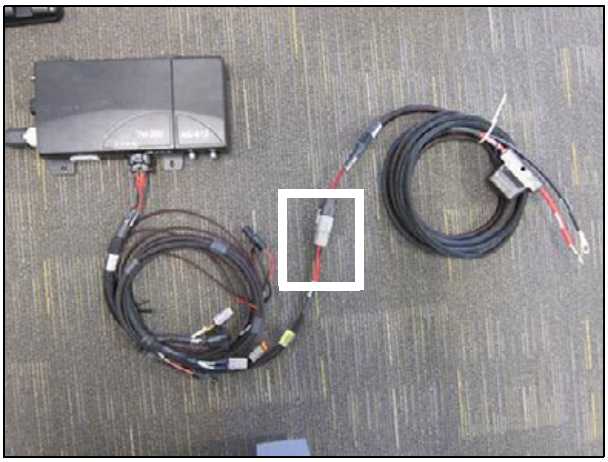

Step 4


Connect the 2-pin DTM to 2-pin DT power adaptor P/N 67095 to the P2 power out connector on the P/N 92676 cable.

Route the other end to the NavController harness P/N 54601.

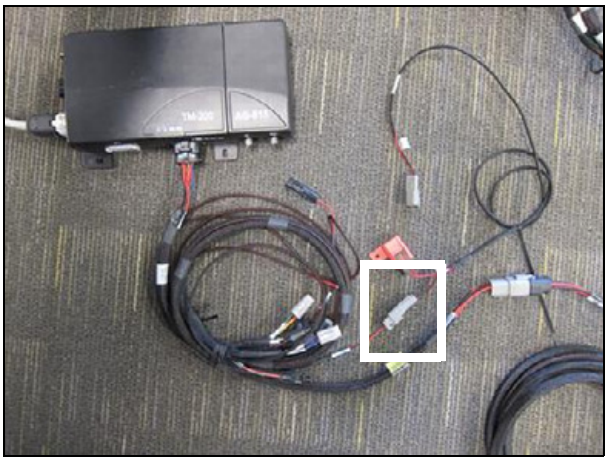

Step 5

Connect the other end of the P/N 67095 cable to the P2 power plug on the P/N 54601 cable.

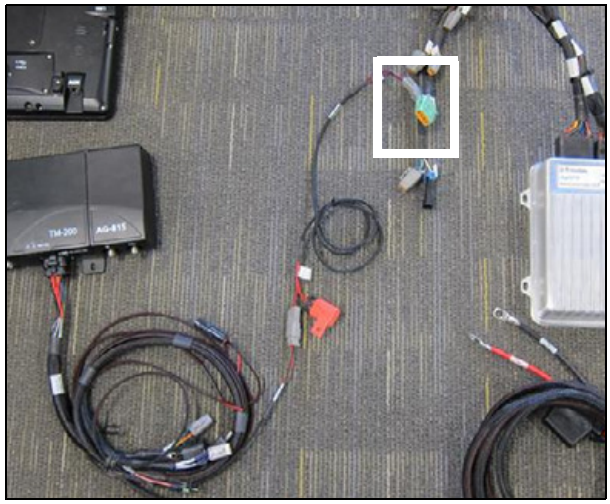

TMX-2050 display: Configuring the power options


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

When you use the power bus cable, use one of the following methods to turn on the Autopilot system on the Trimble TMX-2050 displays:

- The display power button. No further changes need to be made to the power cables.
- Ignition sensing. See below.

Ignition sensing


For ignition sensing with the TMX-2050 display, connect the ignition on the power supply to the R1 connector on the harness, P/N 92676.

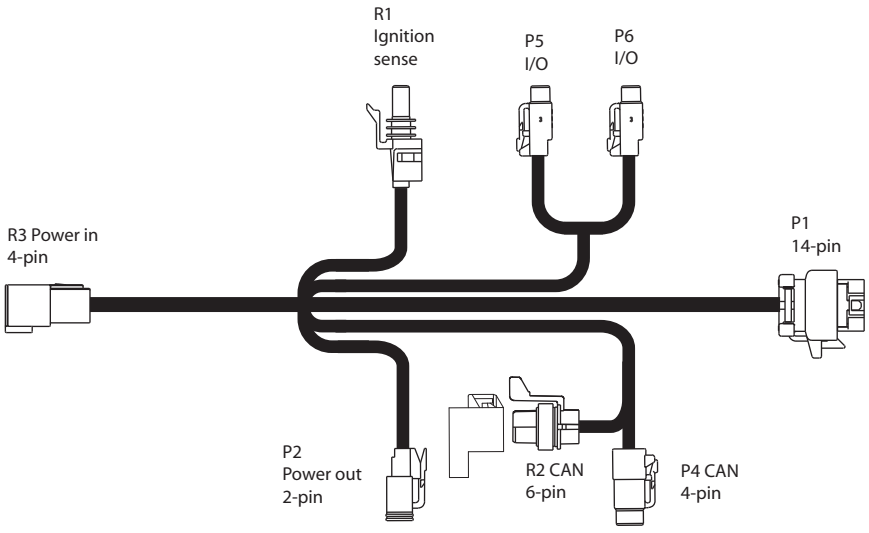

For more information on how to use the ignition sensing option, refer to the *TMX-2050 Display User Guide*.


Step 1

Locate the R1 ignition sensing plug on the P/N 92676 cable; also locate the ignition sensing wire provided with the P/N 92676 cable.

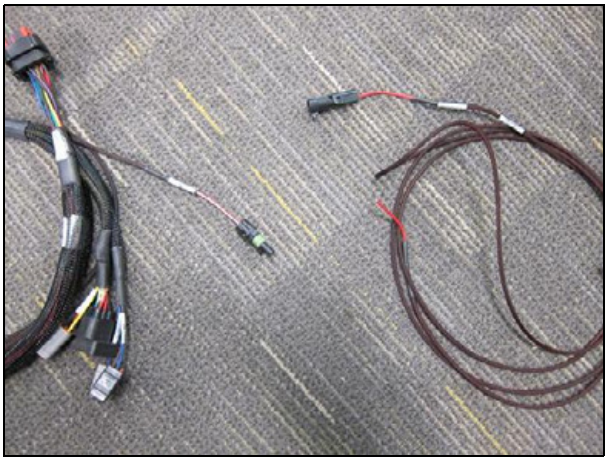

Step 2

Connect the red ignition sense wire to the vehicle ignition source then route to the plug on the harness and then connect it.

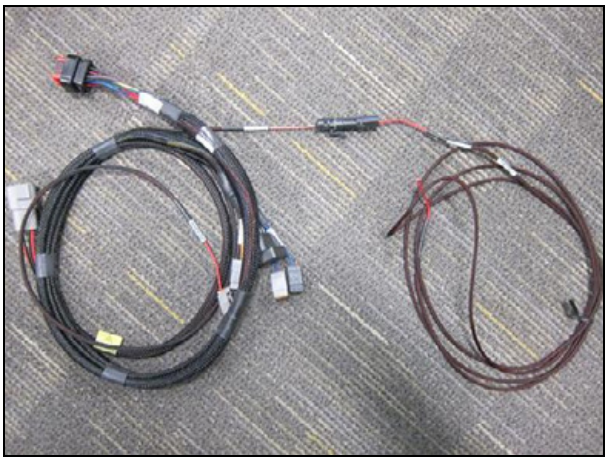

7

Remote Engage Switch Installation

- Remote engage switch components: Rocker switch
- Remote engage switch components: Foot switch
- Preparing the remote engage cable
- Installing the Remote Engage push button (P/N 101250)
- Using the remote engage switch


Remote engage switch components: Rocker switch



Item	Description
1	DTM receptacle
2	Remote engage rocker switch

NOTE – This is a Full or Standard Euro switch, depending on the kit ordered.

Remote engage switch components: Foot switch

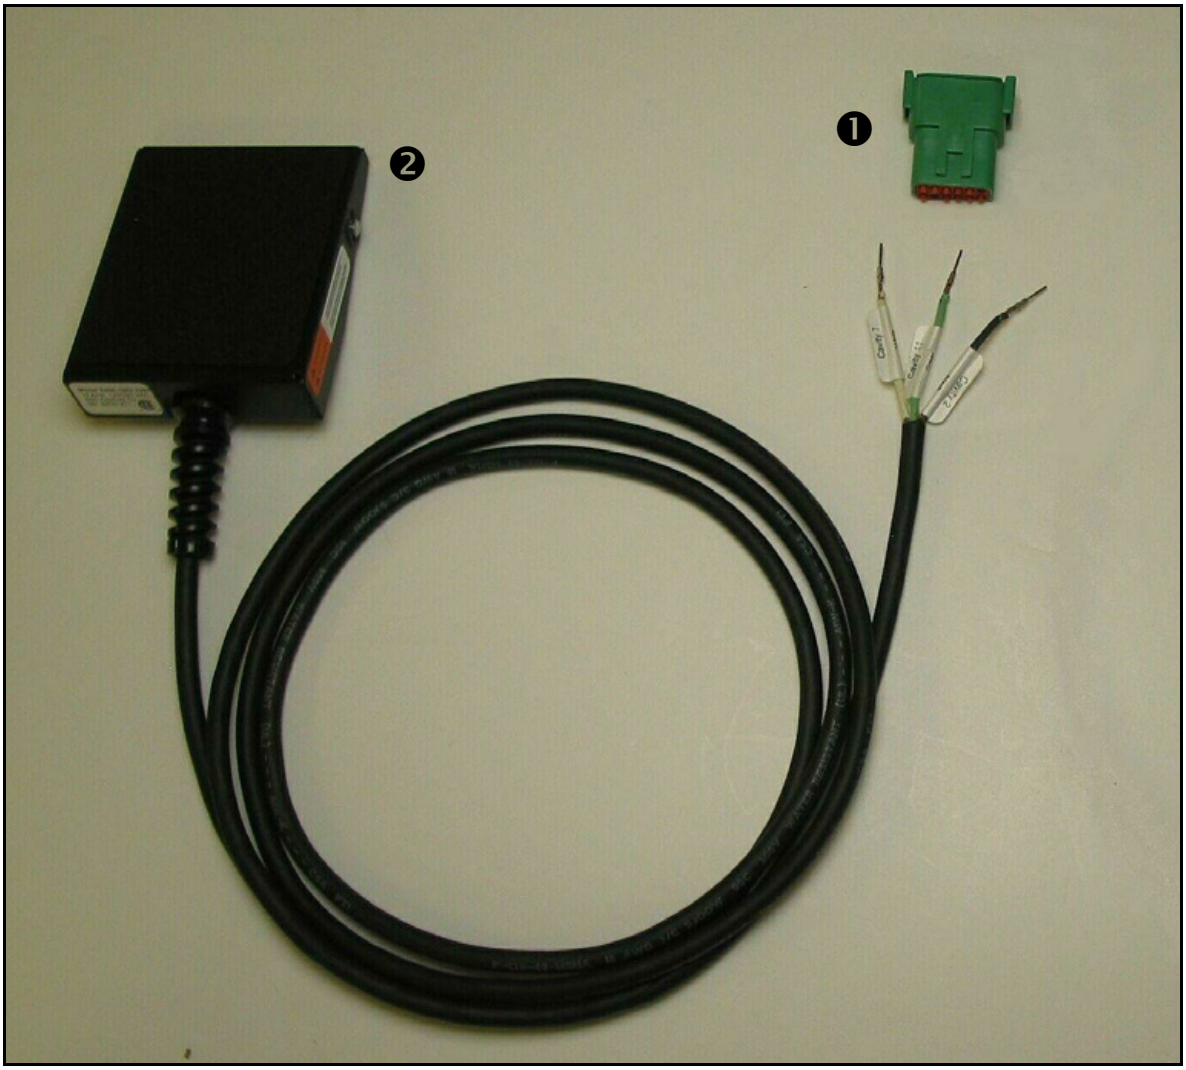


Item	Description
1	DTM receptacle
2	Remote engage foot switch

Preparing the remote engage cable


Step 1

Locate the green 12-pin Deutsch receptacle on the P5 leg of the main controller harness. For more information, see Chapter 8, Controller Installation.

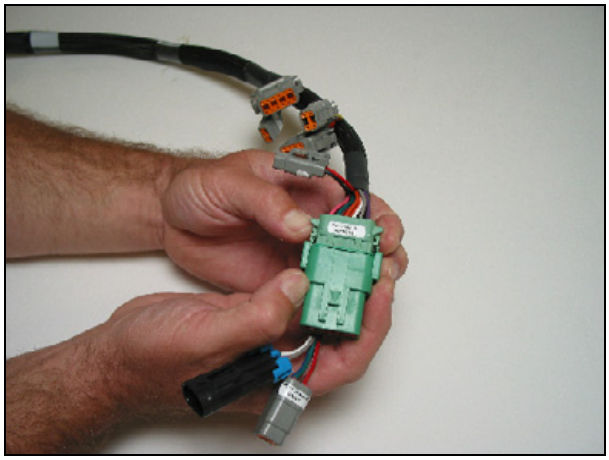

Step 2


Remove the wedge from the connector.

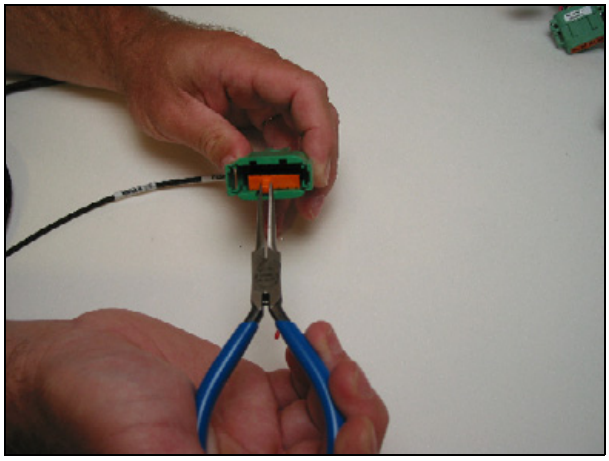

Step 3


Rocker switch only

Remove the plugs from cavity 2 and cavity 7.

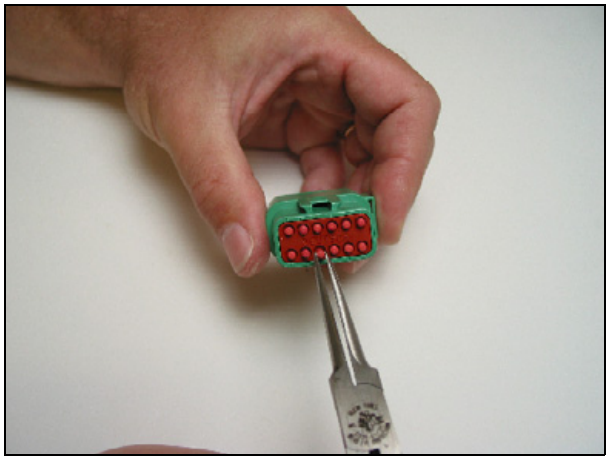

Foot switch only


Remove the plugs from cavity 2, cavity 7, and cavity 11.

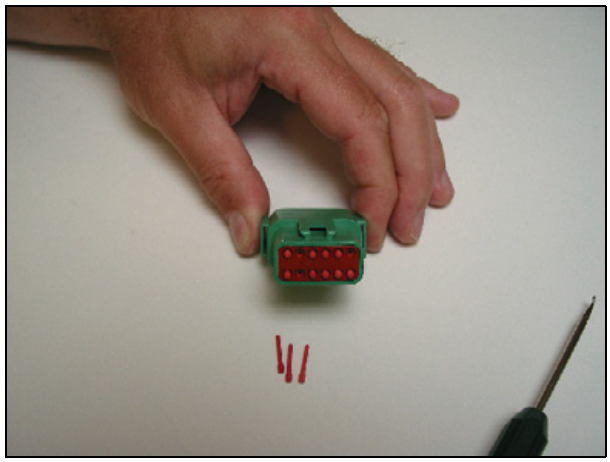

Step 4


Rocker switch only

Insert the DTM pins into cavity 2 and cavity 7, according to the labels on the wires.

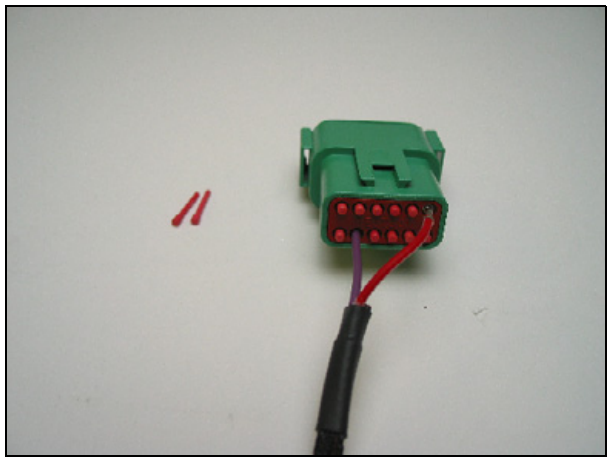


Foot switch only

Insert the DTM pins into cavity 2, cavity 7, and cavity 11, according to the labels on the wires.

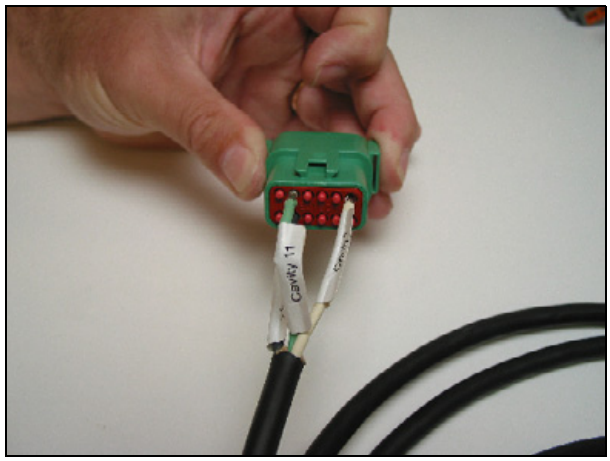

Step 5

Pull on the wires to seat them in place and then replace the wedge in the connector.

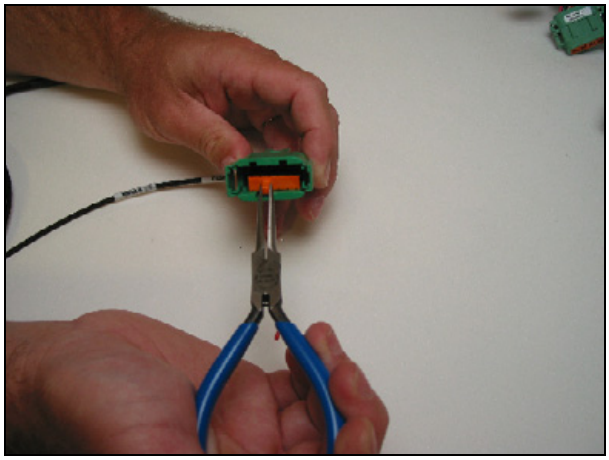

Step 6

Replace the receptacle on the P5 plug of the NavController harness.

Step 7

Rocker switch only

Run the spade ends of the cable to a knockout location in the operator console.



Foot switch only


Run the cable to a clear location on the floor board. Use double-sided tape to secure the pedal. Route the cable under the floor mat.



Step 8

Rocker switch only

Connect the wires to the switch. Match the print on the switch body with the labels on the wires.

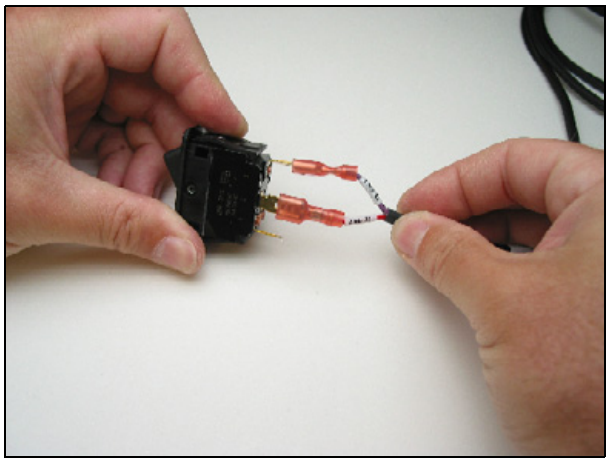

Step 9

Rocker switch only


Place the switch in the console.



Installing the Remote Engage push button (P/N 101250)

Step 1

Locate the push button cable assembly (P/N 101250) and verify that the 12-pin green Deutsch connector, wedgelock, and seal are included in the small Ziploc bag.

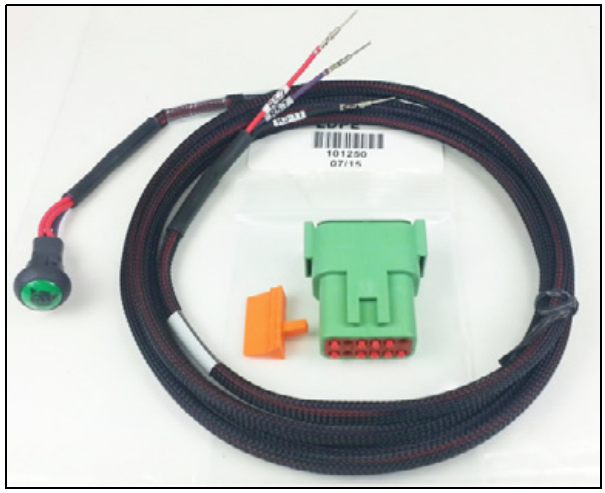

Step 2

Locate a convenient location on the machine to install the switch. It should be easily accessible while driving but should not interfere with any other machine controls.



Step 3

Remove the panel from the desired installation location to verify that there is adequate clearance for the switch and cable. Take care that the cable will not interfere with any gear levers.



Step 4

Drill a ½" hole for the switch.



Step 5

Thread the cable through the clear round seal, and slide it up until it reaches the switch.




Step 6

Thread the cable through the hole in the instrument panel.



Step 7

Push the button down until it seats. The locking tabs will hold it securely in place.

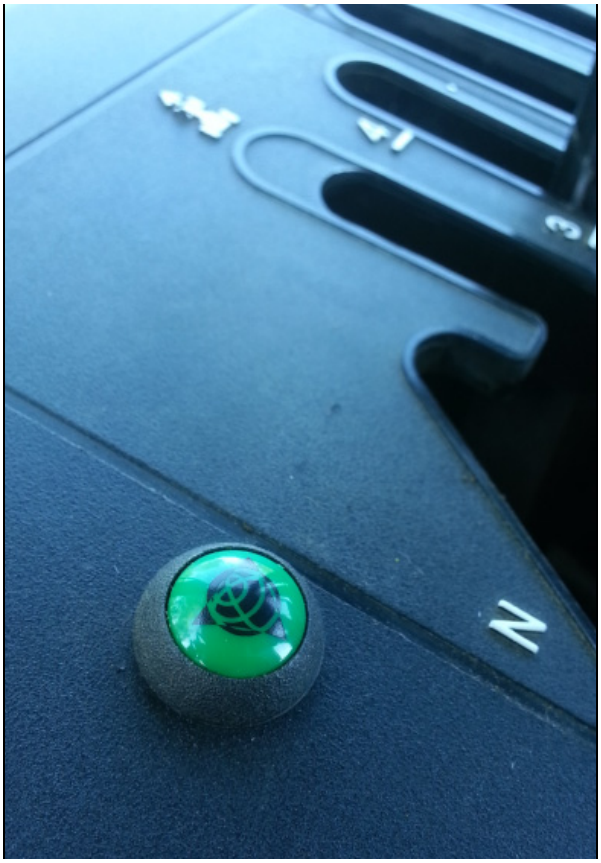


Step 8

Route the cable as desired, and insert the contacts into the 12-pin connector as labeled.



Step 9

Plug the 12-pin receptacle into the mating green plug (P5) on the NavController main harness (P/N 54601). Verify that the button works properly before proceeding. In dim lighting, the button has an LED backlight which will be visible whenever the NavController is powered on.

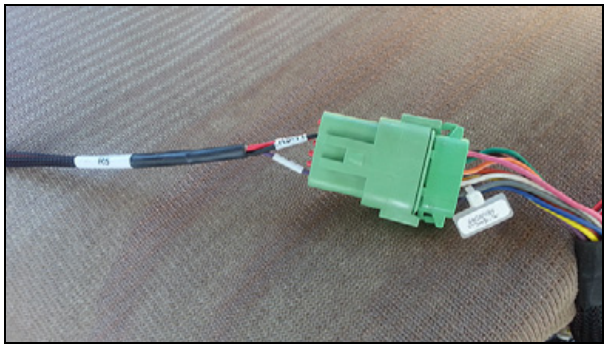

Step 10

Reinstall the panel and secure loose cables with wire ties.



Using the remote engage switch

To engage a system using NavController do one of the following:

- Firmware versions 5.20 and earlier: Hold down the remote engage switch for longer than 0.5 seconds and less than 4 seconds.
- Firmware 5.21 and later: Hold the switch down for longer than 0.15 seconds and less than 4 seconds.

The system engages when you release the switch.

8

Controller Installation

- Installing the controller
- Controller connections

Installing the controller

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the .

The process below describes how to install the NavController II next to the seat, along the wall of the machine, as shown.

The orientation is:

- Yaw: 270
- Pitch: 90
- Roll: 0





Step 1

Using the NavController II bracket as a template, carefully level the bracket then mark and drill four 5/16" holes for fixing the bracket to the machine.

Then, use the provided ¼" hardware to attach the bracket to the machine.

Step 2

Before you install the controller, attach the main and auxiliary cable harnesses. Use an Allen wrench to secure the connectors to the controller.




Step 3

Use the four provided 10-32 screws to attach the NavController II to the mounting bracket.





Controller connections

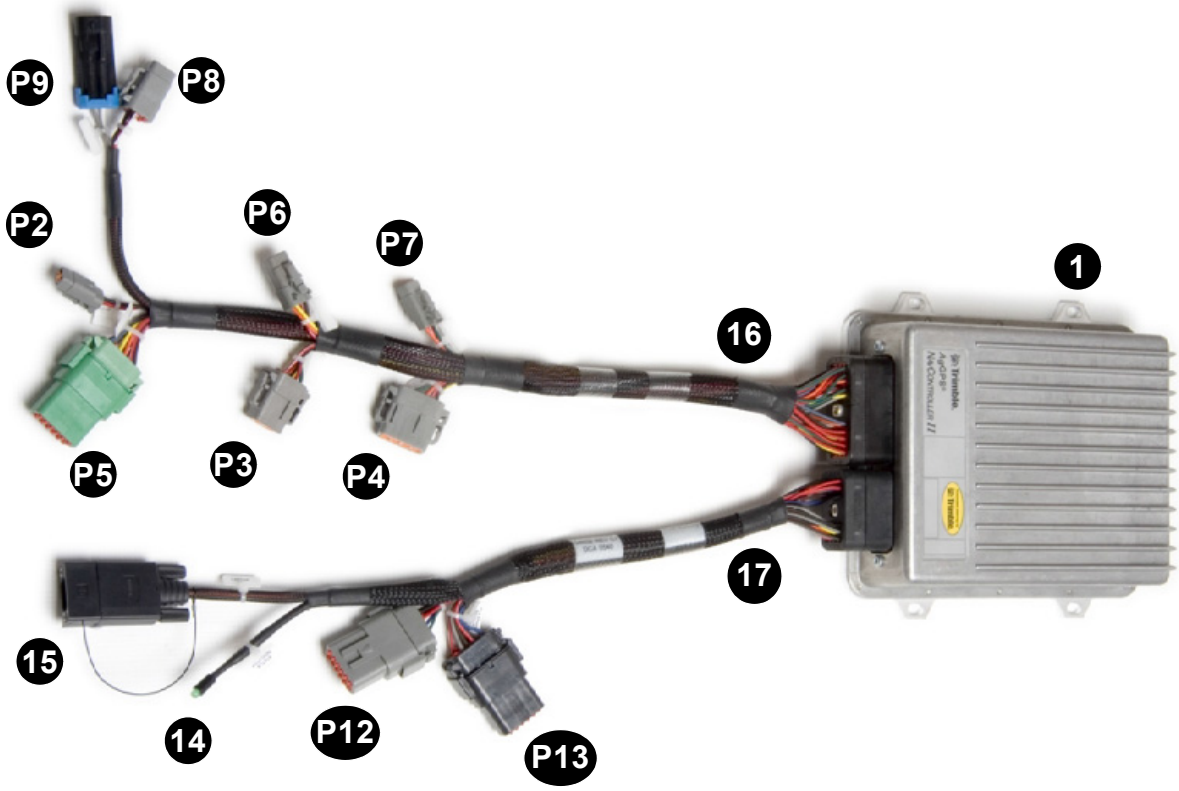


Item	Description	Item	Description
1	NavController II controller	**P9**	Sonalert connector
P2	Power connector	**P12**	Lightbar/spare connector
P3	GNSS connector	**P13**	Spare sensors connector
P4	Display connector	**14**	Status indicator
P5	Vehicle sensors connector	**15**	Laptop connector
P6	Steering sensor connector	**16**	Main harness
P7	Manual override connector	**17**	Auxiliary harness
P8	Hydraulic valve connector		

Step 1


Connect the power cable connection to P2, which is labeled **Power**. P2 is located on the main wiring harness.

NOTE – The power connection supplies power through the controller to all connected devices, including GNSS and displays.

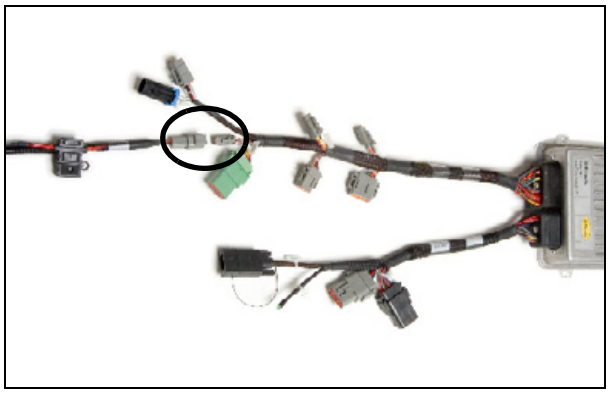

Step 2

Connect the CFX-750 display to P3, which is labeled **GPS**. P3 is located on the main wiring harness.

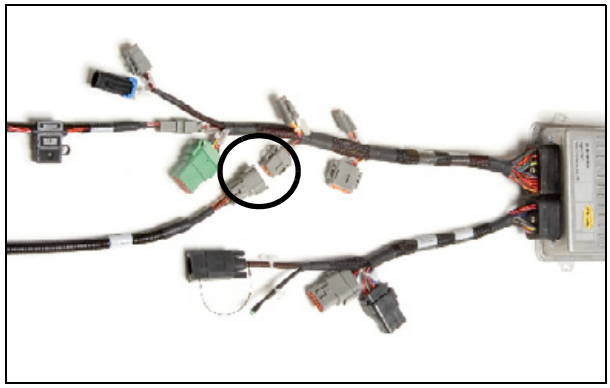


Step 3

See Connecting the IMD-900 harness to the 54602 harness, page 34 for the Steering Sensor connection to the main wiring harness.

Step 4


Connect the manual override cable connection to P7, which is labeled **Manual Override**. P7 is located on the main wiring harness.

NOTE – When you install the remote engage harness, add the pins to the existing connector.

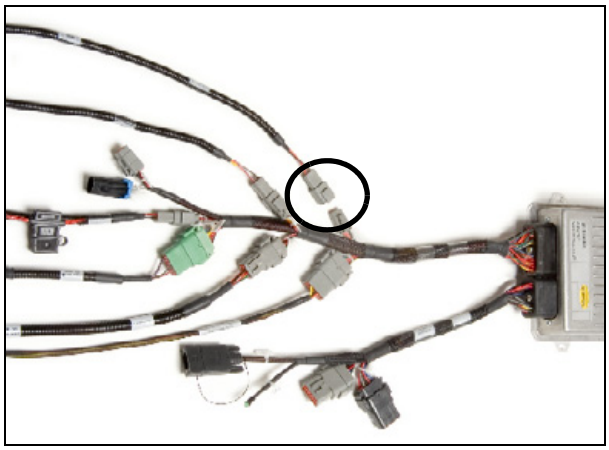


Step 5

Connect the hydraulic steering valve cable connection to P8, which is labeled **Hydraulic Valve**. P8 is located on the main wiring harness.

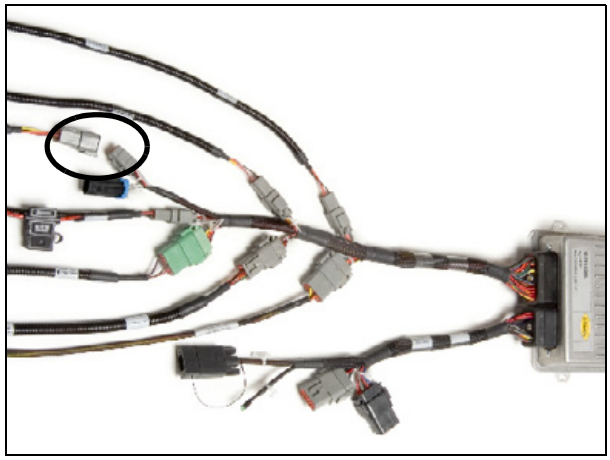


Step 6

Connect the Sonalert P9 to the 2-pin Delphi connector on the main wiring harness. Route the cable so the Sonalert warning device is in a position that is audible to the operator.

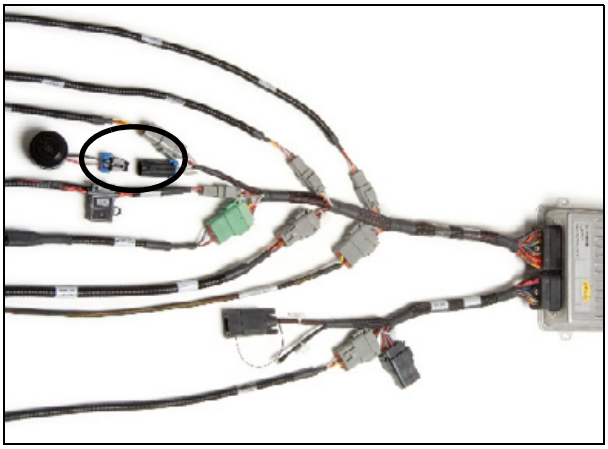

Step 7

Route the LED and laptop lead, which is located on the auxiliary wiring harness, to a location that allows the operator to determine the controller status. See controller LED status for status determination. Six flashes per second indicates a correctly functioning controller.

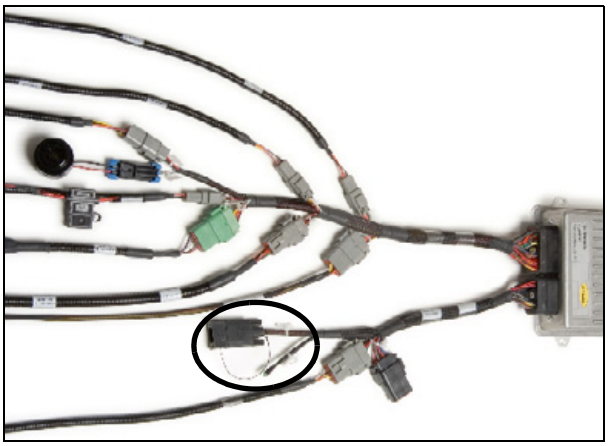

Step 8

Use the provided sleeving to secure the harness cables with tie wraps. Cover and route the cable bundle to avoid damage to connectors and strain on wire connections.

9

Isolation Models Setup Instructions

- Connecting the isolation solenoid cable
- Configuring the NavController III to turn on the electronic isolation manifold
- Setting the load sense relief pressure
- Adjusting the isolation manifold pressure reducing valve (PRV)


These instructions must only be completed by users familiar with operation of H4 manifold.

Connecting the isolation solenoid cable

Connect the P/N 100199 and 103378 cables to provide power to the Autopilot cut-off coil.

Locate the supplied P/N 103378 and 100799 isolation manifold cable in the isolation manifold kit.



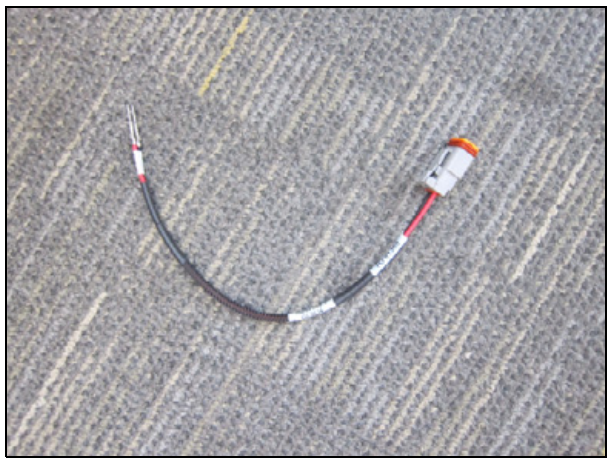

Isolation manifold power connection (available only with NavController III)


NOTE – This feature is not available with the NavController II.

NOTE – This connection type activates the isolation manifold automatically, using the third solenoid drive function of the NavController III.

Follow this procedure to connect the P/N 100199 cable to the NavController III harness, P/N 54602.


Step 1

Locate the supplied P/N 100199 cable in the isolation manifold kit.

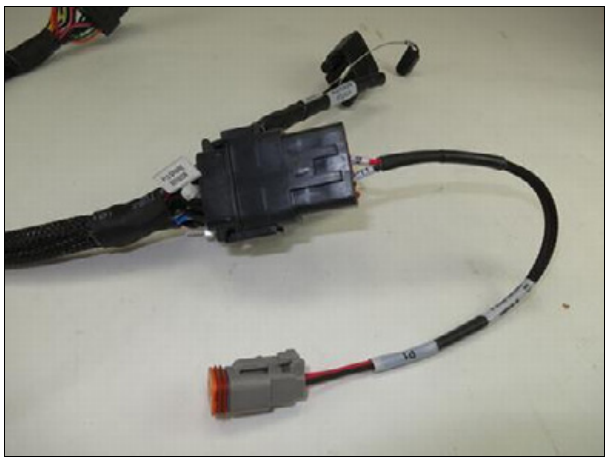


Step 2

Locate and remove the connector plug from the P/N 54602 P13 connector.

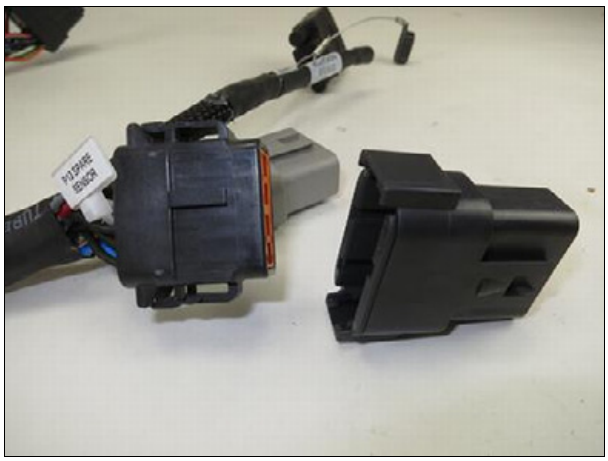


Step 3

On the rear of the plug, remove the sealing pins from the 9 and 11 sockets.

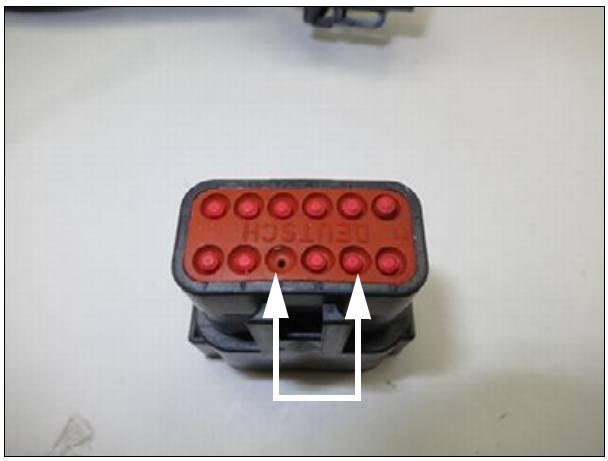


Step 4

On the inside of the connector, locate the orange wedge lock.

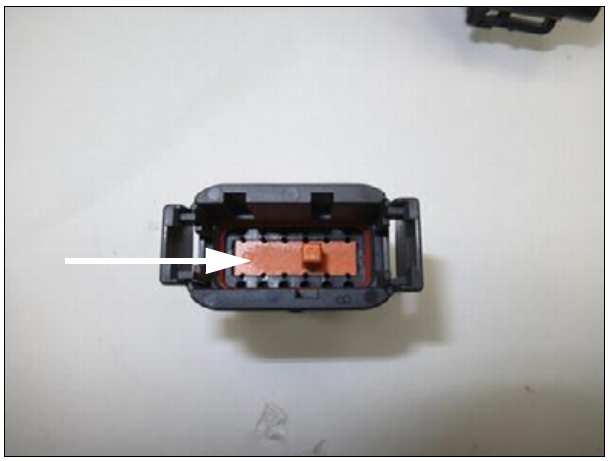


Step 5

Use needle-nose pliers to remove the wedge lock by pulling it straight out of the plug connector.

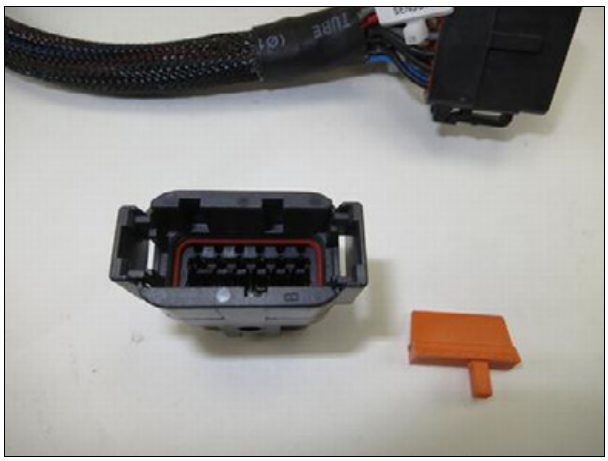


Step 6

Insert the pin labeled **to p13-9** into the 9-pin location on the connector plug.

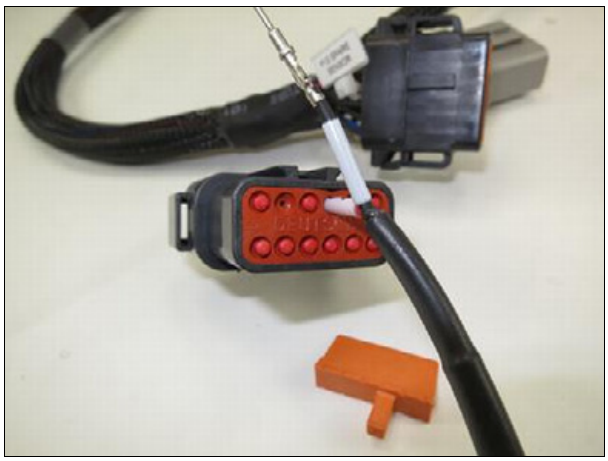


Step 7

Insert the pin labeled **to p13-11** into the 11-pin location on the connector plug.

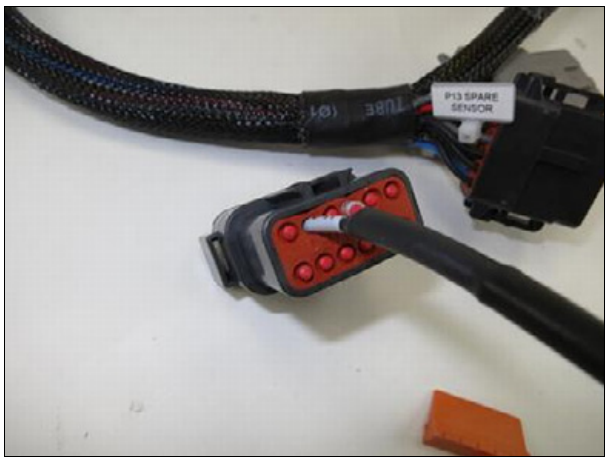


Step 8

Re-install the orange wedge lock into the connector plug.

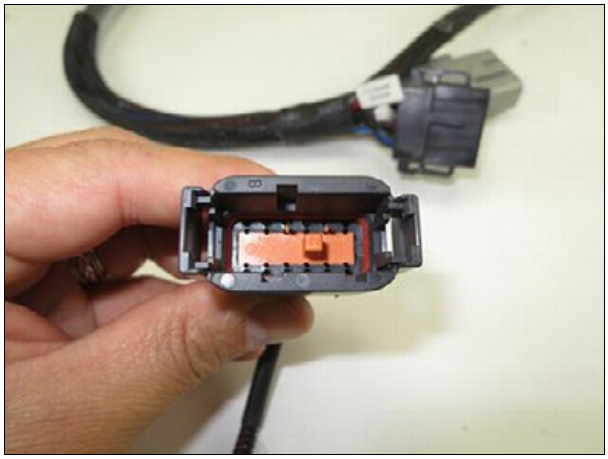


Step 9

Connect the P13 plug to the P/N 54602 harness on the NavController III.

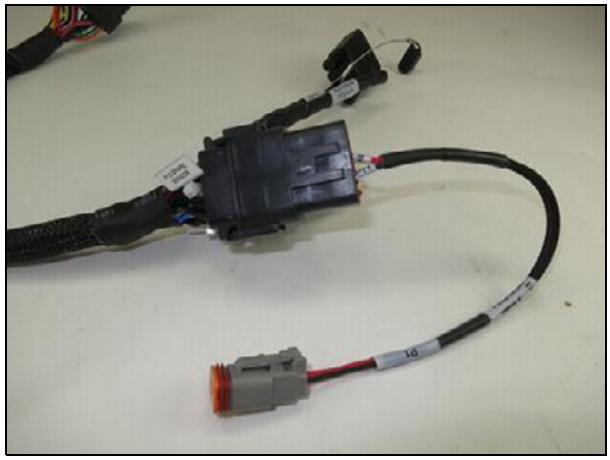


Step 10

Connect the R1 connector on cable P/N 103378 to the P1 connector on cable P/N 100799.

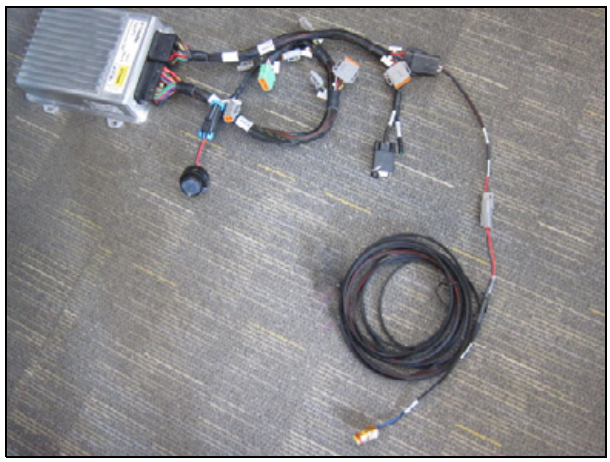

Step 11 - Connecting to the solenoid


Route the P2 plug of cable P/N 103378 to the Autopilot manifold isolation solenoid and connect it as shown.

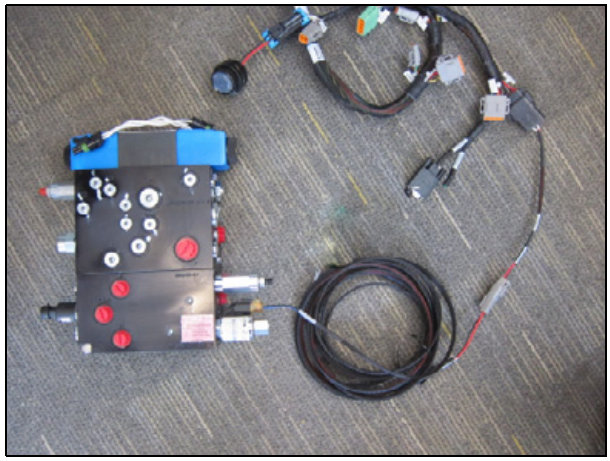




Configuring the NavController III to turn on the electronic isolation manifold

1. In Autopilot Toolbox version 3.3 or later, in the Setup screen, click the **Configuration** tab, select **Steering Control** and then click **Edit**:

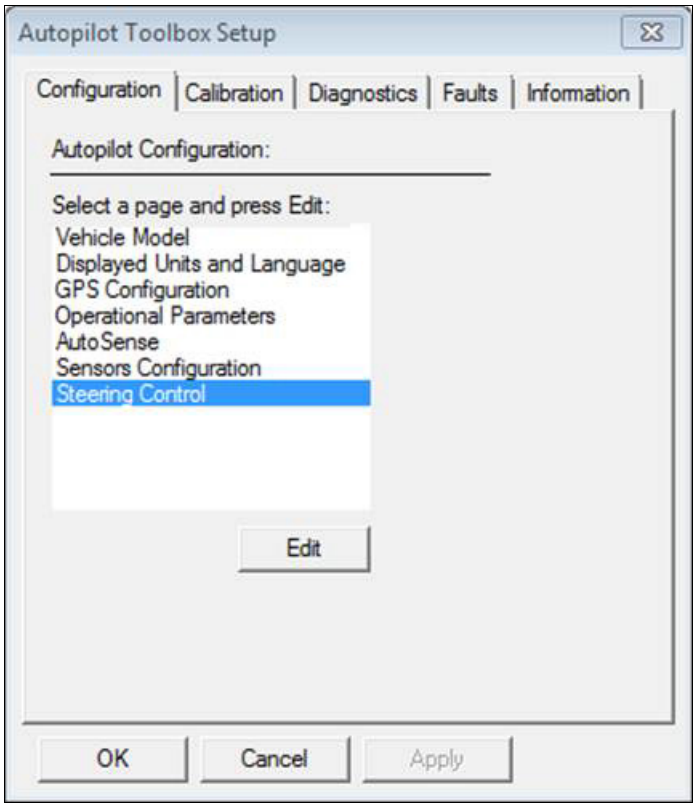

2. From the **3rd Solenoid Output** drop-down list, select **On When Engaged** and then click **OK**:

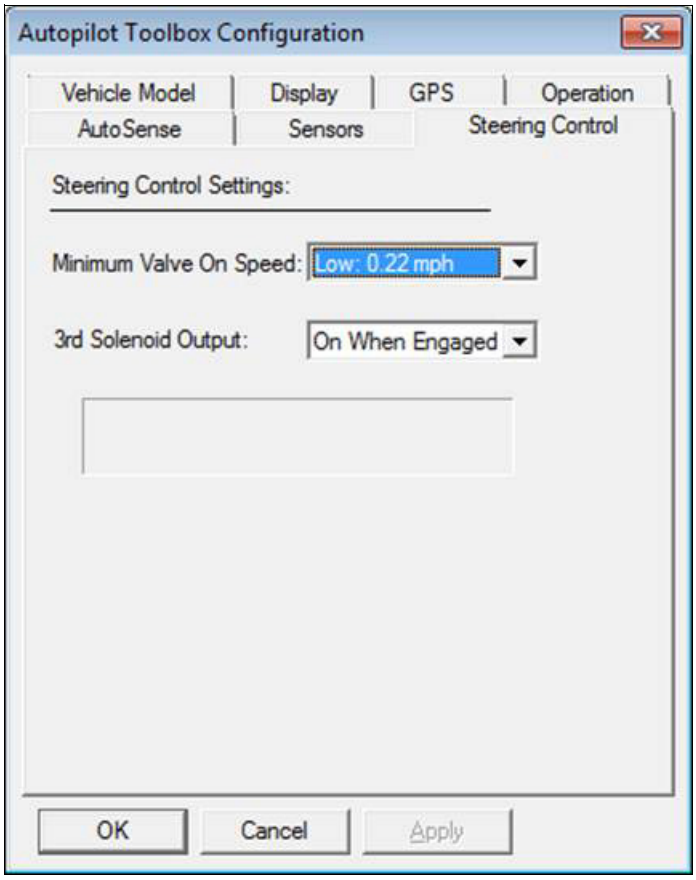

NOTE – The **Minimum Valve On Speed** applies also to the third solenoid valve. The third solenoid will not be active until the set speed is reached. If the vehicle drops below the selected speed, the third solenoid will no longer be active.

Version 5.61 of TMX-2050 firmware and v1.61 of GFX-750 firmware have the third solenoid UI in both **FMX+** and **PIQ** user interface.

Setting the load sense relief pressure

The Load sense relief pressure should be set approximately 100 psi lower than the system relief pressure to allow margin in the adjustment and to fully protect the system. The default setting of the LS relief valve is 2700 psi. If a lower pressure is required, these instructions will provide a procedure for adjusting the LS relief pressure. The relief pressure should not be increased above 2700 psi.

Preparing to set the relief pressure

Step 1

Install a pressure gauge into the LS2 port; if no DSV2 cartridge is present, the PX ports can also be used.

Step 2

Connect the P line of the manifold to a 3000 psi pressure source such as a remote on a tractor.

Step 3


Connect the T line of the manifold to an oil tank or return line on the remote of a tractor.


Step 4

The A and B / SCU-A, SCU-B lines: May be either connected to the steering cylinders / orbitrol or capped off for this test.

Step 5


Loosen the jam nut on the LS relief valve'

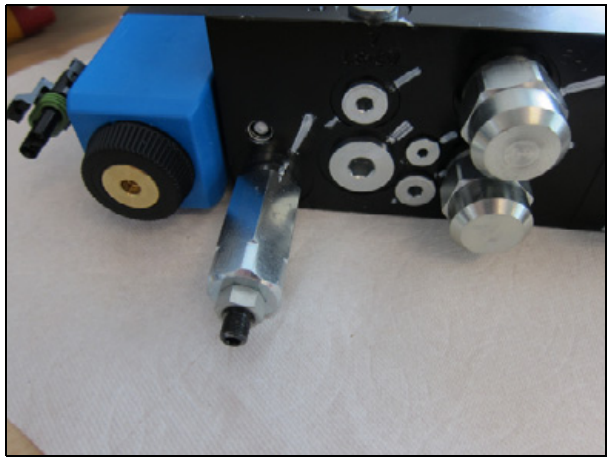

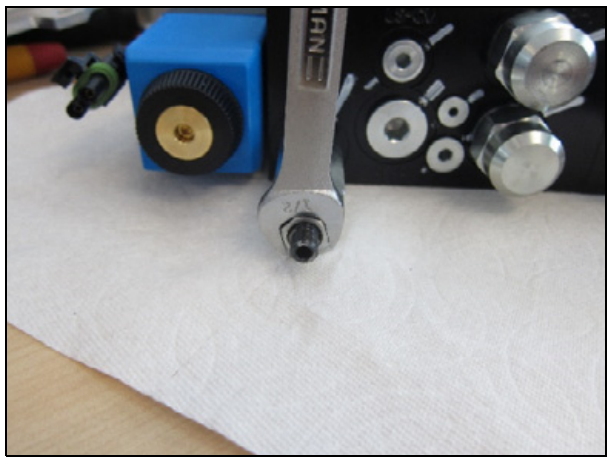


Step 6

With pressure applied to the P port (on machines with the isolation manifold, power must be applied to the isolation solenoid), press on one of the Detent overrides on the electro hydraulic valve. If the steering cylinders are present in the system, make sure to run the override until you hit and end stop to ensure you are at peak pressure.

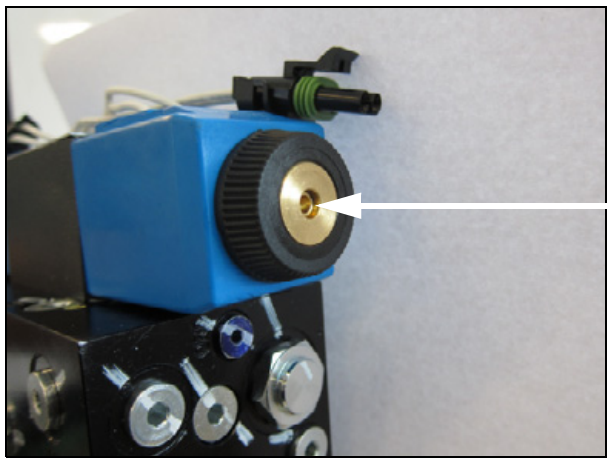

Step 7

With the override pressed, turn the relief valve in or out and watch the gauge to set the LS relief pressure.

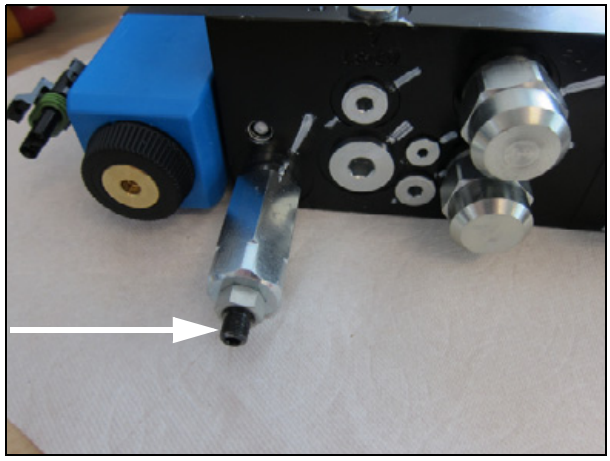

Adjusting the isolation manifold pressure reducing valve (PRV)

⚠ **CAUTION –** Increasing the pressure setting of the PRV can lead to the loss of ability to mechanically override the autopilot steering.

The isolation sandwich on the H4 manifold uses spring-biased pilot to shift cartridges to toggle between manual steering and Autopilot steering. The manual steering pressure adds to the spring cavity to pilot the cartridges open even in situations where the isolation solenoid were to remain on.

A Pressure reducing valve is present in the system to ensure that the isolation valve pilot pressure can always be overcome by the spring force **+** the manual steering pressure.


In some machines, it may be necessary to adjust the PRV setting in order to bias the cartridges more towards the manual steering or towards the Autopilot steering.

For the system to function as intended, manual steering should always overcome Autopilot steering. To test this function the P/N 103378 cable can be connected to the power bus or other 12 V source, with the switch on and 12 V being supplied to the cut-off coil. Manually steering the machine should result in movement of the wheels.

In the state where the isolation valve is powered when you are not steering manually, the Autopilot should be able to steer the machine; this means that if you were to press on the detent valve overrides you should be able to actuate wheel movement.

Step 1

Locate and loosen the jam nut on the PRV cartridge.

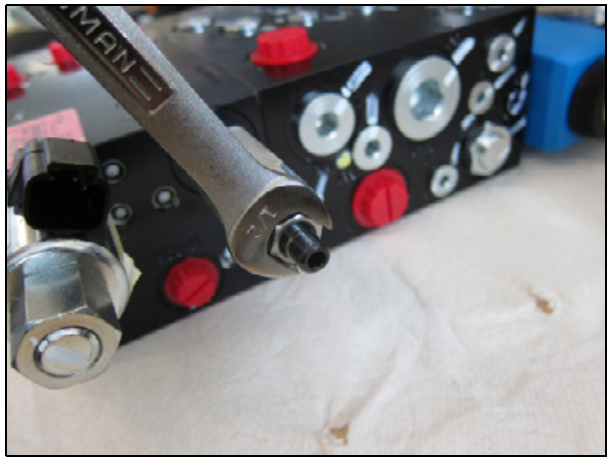

Step 2

Adjust the PRV valve by turning the screw with a hex wrench.

NOTE – Screwing the screw clockwise / inward will *add* pressure to the PRV setting, resulting in an increased bias towards Autopilot steering. This should be done if the Autopilot is sometimes not steering the machine.

Screwing the screw counterclockwise / outward will *reduce* pressure from the PRV, biasing the system more towards the manual steering side. The PRV setting should be decreased if the isolation solenoid is powered and manual steering is sometimes not possible.

10

Final Machine Check

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the .

To perform the final machine check:

1. Connect the battery.
2. Start the machine and check for hydraulic leaks. Correct as needed.
3. Update the Trimble display and the Autopilot NavController II to the latest firmware from http://agpartners.trimble.com.

   You can use FlashLoader 200 software version 3.19 to update the Autopilot controller: Download it from http://agpartners.trimble.com.
4. Load the correct configuration file into the Autopilot NavController II for the vehicle model being used.

   Download the latest set of configuration files from http://agpartners.trimble.com.

   You can use Autopilot Toolbox II software version 4.02 or later to load the configuration file into the Autopilot controller. You can download the Autopilot Toolbox II software from http://agpartners.trimble.com.
5. Calibrate the Autopilot system using the Trimble display or Autopilot Toolbox II software version 4.02 or later. Depending on your machine type, the following items must be calibrated before you can use the Autopilot system:
   - NavController mounting orientation
   - Manual override
   - AutoSense mounting orientation
   - Valve deadzone
   - Autopilot P-gain
   - Antenna height/Antenna axle offset, and Roll offset