Autopilot

AUTOMATED STEERING SYSTEM

INSTALLATION INSTRUCTIONS

John Deere MFWD, MY 2020+

- 6110M ATR
- 6120M ATR
- 6130M ATR
- 6140M ATR
- 6145M ATR
- 6155M ATR
- 6175M ATR
- 6195M ATR

Version 8.00
Revision A
May, 2021
P/N 54035-212-E08

Trimble

Legal Notices

Agriculture Business Area

Trimble Agriculture Division
10368 Westmoor Drive
Westminster, CO 80021-2712
USA
www.trimble.com

Copyright and Trademarks

©1999–2021, Trimble Inc. All rights reserved.
Trimble, the Globe & Triangle logo, FmX, and OmniSTAR are trademarks of Trimble Inc., registered in the United States and in other countries. Autopilot, CFX-750, FM-750, FM-1000, GFX-750, TMX-2050, XCN-1050, and XCN-2050 are trademarks of Trimble Inc. Developed under a License of the European Union and the European Space Agency.
All other trademarks are the property of their respective owners.

Official Language

THE OFFICIAL LANGUAGE OF THESE TERMS AND CONDITIONS IS ENGLISH. IN THE EVENT OF A CONFLICT BETWEEN ENGLISH AND OTHER LANGUAGE VERSIONS, THE ENGLISH LANGUAGE SHALL CONTROL.

Release Notice

This is the May 2021 release (Revision A) of the Autopilot Automated Steering System Installation Instructions, part number 54035-212-E08. It applies to version 8.00 of the Autopilot automated steering system.
The following limited warranties give you specific legal rights. You may have others, which vary from state/jurisdiction to state/jurisdiction.

Product Limited Warranty

Trimble warrants that this Trimble product and its internal components (the "Product") shall be free from defects in materials and workmanship and will substantially conform to Trimble's applicable published specifications for the Product for a period of one (1) year, starting from the earlier of (i) the date of installation, or (ii) six (6) months from the date of product shipment from Trimble. This warranty applies only to the Product if installed by Trimble or a distributor authorized by Trimble to perform Product installation services.

Software Components and Enhancements

All Product software components (sometimes hereinafter also referred to as "Software") are licensed and not sold. Any Software accompanied by a separate End User License Agreement ("EULA") shall be governed by the terms, conditions, restrictions and limited warranty terms of such EULA notwithstanding the preceding paragraph. During the limited warranty period you will be entitled to receive, at no additional charge, such Fix Updates and Minor Updates to the Product software as Trimble may develop for general release, subject to the procedures for delivery to purchasers of Trimble products generally. If you have purchased the Product from an authorized Trimble distributor rather than from Trimble directly, Trimble may, at its option, forward the software Fix Update or Minor Update to the Trimble distributor for final distribution to you. Major Upgrades, new products, or substantially new software releases, as identified by Trimble are expressly excused from this enhancement process and limited warranty. Receipt of software updates shall not serve to extend the limited warranty period.
For purposes of this warranty the following definitions shall apply: (1) "Fix Update" means an error correction or other update created to fix a previous software version that does not substantially conform to its published specifications; (2) "Minor Update" occurs when enhancements are made to current features in a software program; and (3) "Major Upgrade" occurs when significant new features are added to software, or when a new product containing new features replaces the further development of a current product line. Trimble reserves the right to determine, in its sole discretion, what constitutes a significant new feature and Major Upgrade.

Warranty Remedies

Trimble's sole liability and your exclusive remedy under the warranties set forth above shall be, at Trimble's option, to repair or replace any Product that fails to confirm to such warranty ("Nonconforming Product"), and/or issue a cash refund up to the purchase price paid by you for any such Nonconforming Product, excluding costs of installation, upon your return of the Nonconforming Product to Trimble in accordance with Trimble's standard return material authorization process.
Such remedy may include reimbursement of the cost of repairs for damage to third-party equipment onto which the product is installed, if such damage is found to be directly cause by the Product as reasonably determine by Trimble following a root cause analysis. Where *Trimble* elects to replace a Product or parts, repair parts and replacement Products will be provided on an exchange basis and will be either new, equivalent to new, or reconditioned.

Warranty Exclusions and Disclaimer

These warranties shall be applied only in the event and to the extent that (i) the Products and Software are properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's relevant operator's manual and specifications, and; (ii) the Products and Software are not modified or misused. The preceding warranties shall not apply to, and Trimble shall not be responsible for defects or performance problems resulting from (i) the combination or utilization of the Product or Software with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Trimble; (ii) the operation of the Product or Software under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized, installation, modification, or use of the Product or Software; (iv) damage caused by accident, lightning or other electrical discharge, fresh or salt water immersion or spray; or (v) normal wear and tear on consumable parts (e.g., batteries). Trimble does not warrant or guarantee the results obtained through the use of the Product.
THE WARRANTIES ABOVE STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO PERFORMANCE OF THE PRODUCTS AND SOFTWARE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND BY EITHER TRIMBLE INC. OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCTS OR SOFTWARE. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
TRIMBLE INC. IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF GPS SATELLITES OR THE AVAILABILITY OF GPS SATELLITE SIGNALS.

Limitation of Liability

TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT OR SOFTWARE LICENSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANY WAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS), REGARDLESS WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
NOTE: THE ABOVE LIMITED WARRANTY PROVISIONS MAY NOT APPLY TO PRODUCTS OR SOFTWARE PURCHASED IN THE EUROPEAN UNION. PLEASE CONTACT YOUR TRIMBLE DEALER FOR APPLICABLE WARRANTY INFORMATION.

Notices

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

Notice to Our European Union Customers

For product recycling instructions and more information, please go to: http://www.trimble.com/Corporate/Environmental_Compliance.aspx

Recycling in Europe: To recycle Trimble WEEE, Call +31 497 53 2430, and ask for the "WEEE Associate"

Or

Mail a request for recycling instructions to:

Trimble Europe BV
C/O XPO Logistics
De Schakel 39-41
5651 GM Eindhoven
The Netherlands



Safety Information

Always follow the instructions that accompany a Warning or Caution. The information they provide is intended to minimize the risk of personal injury and/or damage to property. In particular, observe safety instructions that are presented in the following format:

⚠ **WARNING –** This alert warns of a potential hazard, which, if not avoided, can cause severe injury.

⚠ **CAUTION –** This alert warns of a hazard or unsafe practice which, if not avoided, can cause injury or damage.

NOTE – An absence of specific alerts does not mean that there are no safety risks involved.

Warnings

⚠ **WARNING –** When you are working on the vehicle's hydraulic systems, vehicle attachments that are suspended can drop. If you are working around the vehicle, you could suffer serious injury if an attachment dropped on you. To avoid this risk, lower all vehicle attachments to the ground before you begin work.

⚠ **WARNING –** If someone else attempts to drive the vehicle while you are working on or under it, you can suffer serious or fatal injuries. To avoid this possibility, install a lockout box on the battery terminal to prevent the battery from being reconnected, remove the key from the vehicle's ignition switch, and attach a "Do not operate" tag in the cab.

⚠ **WARNING –** Agricultural chemicals can pose serious health risks. If the vehicle has been used to apply agricultural chemicals, steam clean the vehicle to remove any chemical residue from the areas of the vehicle where you will be working.

⚠ **WARNING –** Vehicle cabs can be quite high in the air. To avoid potentially serious injury through falling from this height, always use the steps and handrails, and face the vehicle, when you enter or exit it.

Cautions

⚠ **CAUTION –** When the vehicle has been running, parts of the vehicle, including the engine and exhaust, can become extremely hot and can cause serious burns. To avoid burns, allow hot machine parts to cool before you begin working on them.

⚠ **CAUTION –** The system installation may bring you into contact with chemical substances, such as oil, which can cause poisoning. Wash your hands thoroughly after you finish working on the system.

⚠ **CAUTION –** Battery posts, terminals, and related accessories contain lead and lead compounds, which can cause serious illness. To avoid ingesting lead, wash your hands thoroughly after touching the battery.

⚠ **CAUTION –** Always wear protective equipment appropriate to the job conditions and the nature of the vehicle. This includes wearing protective glasses when you use pressurized air or water, and correct protective welder's clothing when welding. Avoid wearing loose clothing or jewelry that can catch on machine parts or tools.

⚠ **CAUTION –** Parts of the vehicle may be under pressure. To avoid injury from pressurized parts, relieve all pressure in oil, air, and water systems before you disconnect any lines, fittings, or related items. To avoid being sprayed by pressurized liquids, hold a rag over fill caps, breathers, or hose connections when you remove them. Do not use your bare hands to check for hydraulic leaks. Use a board or cardboard instead.

⚠ **CAUTION –** Do not direct pressurized water at:
- electronic or electrical components or connectors
- bearings
- hydraulic seals
- fuel injection pumps
- any other sensitive parts or components




Set the hose pressure as low as practicable, and spray at a 45° to 90° angle. Keep the nozzle of the power washer away from the machine at the distance recommended by the manufacturer.

⚠ **CAUTION –** To prevent damage to the system, make sure that no wires or hoses interfere with or catch on any mechanical linkages, or contact any machine parts that get hot.

⚠ **CAUTION –** If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch– the negative pole in this example.

Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

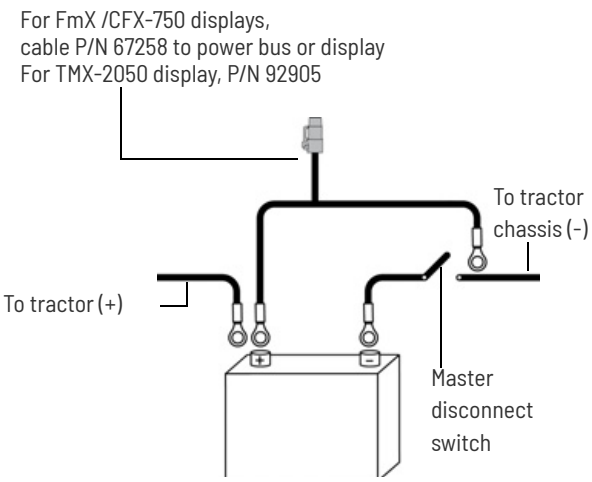

Contents

Legal Notices 2

Safety Information. 4

Warnings. 4

Cautions 5

1 Introduction. 9

Technical assistance. 9

Manual system upgrade to Autopilot. 10

Trimble displays 10

Required components 10

Antenna mounting kits 10

Preparing the vehicle for installation 11

2 AutoTrack Harness Component Connections 12

Introduction. 13

Valve connections 14

Installing the steering sensor adapter cable 18

Installing the steering angle Phantom sensor 22

3 IMD-900 Steering Device Installation 23

IMD-900 steering device components. 24

Installing the IMD-900 steering device 25

Connecting the IMD-900 harness to the 54602 harness 27

4 Antenna Installation. 28

Antenna and receiver installation options. 28

Possible mounting methods. 28

Mounting an adjustable spar to roof bolts. 29

Attaching the plate with VHB adhesive 31

Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor 33

5 Display Installation 36

CFX-750 display: Components 37

CFX-750 display: Preparation 38

CFX-750 display: Installation. 39

CFX-750 display: Installing the wiring harness 39

TMX-2050 display: Components 40

TMX-2050 display: Preparation. 41

Installing the display and mount 41

TMX-2050 display: Installing the wiring harness 44

TMX-2050 display: AG-25 GNSS antenna. 46

CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate 47
Spar mount method 47
VHB adhesive method 47
CFX-750 and TMX-2050 displays: Installing the RTK radio antenna 51
GFX-750/XCN-1050 display: Components 53
GFX-750/XCN-1050 display: Preparation 54
GFX-750/XCN-1050 display: Installation 54
GFX-750/XCN-1050 display: Installing the wiring harness 57

6 Power Harness Installation 59
CFX-750 display: Components 60
GFX-750/XCN-1050 display: Components 62
CFX-750 and GFX-750 displays: Installing the power harness 63
CFX-750 displays: Configuring the power bus options 65
Display power button is used to turn on the Autopilot system 65
External switch is used to turn on the Autopilot system 65
Ignition is used to turn on the Autopilot system 67
TMX-2050 display: Components 68
TMX-2050 display: Installing the power harness 69
TMX-2050 display: Configuring the power options 71
Ignition sensing 71

7 Controller Installation 73
Installing the controller 73
Controller connections 75

8 Final Machine Check 78
Performing the final machine check 78

1

Introduction

- Technical assistance
- Manual system upgrade to Autopilot
- Required components
- Preparing the vehicle for installation

This manual describes how to install the Trimble® Autopilot™ automated steering system.

Even if you have used another GNSS (Global Navigation Satellite System), such as the United States' GPS (Global Positioning System) before, spend some time reading this manual to learn about the special features of this product. If you are not familiar with GNSS, go to the Trimble website (www.trimble.com) for an interactive look at Trimble and GNSS.

Technical assistance

If you have a problem and cannot find the information you need in the product documentation, contact Trimble technical support:

1. Log into http://agpartners.trimble.com.
2. Click the **Feedback** link at the right of the screen.
3. Complete the form and then click **Submit Feedback**.

Manual system upgrade to Autopilot

Trimble displays

Retain
CFX-750™/FM-750™ display: P/N 94110-xx
Power cable CFX-750 display: P/N 77282
Antenna for display: P/N 60600-02 (DGPS) or 77038-00 (OmniSTAR®/RTK)
Antenna to receiver cable: P/N 50449
Basic cable (CFX-750 displays): P/N 67258
TMX-2050™/XCN-2050™ display: P/N 96700-00
TM-200 Module: P/N 95060-00
TM-200 Module to display cable: P/N 93843
TM-200 Module power I/O cable: P/N 92676
TM-200 Module battery cable: P/N 92905
GFX-750™/XCN-1050™: P/N 121000-XX
Power cable GFX-750/XCN-1050: P/N 110551
Base power cable: P/N 67258
NAV-900 guidance controller: P/N 108993-05
GFX-750 to NAV-900 Comms cable: P/N 110540

Required components

Kits required	Special tools
Platform kit: P/N 54035-212	Drill
TMX-2050/CFX -750 installations: P/N 64425-07	5/16'' and 7/16'' drill bits
GFX-750 Installations: P/N 64425-08	Allen wrench set (metric and SAE)
	Open ended wrench set (metric and SAE)

Antenna mounting kits

Antenna options
Ag15 antenna mounting plate: P/N 62034
John Deere quick release: P/N 84804
Bracket, GPS – V Base plate indexing: P/N 62388-02
Bracket, GPS spar 54" - 64": P/N 66774
Antenna V plate mount: P/N 60353 – see Chapter 4, Antenna Installation.

Preparing the vehicle for installation

Step 1

Park the vehicle on a hard, level surface. Block the front and rear wheels.

Step 2

Align the steering straight ahead. On an articulated vehicle, install the articulation locks.

Step 3

Remove all dirt and debris from the areas of the vehicle where the Autopilot system will be installed.

Step 4

Open all kit boxes and check the contents of the box against the packing list/s. Lay all of the parts out on a clean workbench.

NOTE – The left and right sides of the vehicle are referenced while standing behind the unit, facing the normal direction of travel.

2


AutoTrack Harness Component Connections

- Introduction
- Valve connections
- Installing the steering sensor adapter cable
- Installing the steering angle Phantom sensor

Introduction

Before you start to connect the AutoTrack components, check that machine has a FEMA steering valve.

The valve is located on the right side of the machine near the battery box, remove the cover shown to gain access to the valve.

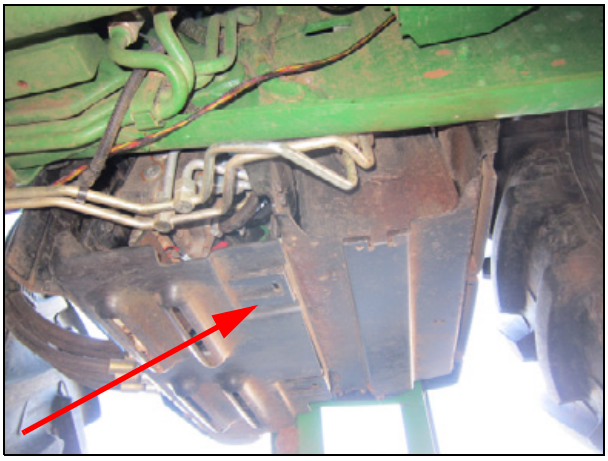



Valve connections

Step 1


Identify the steering valve interface cables:

- P/N 84253
- P/N 54617
- P/N 84252
- P/N 102252

Step 2

Plug the **R2** connector on cable P/N 84253 into any free connector on the power bus harness P/N 67259.


Plug the **R1** connector on cable P/N 84253 into the FEMA valve where it is labeled **CO** ❶, on the right-hand side.

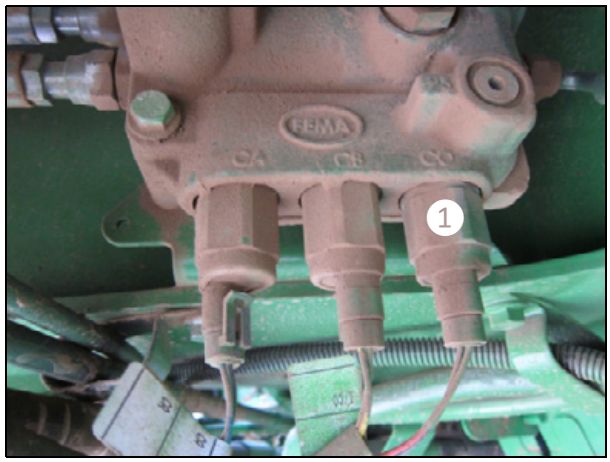

Step 3

For steering control:

Plug the **P8** connector on cable P/N 54617 into connector **R8** on the NavController III harness (P/N 54601).

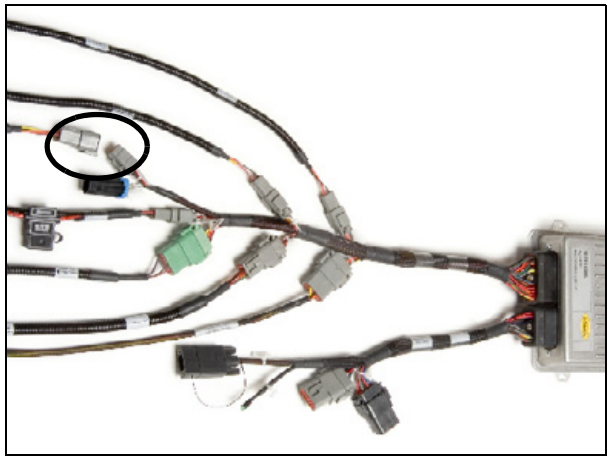


Step 4


Plug the connector labeled **Valve A P2** on cable P/N 54617 into the cable P/N 84252 labeled **Steering Right**.

Plug the other end of cable P/N 84252 into the FEMA valve at the location labeled **CB** ❶.

Plug the connector labeled '**Valve B P3**' on cable P/N 54617 into the cable P/N 84252 labeled **Steering Left**.

Plug the other end of cable P/N 84252 into the FEMA valve at the location labeled **CA** ❷.

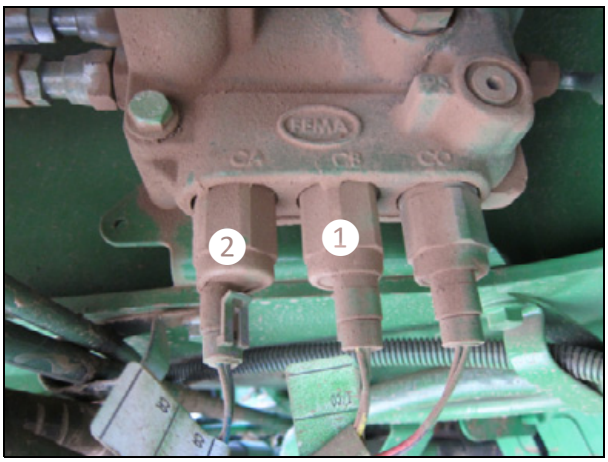

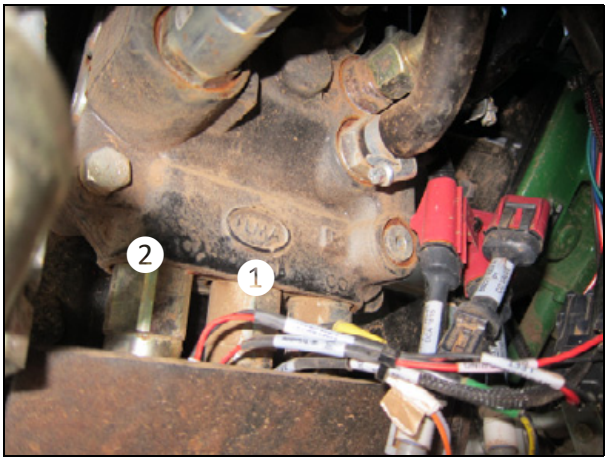

Step 5

Terminate the OEM steering harnesses with the following phantoms:

- CO valve: P/N 89231



- CA & CB valves: P/N 102252

Lightly tug the terminators to check that the connectors are fully seated. Use a wire wrap tie to fasten the phantoms securely to a stationary location.



Installing the steering sensor adapter cable

Step 1

The connector for the steering shaft sensor is located under the plastic on the right side of the steering console.

To gain access to this area some of the plastic will need to be removed.




Remove the screws on the right side of the console and loosen the plastic piece to gain access to the connectors.

For more information on removing the plastic panels see the John Deere service manual for your machine.



Step 2

On the right side of the steering column inside the cable tray, locate the black 6-pin Tyco connector that has a small red locking tab.

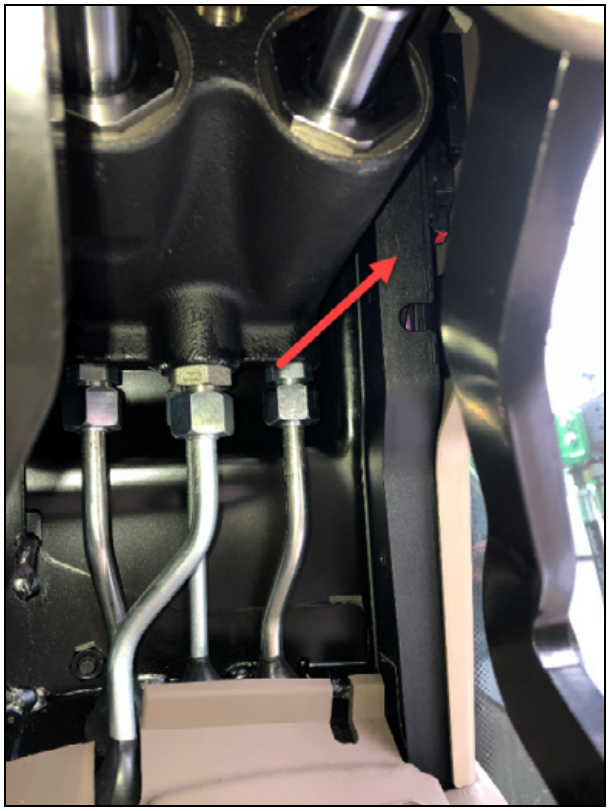

Unplug the Tyco connector, and connect the manual override cable (P/N 124408) to the Tyco connector.



Route the cable towards the NavController mounting location.



Step 3

Plug the other end of the manual override jumper cable (P/N 124408) into connectors P5 and P13 of the NavController III harnesses.

Step 4

Locate the manual override phantom cable P/N 124436 and plug it into the open Tyco connector that was disconnected in step 2.

Secure the phantom in the steering console and reassemble the plastic housing.




Installing the steering angle Phantom sensor

Step 1

Locate the John Deere steering sensor on the front right axle. Follow the cable from the steering sensor to the right frame area above the front axle.


Locate the 6-position Tyco connector above the axle.

Disconnect the steering sensor harness connector.

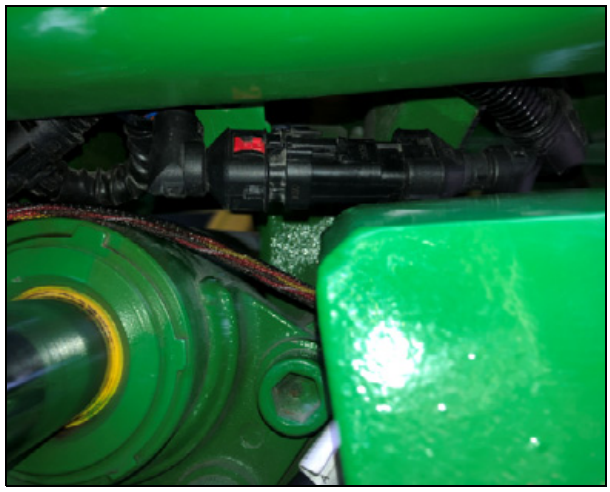

Step 2

Connect the steering sensor phantom P/N 124409 to the side of connector going to the tractor harness.

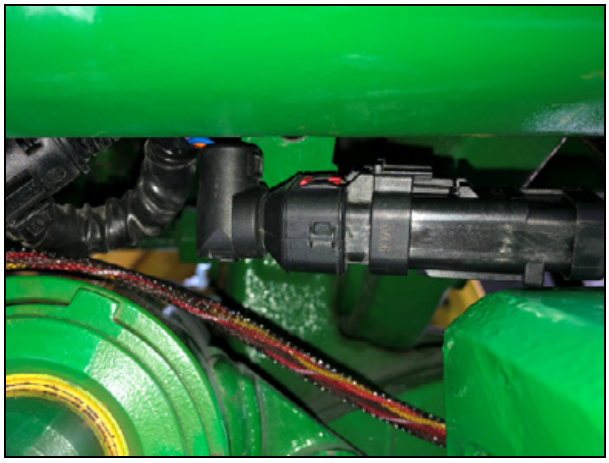

Step 3

Connect the mating plug found in P/N 124409 to the steering sensor harness going to the John Deere sensor.



3

IMD-900 Steering Device Installation

- IMD-900 steering device components
- Installing the IMD-900 steering device
- Connecting the IMD-900 harness to the 54602 harness

This chapter describes how to install the IMD-900 steering device.


If the described mounting location is not accessible, chose a different place. To ensure proper function, the IMD-900 device must be located where it is free of obstructions and can rotate with the wheels when they turn.

On articulated vehicles, mount the device on the opposite side of the pivot point to the Autopilot controller.

Mount the device base down or base up so that it maintains a level orientation. Do not mount it on its side. An angle of up to 10° in any direction is acceptable, but as flat as possible is preferred.

To avoid stretching the cable, leave adequate length on the service loop.

IMD-900 steering device components

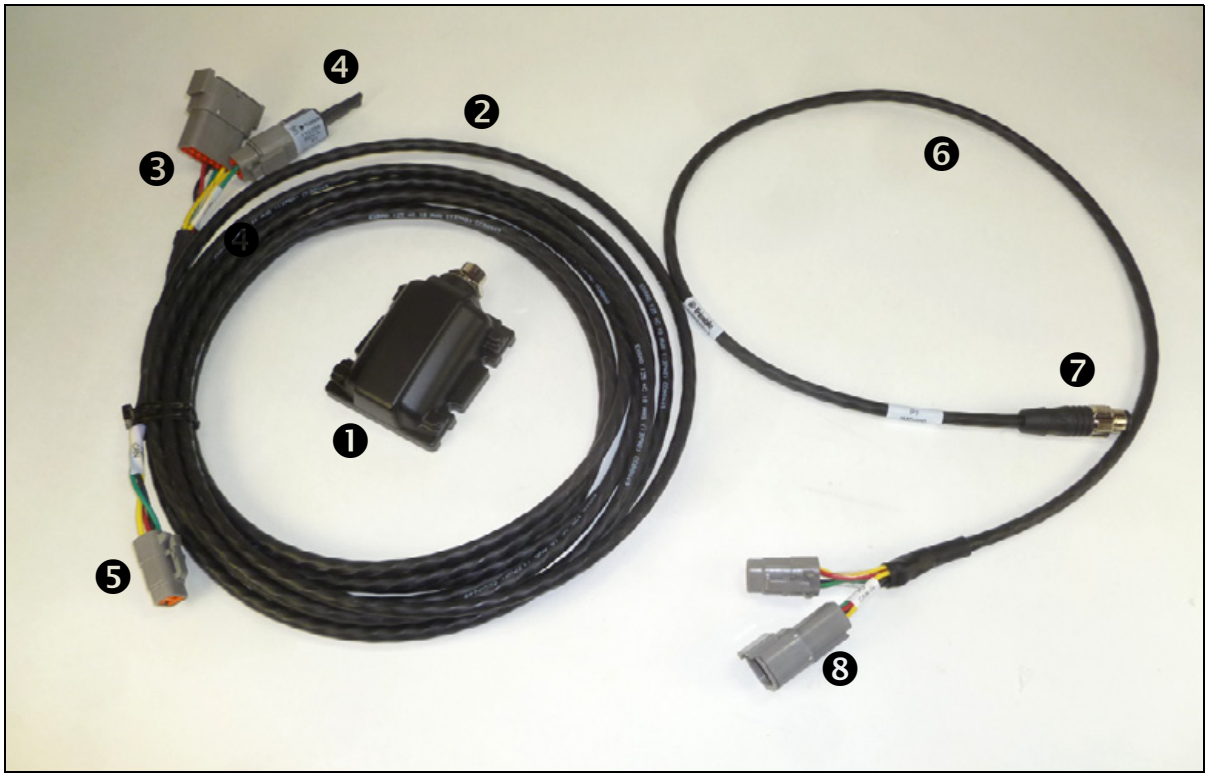

Item	Description
1	IMD-900 steering sensor (P/N 109256-00)
2	Cable (P/N 114675)
3	R1-CAN connector
4	CAN terminal (× 2)
5	P3 CAN connector
6	Cable (P/N 112759)
7	P1-IMD-900
8	P3/R3 CAN out/CAN in

Installing the IMD-900 steering device

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

The IMD-900 steering device is shown on the right. Install it using the following steps.

Identify the location where you will install the device.

If bolts are currently installed in the location, remove them.



Step 2

If you removed bolts in Step 1, use them to install the bracket to the vehicle.


If you did not remove bolts in Step 1, use the bolts provided in the kit to install the bracket to vehicle.

Introduce the inside cap screws into the thread, but do not tighten them.



Step 3

Mount the unit so the connector is in the most protected position. Fasten the cap screws.

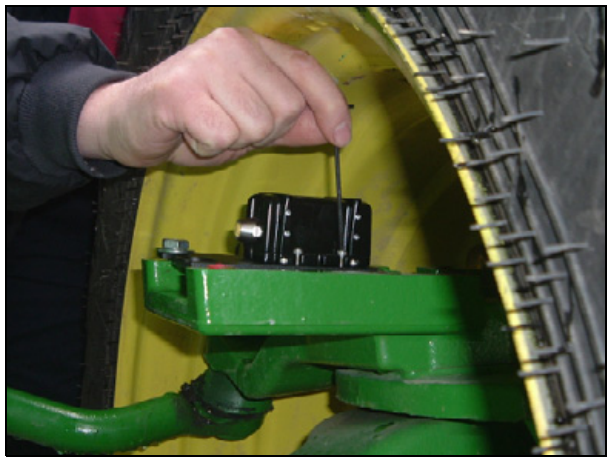

Step 4

Route the steering cable to the steering device along the frame rail and then connect it to the steering device.

Turn the steering wheel to the full left and the full right positions to ensure that there is enough spare harness.




Connecting the IMD-900 harness to the 54602 harness

Step 1


Connect the P1 connector of the 112759 cable to the IMD-900 ❶.

Connect the R3 connector to the 114675 cable ❷.

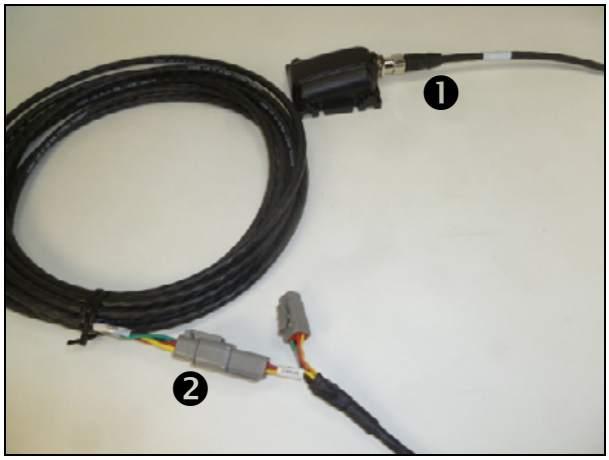

Step 2

Connect the CAN terminal to the P3 connector of the 112759 cable ❸.

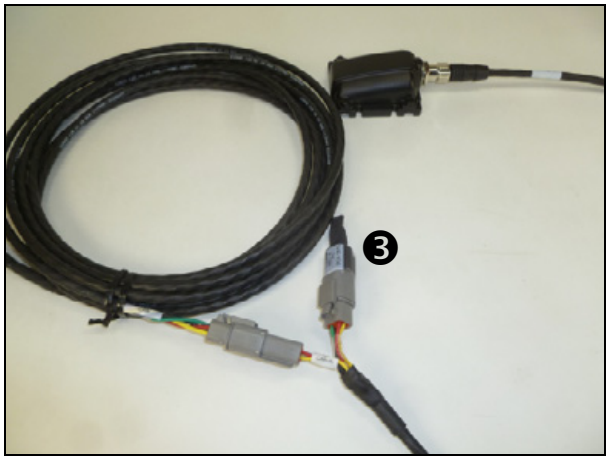

Step 3

With the cable routed to the NavController, the R1 connector will connect to the P12 connector on the 54602 harness on the NavController as shown.

NOTE – There should be a terminator next to the P12 connector as well as on the 112759 cable.



4

Antenna Installation

- Antenna and receiver installation options
- Mounting an adjustable spar to roof bolts
- Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor

This chapter describes how to install the required receiver and antenna, and radio module (if used).

To install the antenna for your display, see Chapter 5, Display Installation.

Antenna and receiver installation options

There are several options for mounting components (the antenna, radio module, or GNSS receiver) on the cab roof depending on the accuracy required and the antenna type:

- **Spar mount** – This bracket mounts directly to the roof bolts and is required for all high accuracy applications such as RTK and OmniSTAR. Bolt a metal spar to the roof or to a light bracket and then attach either a V plate for magnetic mounting for permanent mounting.
- **VHB mount** – Attach a 4" x 6" plate or a V plate directly to the roof with VHB (Very High Bond) adhesive for magnetic mounting. See page 31.
- **Magnetic mounting** – Magnetic mounting for quick release is available for both VHB and spar type mounting.

Possible mounting methods

GNSS receiver	VHB mounted plate	VHB V mounted plate	AG15/AG25/Zephyr
CFX-750 display / TMX-2050 display	✓	✓	✓

NOTES –

- With all other antennas, bolt the V plate to the spar for high accuracy and repeatability.
- For WAAS, EGNOS, OmniSTAR VBS, Beacon, and DGPS applications, place either of the plates in a firm location using the VHB.

Mounting an adjustable spar to roof bolts

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1


Locate the cab bolts on the roof of the vehicle.

Measure the length between the bolts on the roof of the vehicle and order the appropriate spar:

- Spar 36.5" - 46.5": P/N 53676
- Spar 54" - 64": P/N 66774




If a light bracket already occupies the roof studs, mount the spar directly onto the light bracket.

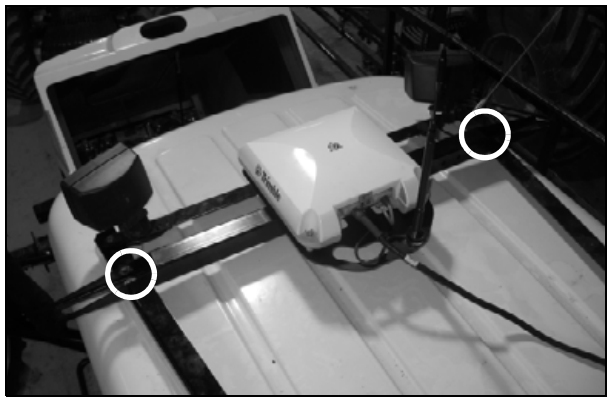


Step 2

If required, replace the existing bolts with longer bolts.

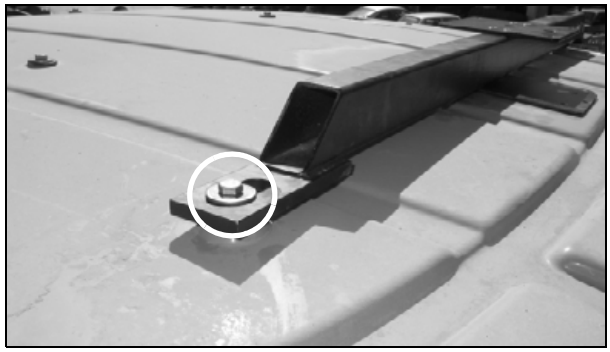

If you use the light bracket, drill two holes to match the spar width.

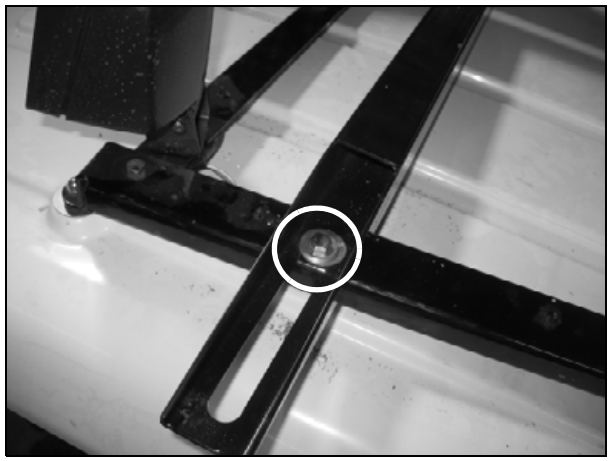

Step 3

Use the slotted holes to center the spar and then tighten the bolts. If required, use the spacers and flat washers provided to secure the spar.

NOTE – If the receiver is offset to the left or the right of the vehicle, Autopilot system performance may be affected. Before you tighten the cab bolts, make sure that the GNSS antenna is aligned with the center of the vehicle.




Step 4

For a single magnet antenna mount applications:

Attach a V plate with four ¼" flathead screws.

The narrow end points to the front of the vehicle.

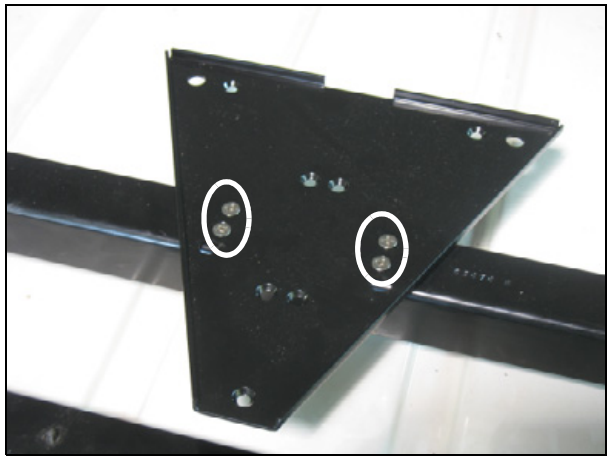

V plate on the spar

Attaching the plate with VHB adhesive

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Standard 4" x 6" plates are provided in most kits. You can use the VHB mounting method to attach either a 4" x 6" plate or a V plate.

- **RTK, OmniSTAR, DGPS, GLONASS applications** – To use this method for high accuracy, the surface must be rigid and free of "oil panning". For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a 4" x 6" plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust. Apply force to the roof to find a firm location.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


NOTE – The VHB strips are pre-applied to the 4" x 6" plate.

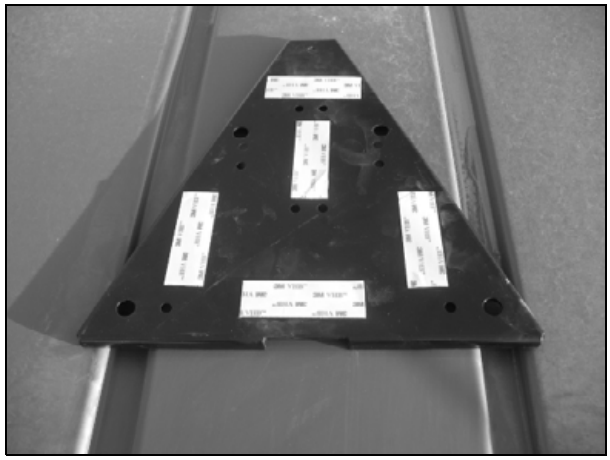


Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end of the plate points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

NOTE – The arrow points to the front of the vehicle.

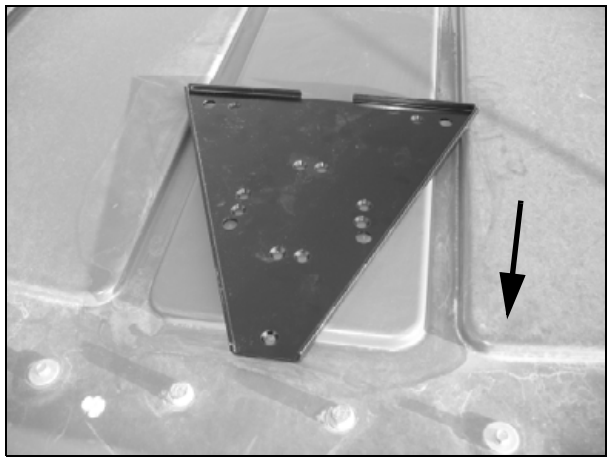

V plate

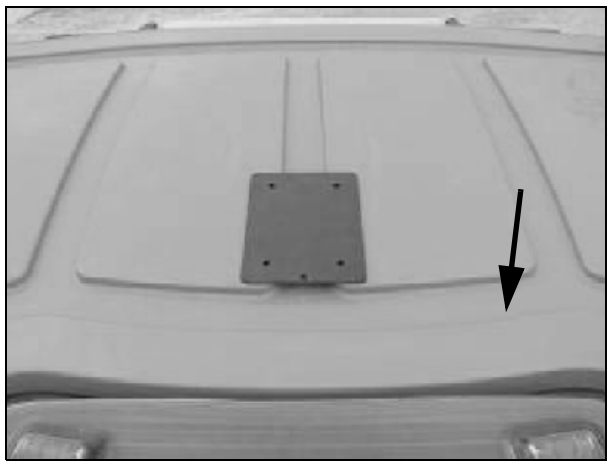

4" x 6" plate

Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor

On vehicles equipped with the John Deere optional Starfire antenna bracket, you can use the Trimble JD ATR antenna bracket to provide a fast release antenna mount.

Step 1

Layout the bracket and hardware on a clean surface.



Step 2

Using the hardware provided, install the lock-pin and the lanyard as shown.



Step 3

Install two washers onto a stud.



Step 4

Install a T-knob locking handle onto the stud and then repeat Steps 3 to 4 for the second stud.



Step 5


Standard mount

For antennas using a standard ⅝" - 11 threaded mount, attach the antenna to the bracket with a ⅝" - 11 bolt.



Step 6

Insert the tab situated at the bottom of the adaptor into the slot in the vehicle mounted antenna bracket.

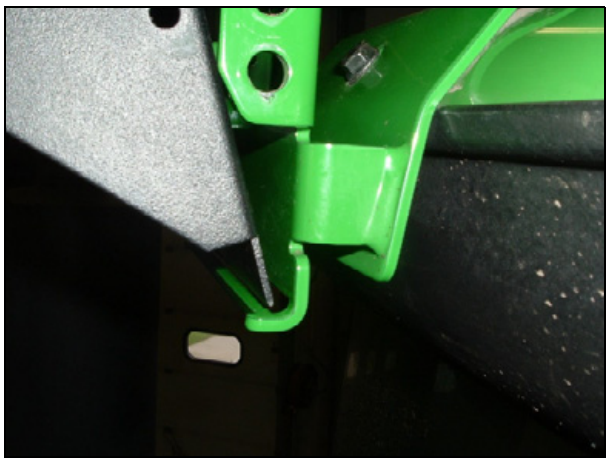

Step 7

Tighten both knobs securely.



Step 8

Tip the adaptor back until the pin holes line up and insert the attached steel lock pin through the bracket and the adaptor.

NOTE – The pin prevents the bracket from falling should you forget to tighten the locking knobs.



Step 9

When using the Starfire antenna bracket adaptor with an external radio antenna

Provision for mounting the radio antenna can be made using the standard adhesive backed steel plate with a standard magnetic mount as shown.




5

Display Installation

- CFX-750 display: Components
- CFX-750 display: Preparation
- CFX-750 display: Installation
- CFX-750 display: Installing the wiring harness
- TMX-2050 display: Components
- TMX-2050 display: Preparation
- TMX-2050 display: Installing the wiring harness
- TMX-2050 display: AG-25 GNSS antenna
- CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate
- CFX-750 and TMX-2050 displays: Installing the RTK radio antenna
- GFX-750/XCN-1050 display: Components
- GFX-750/XCN-1050 display: Preparation
- GFX-750/XCN-1050 display: Installation
- GFX-750/XCN-1050 display: Installing the wiring harness

CFX-750 display: Components

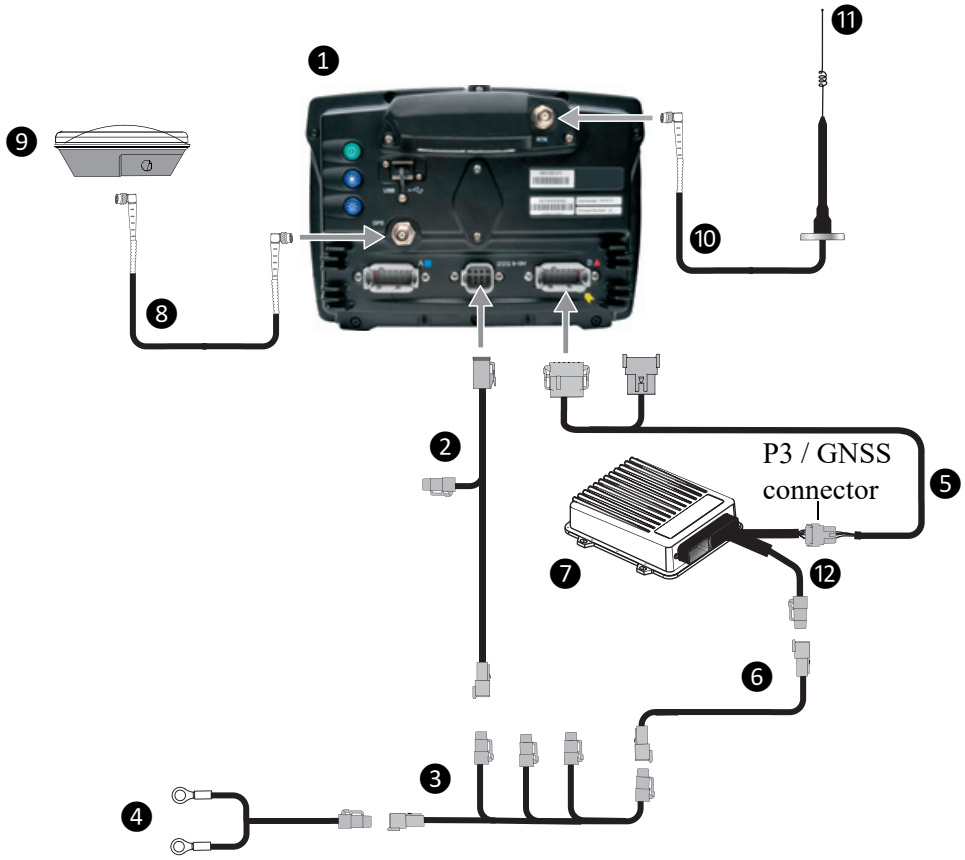

⚠ **CAUTION –** Connecting the Port Replicator on the CFX-750 to NavController cable ❺ to the P4 or P12 connector of the NavController harness ⓬ will result in damage to the display, and will void the warranty.

Item	Description	Trimble P/N
1	CFX-750 display **NOTE –** RTK password required.	93100-02
2	CFX-750 power cable	66694
3	CFX-750 power cable with relay and switch (power bus)	67259
4	Basic power cable	67258
5	CFX-750 to NavController cable with port replicator	75741
6	2 pin DTM to 2 pin DT power adapter	67095
7	NavController	55563-00
8	8 m GNSS TNC/TNC RT angle cable	50449
9	AG25 GNSS antenna	77038-00
10	NMO to TNC 20ft antenna cable and base	72122
11	900 MHz radio antenna kit	22882-10
12	Main NavController cable	54601

CFX-750 display: Preparation

Step 1

Locate the CFX-750 display, the RAM mount, and the RAM mount clamp.



Step 2

Use the provided metric hardware to attach the RAM mount to the rear of the display.



Step 3

Attach the RAM mount to the rear of the display.



CFX-750 display: Installation

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1


Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the bar mount to the rail.

Attach the free end of the RAM mount to the bar mount and then tighten the clamp on the RAM mount so that the display is secure.

Step 2

Connect the cable to the B port of the CFX-750 display.

To connect power to the CFX-750 display, see Chapter 7, Controller Installation.

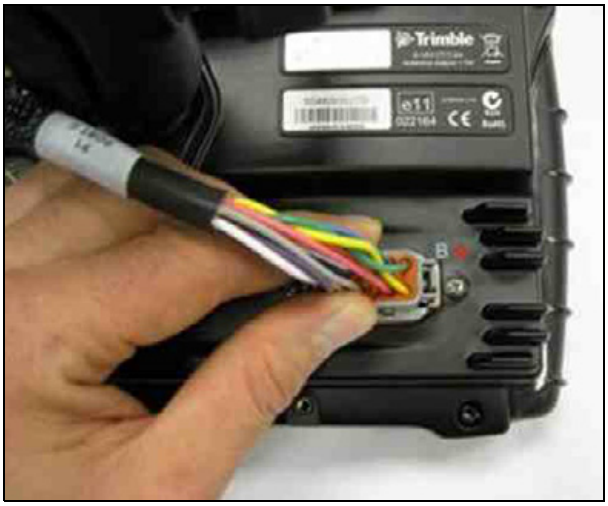

CFX-750 display: Installing the wiring harness

Step 1

Locate the cable that connects the CFX-750 display to the NavController.


Step 2

Connect the cable to the P3 connector on the NavController main harness and then route the cable from the NavController to the mounting location on the CFX-750 display.



TMX-2050 display: Components

This graphic shows how to connect the TM-200 Module and the Autopilot system for after-market installations.

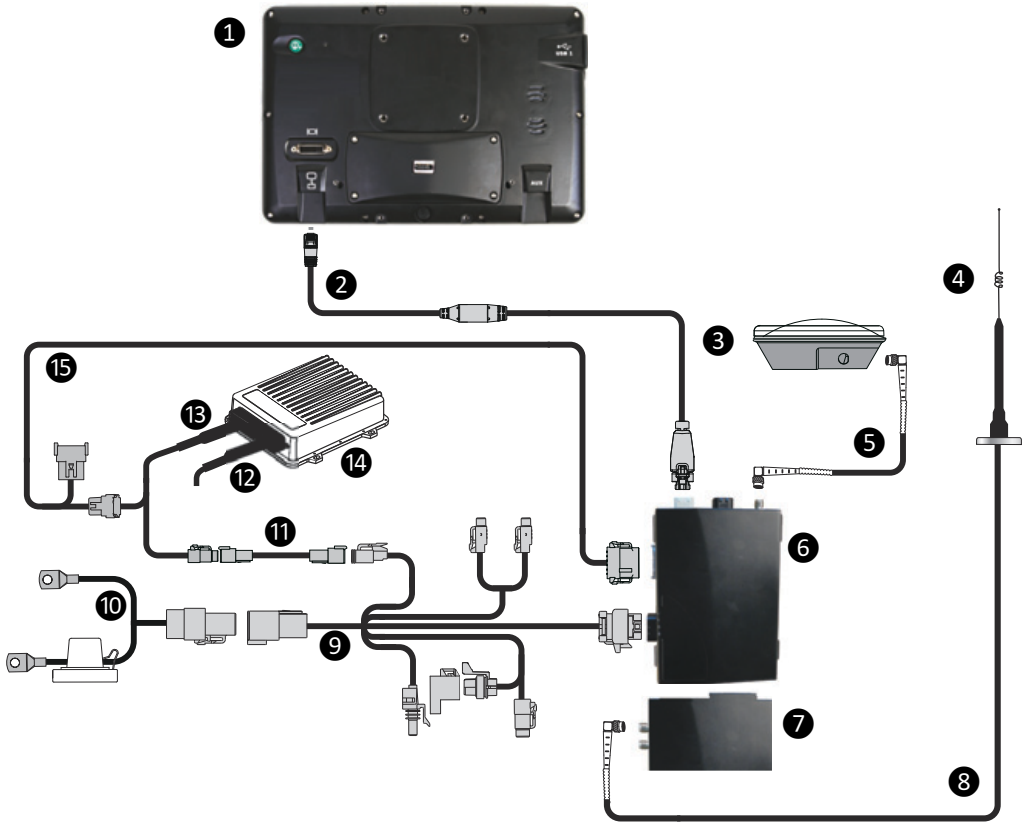

Item	Description	Trimble P/N
1	TMX-2050 display	96700-00
2	TM-200 Module to display cable	93843
3	AG-25 GNSS antenna	77038-00
4	900 MHz radio antenna kit	22882-10
5	8 m GNSS TNC/TNC RT angle cable	50449
6	TM-200 Module	95060-00
7	AG-815 radio	
8	NMO-to-TNC 20 ft antenna cable and base	72122
9	TM-200 Module power and I/O cable	92676
10	Cable, battery	92905
11	2-pin DTM to 2-pin DT power adapter cable	67095
12	Cable, NavController diagnostic	54602
13	Main NavController cable	54601
14	NavController	55563-00 55566-00
15	TM-200 Module to NavController cable with port replicator	75741

TMX-2050 display: Preparation

The display mount attaches to a rail in the cab of the vehicle. The TMX-2050 display connects to the display mount.

The TM-200 Module connects to the display with a single cable.

Additional components to install depend on your connection and correction services, and the features you are using.

⚠ **CAUTION –** Make sure the vehicle power is off when you are connecting system components.

Installing the display and mount

Use the mounting hardware supplied in the display kit to mount the display in the vehicle cab.

⚠ **CAUTION –** Make sure the vehicle power is off when you are connecting system components.

Before completing installation steps, select a position in the cab where the bar mount (4) can be attached to a rail. Hold the display in the selected location and make sure that it:

- Is easy to see, but does not block the driver's view.
- Is within the driver's reach so that the USB drive is easy to remove and replace.
- Does not interfere with the driver getting in or out of the cab, or any other activities.

.

Item	Description
1	Mounting plate
2	Zirkona mount
3	Tightening arm
4	Bar mount



Step 1

Locate the TMX-2050 display and the Zircona mount and mounting hardware.



Step 2

Use the provided hardware to attach the Zircona mount to the display as shown





Step 3

Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the rail mount of the Zircona display mount to the rail of the vehicle.



Step 4

The Zircona mount has a tightening arm ❸. Loosen the arm to let the display move on the mount.

Step 5

Adjust the TMX-2050 display until it is positioned where you want it.

Turn the tightening arm clockwise to tighten the Zircona mount and lock the display in the desired position.

Step 6

Connect the display cable to the display.



Step 7

Route the other end of the display cable to the TM-200 Module and then connect it to the TM-200 Module.



TMX-2050 display: Installing the wiring harness

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the P5 and P2 connectors on the harness, P/N 106111, to the TM-200 Module.

Step 2

On the TM-200 Module locate the display connection point.



Step 3

Connect the display cable P/N 93843 to the TM-200 Module.



Step 4

Route the cable between the TMX-2050 display and the TM-200 Module.




Step 5

Locate the Port labeled **A** on the TM-200 Module and then connect NavController connection cable, P/N 75741.




Step 6

Route the other end of the P/N 75741 cable to the plug on the P/N 54601 harness labeled **GPS**.

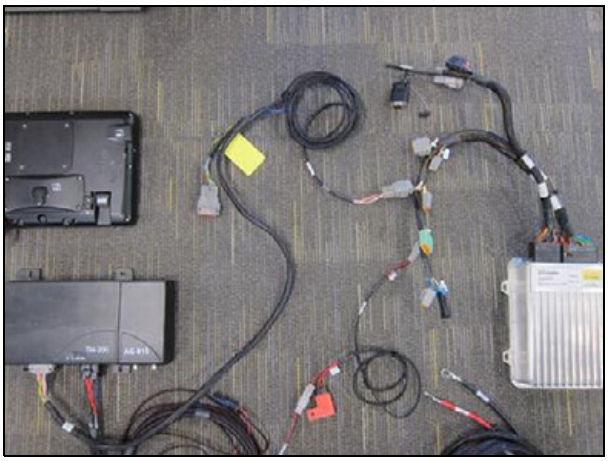

Step 7


Connect the cable to the P3 connector on the NavController main harness.

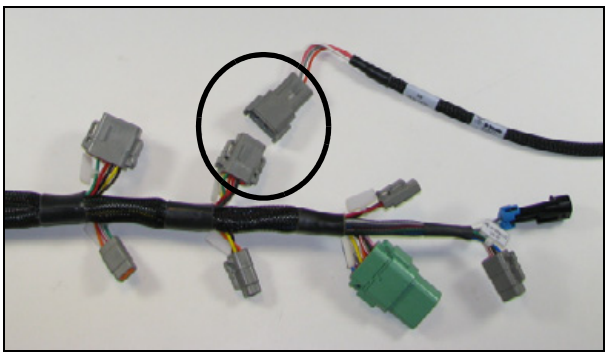

TMX-2050 display: AG-25 GNSS antenna

The AG-25 GNSS antenna is required for all correction services. It enables the GNSS receiver in the TM-200 Module to receive GPS / GNSS corrections. The antenna connects to the antenna connector on the TM-200 Module

⚠ **CAUTION –** Wireless cellular radio and GNSS signals can interfere with each other. For best performance, mount antennas at least 1 meter away from each other.

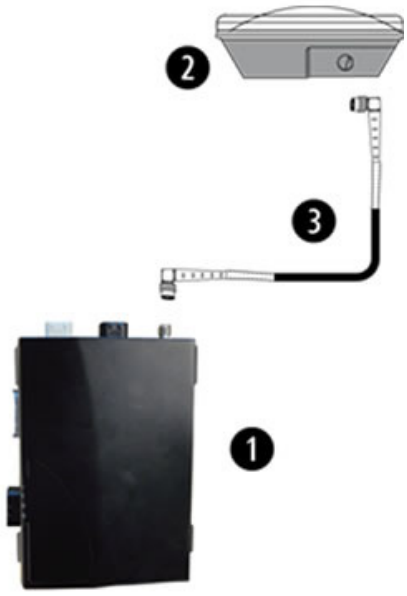

Item	Description
1	TM-200 Module
2	AG-25 GNSS antenna
3	AG-25 antenna to TM-200 Module cable

The AG-25 GNSS antenna has integrated magnets for easy installation. To attach the antenna to a non-metal surface, use the mounting plate.

NOTE – If you are using the AG-25 GNSS antenna with a steering system, refer to the installation instructions for the steering system to determine the correct location for mounting the antenna.

CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

NOTE – The V plate antenna bracket is available on the Autopilot price list. See Antenna mounting kits, page 10.

Use one of the following methods:

- Spar mount
- VHB adhesive

Spar mount method

Trimble recommends that you use this method for RTK and OmniSTAR operations. For more information, see Antenna and receiver installation options, page 28.

Use a ⅝" bolt to attach the AG25 antenna to the spar, as shown.

Measure the length between the bolts on the roof of the vehicle and order the appropriate spar:

- Spar 36.5" - 46.5": P/N 53676
- Spar 54" - 64": P/N 66774



VHB adhesive method

Standard 4" x 6" plates are provided in most kits. You can use Very High Bond (VHB) to attach either a 4" x 6" plate or a V plate.

- **GLONASS, RTK, OmniSTAR, DGPS applications** – To use this method for high accuracy, the surface must be rigid and free of "oil panning". For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a 4" x 6" plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


NOTE – The VHB strips are pre-applied to the 4" x 6" plate.

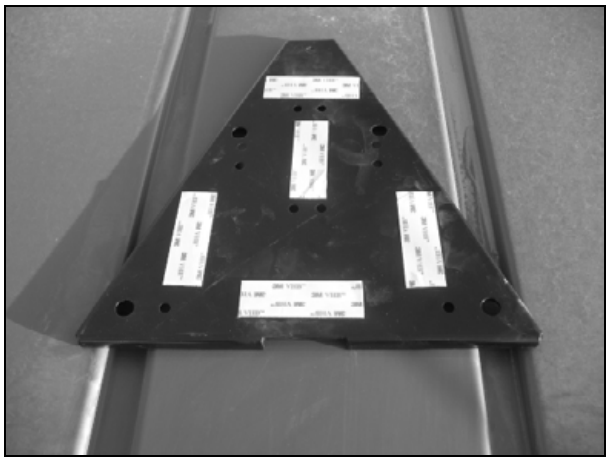


Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

NOTE – The arrow in this figure points to the front of the vehicle.

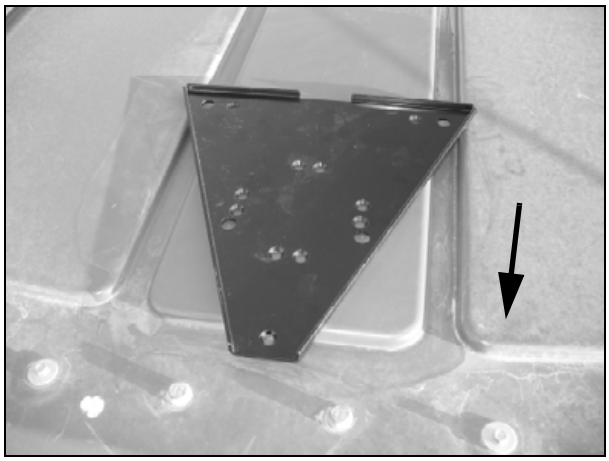


V plate

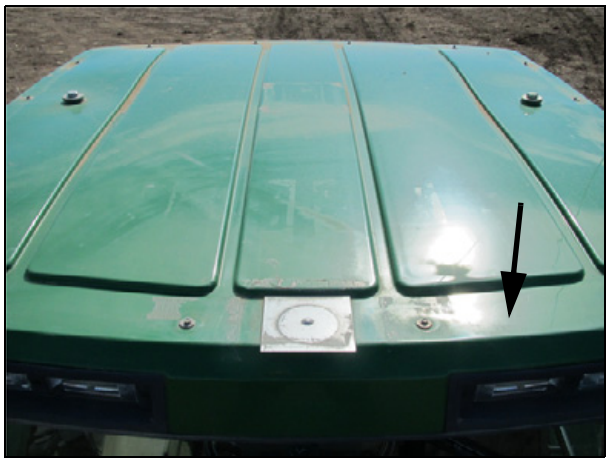

4" x 6" plate

Step 4

If the antenna has magnets built in, omit this step.

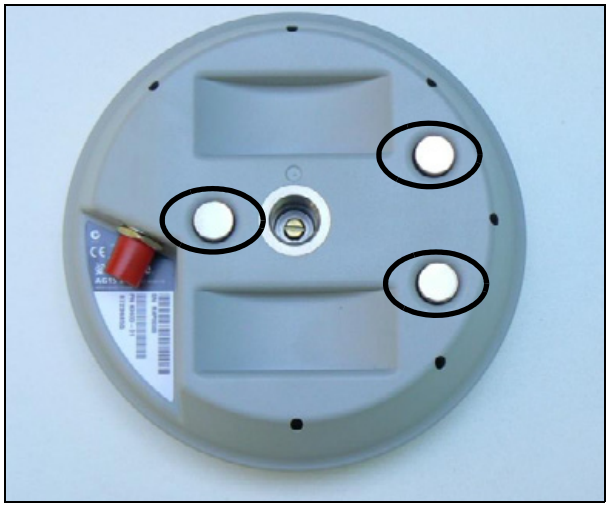

Otherwise, attach the large magnet with a ⅝" stud to the GNSS antenna.



Step 5

GLONASS, RTK, OmniSTAR, DGPS, applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



WAAS, EGNOS, VBS, Beacon applications

Attach the antenna to the center of the 4" x 6" plate.



Step 6

Both models

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



CFX-750 and TMX-2050 displays: Installing the RTK radio antenna

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the radio antenna to the magnetic antenna base.



Step 2

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the 4" x 6" plate with the VHB provided to relocate the antenna.



Step 3


Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the P/N 62034 plate with the VHB provided to relocate the antenna.

Step 4

Route cable from the vehicle roof into the cab, and connect the radio cable to the display.



GFX-750/XCN-1050 display: Components

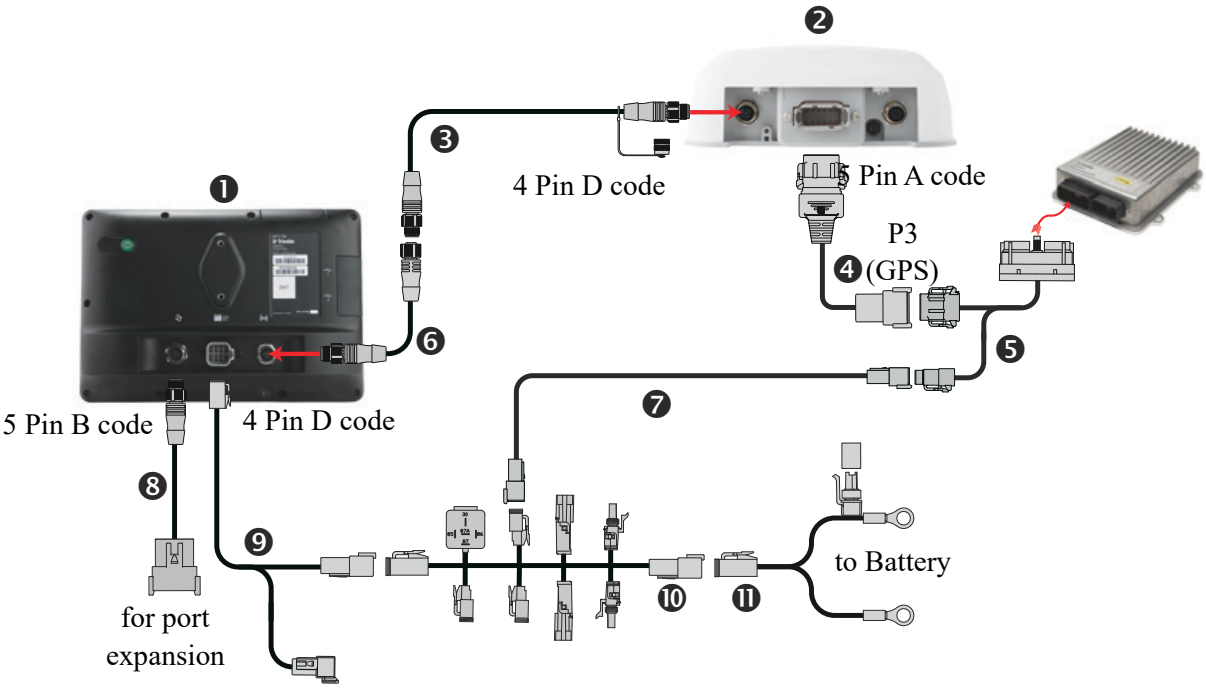

Item	Description	Trimble P/N
1	GFX-750/XCN-1050 display, with PIQ App	121000-XX
2	NAV-900 Guidance controller	108993-05
3	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR), 5 m	110540
4	Cable Assy, NAV-900 to Nav II/III, Autopilot	110547
5	Cable, NavController II/III, Main	54601
6	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR) Extension, 2.5 m. Optional extension for large vehicles	112082
7	Cable Assy, 2 PIN DTM to 2 PIN DT Power Adapter	67095
8	Cable Assy, GFX-750/XCN-1050, Expansion Port Basic, RS-232, Dig I/O, 2.5 m	110545
9	Cable Assy, GFX-750/XCN-1050, Power to display, CAN, 2.5 m	110551
10	Cable Assy, GFX-750/CFX-750/FM-750™/XCN-1050/FmX® /FM-1000 Power with Relay and Switch (Acc)	67259
11	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Basic Power, 4 m	67258

GFX-750/XCN-1050 display: Preparation

The GFX-750/XCN-1050 display utilizes the RAM mount system.

Attach the diamond-based ram mount to the back of the display using the provided fasteners.



GFX-750/XCN-1050 display: Installation

Step 1

Use the supplied V bolts or alternate (non-supplied) hardware to affix the RAM base mount to the desired location in the cab. Ideally this position should be readily viewable and within easy reach of the operator.



Step 2

Use the supplied RAM clamp to connect the RAM base mount to the RAM ball attached to the display.



Step 3

Position the display as desired and then tighten the clamp.



Step 4

Use the John Deere adapter bracket P/N 84804 to mount the NAV-900 controller.




GFX-750/XCN-1050 display: Installing the wiring harness

The GFX-750 display requires a nominal 12 volt power source. The P/N 67258 cable has ring terminal leads for connecting to a battery or other cable mount point.

⚠ **WARNING –** If the machine has a master electrical disconnect, ensure that the display/receiver will be disconnected from the battery when the master disconnect is used. Failure to do so may result in hardware damage and void warranty. Additionally, it is suggested to utilize power terminals located within the cab of the vehicle that ground in the same location as the cab components to avoid ground shifts between the display and any vehicle ECUs.

Step 1

Connect the other 4-pin Deutsch connector of cable P/N 110551 to the P/N 67258 base power cable.

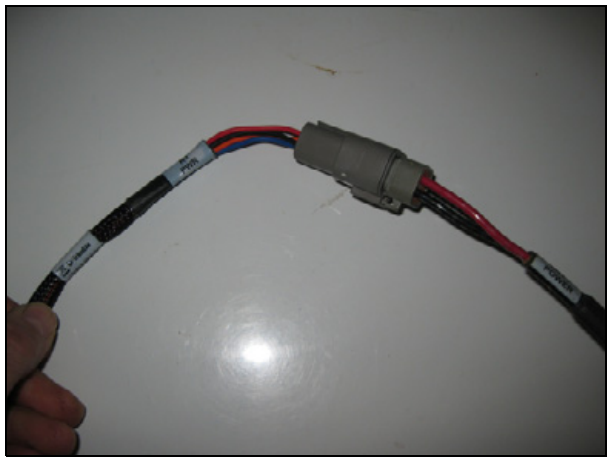

Step 2

Connect the 6-pin DT power/CAN cable P/N 110551 to the middle port of the display.



Step 3

Connect the 4-pin M12 connector to the 4-pin receiver connector. Note the Keying and number of pins.






6

Power Harness Installation

- CFX-750 display: Components
- GFX-750/XCN-1050 display: Components
- CFX-750 and GFX-750 displays: Installing the power harness
- CFX-750 displays: Configuring the power bus options
- TMX-2050 display: Components
- TMX-2050 display: Installing the power harness
- TMX-2050 display: Configuring the power options

CFX-750 display: Components

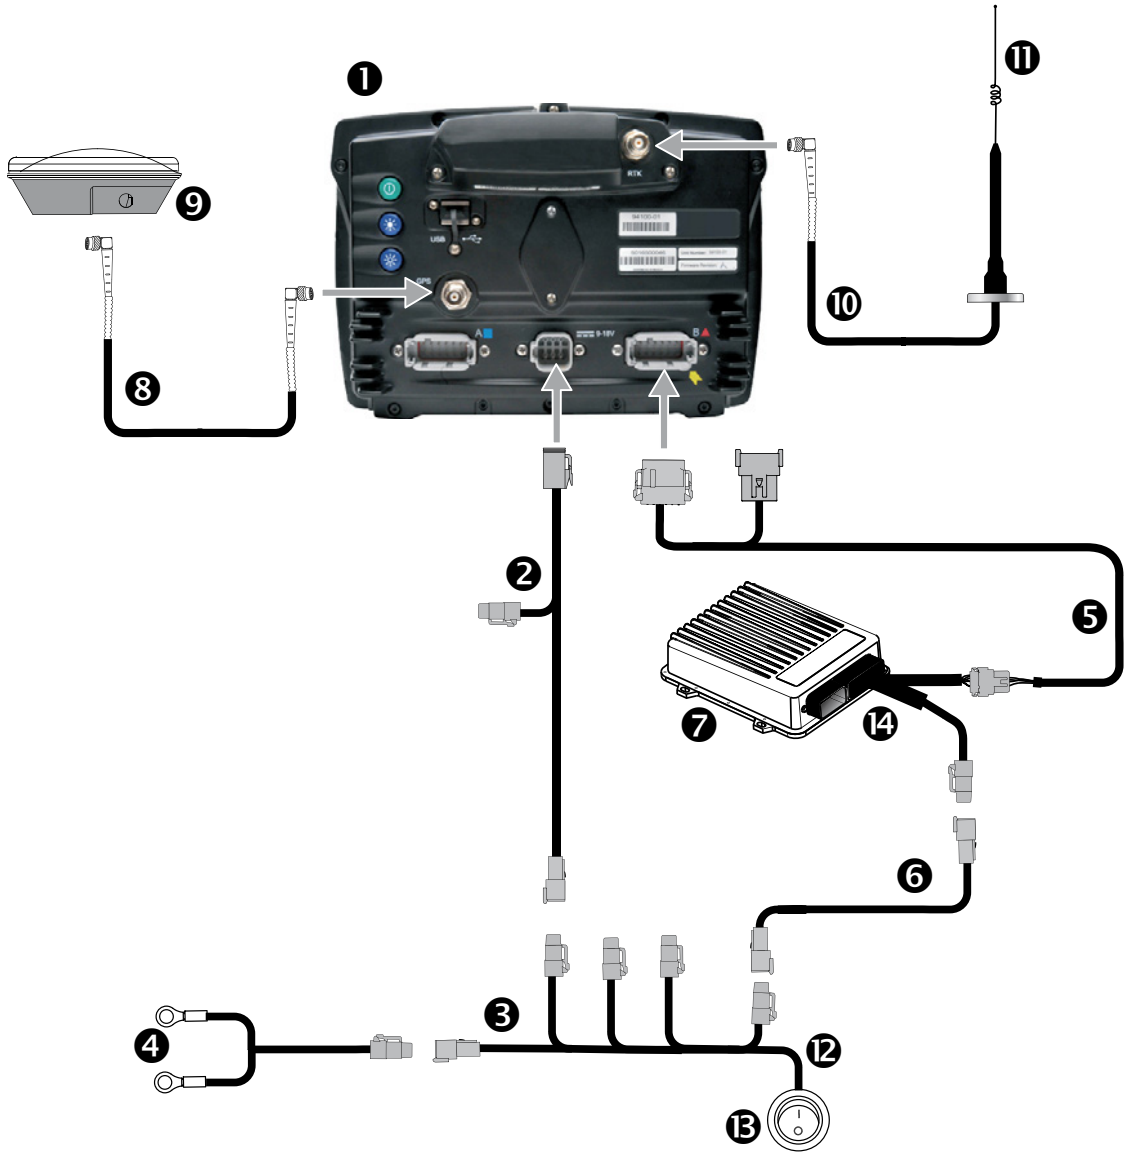


⚠ **CAUTION –** Connecting the Port Replicator on the CFX-750 display to NavController cable ❺ to the P4 or P12 connector of the NavController harness ⓮ will result in damage to the CFX-750 display and will void the warranty.

Item	Description	Trimble part number
1	CFX-750 display **NOTE –** RTK password required.	94100-02
2	CFX-750 power cable	77282
3	CFX-750 power cable with relay and switch (power bus)	67259
4	Basic power cable	67258
5	CFX-750 to NavController cable with port replicator	75741

Item	Description	Trimble part number
6	2 pin DTM to 2 pin DT power adaptor	67095
7	NavController	55563-00
8	8 m GPS TNC/TNC RT angle cable	50449
9	AG25 GNSS antenna	77038-00
10	NMO to TNC 20ft antenna cable and base	62120
11	900 MHz radio antenna kit	22882-10
12	External switch cable included with kit	Part of P/N 67259
13	External switch included with kit	Part of P/N 67259
14	Main NavController cable	54601

GFX-750/XCN-1050 display: Components

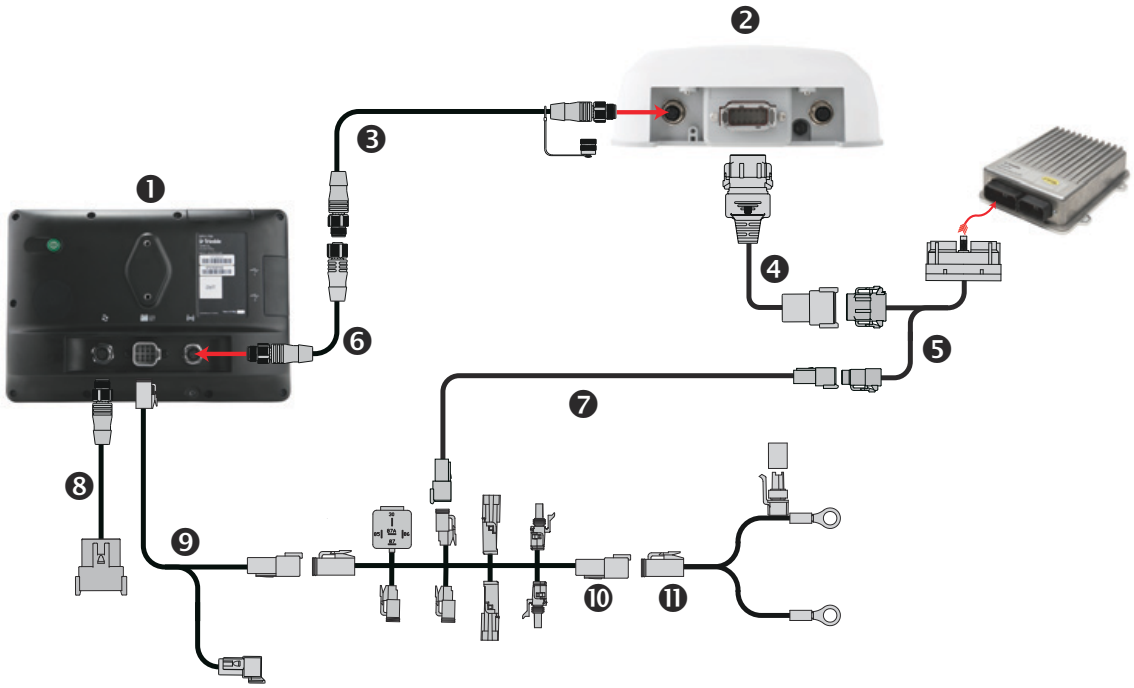

Item	Description	Trimble part number
1	GFX-750/XCN-1050 display, with PIQ App	121000-XX
2	NAV-900 Guidance controller	108993-05
3	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR), 5 m	110540
4	Cable Assy, NAV-900 to Nav II/III, AutoPilot™	110547
5	Cable, NavController II/III, Main	54601
6	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR) Extension, 2.5 m. Optional extension for large vehicles	112082
7	Cable Assy, 2 PIN DTM to 2 PIN DT Power Adapter	67095
8	Cable Assy, GFX-750/XCN-1050, Expansion Port Basic, RS-232, Dig I/O, 2.5 m	110545
9	Cable Assy, GFX-750/XCN-1050, Power to display, CAN, 2.5 m	110551
10	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Power with Relay and Switch (Acc)	67259
11	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Basic Power, 4 m	67258

CFX-750 and GFX-750 displays: Installing the power harness


NOTE – Unless otherwise stated, instructions for "the display" refer to either the CFX-750 display or the GFX-750 display.

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.


Step 1

Connect the basic power cable to the positive and negative terminals that are located under the tray on the right side of the cab.



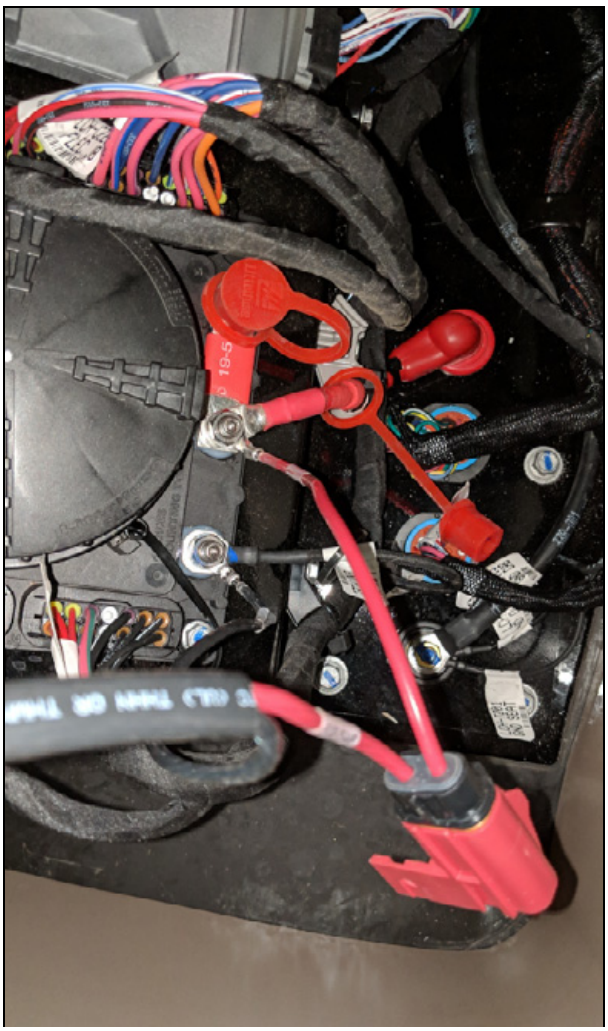


⚠ **CAUTION –** If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example.
Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

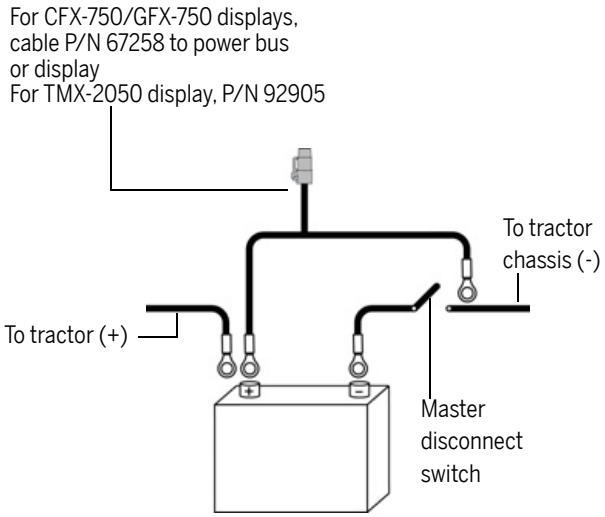

Step 2

Locate and connect the 4-pin Deutsch DTP receptacle on the power bus ❶ to the 4-pin Deutsch DTP plug ❷ on the basic power cable and then remove the protective cap from the 4-pin Deutsch DTP plug ❸ on the power bus and connect the plug to the 4-pin Deutsch DTP receptacle ❹ on the display power adapter.

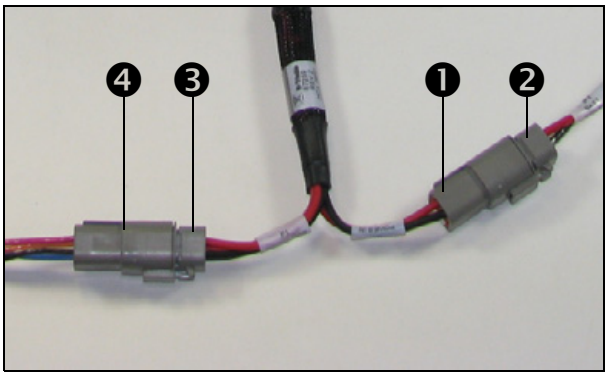

Step 3

Route the display power adapter to the display mounting location and then connect it to the display.



CFX-750 display

CFX-750 displays: Configuring the power bus options

NOTE – Unless otherwise stated, instructions for "the display" refer to either the CFX-750 display.


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

When you use the power bus cable, use one of the following configuration methods to turn on the Autopilot system:

- Display power button is used to turn on the Autopilot system
- External switch is used to turn on the Autopilot system
- Ignition is used to turn on the Autopilot system

Display power button is used to turn on the Autopilot system

Connect the 2 pin connectors labeled **R2** and **P2** on the power bus.

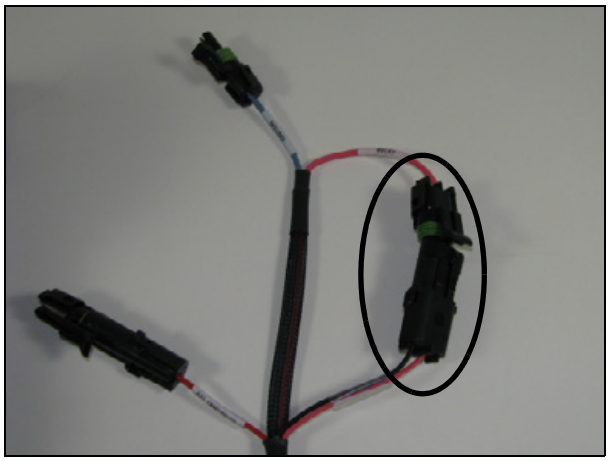


External switch is used to turn on the Autopilot system

Step 1

Connect the cable labeled **R7** switch ❶ (included with the power bus) to connector labeled **P2** on the power bus ❷ and then route the cable labeled **R7** to a switch location.


NOTE – To install the switch provided, drill a ¾" hole.

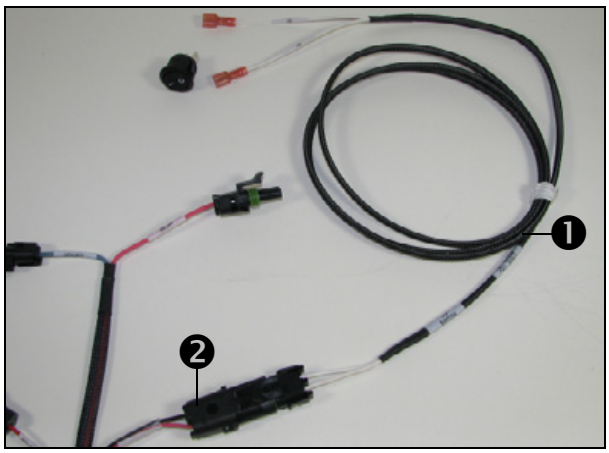

Step 2

Connect the cable labeled **R7** to the switch pins.

NOTE – Polarity is not important.

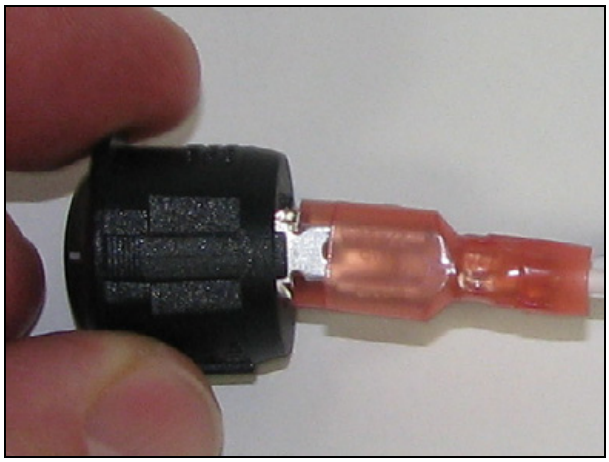


Installing the optional illuminated full or standard Euro switch

Step 1

Find an available knockout location on the vehicle console.

NOTE – An alternative location is required for the switch provided.

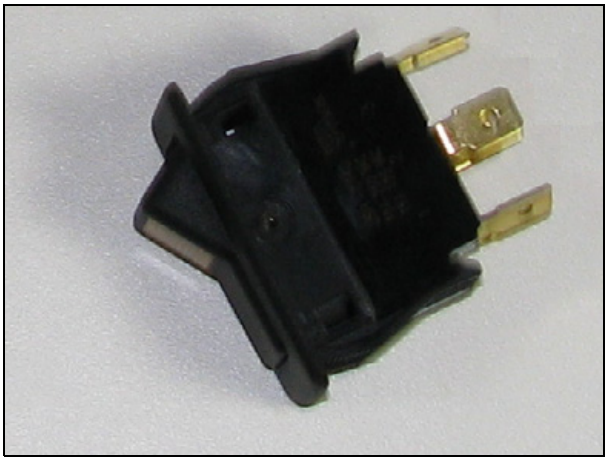


Step 2

Route the cable labeled **R7** to the switch location and then connect the cable to the illuminated switch.

Connect the wire labeled **S1** to pin 5 on the switch and then connect the wire labeled **S2** to pin 4 on the switch.


NOTE – Polarity is important.

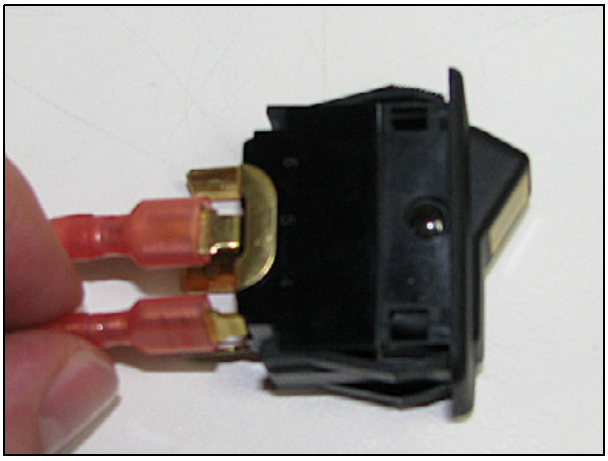

Step 3

Connect a separate wire to pin 3 on the switch using a spade connector. Route the wire and then connect it to the vehicle switched power.


NOTE – This additional wire is required to allow the switch to illuminate.

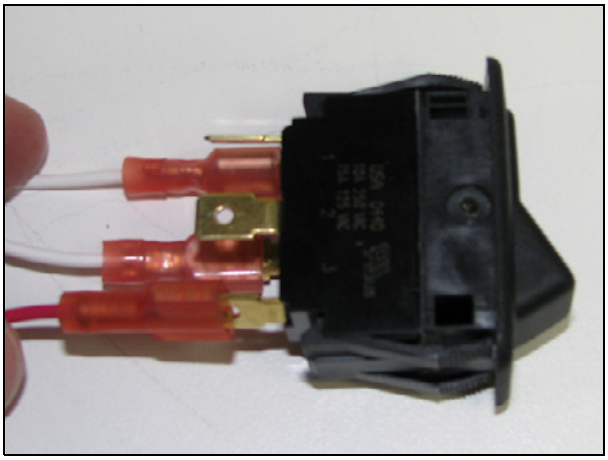

Ignition is used to turn on the Autopilot system

Step 1

Connect the 2-pin connectors labeled **R2** and **P2** on the power bus.

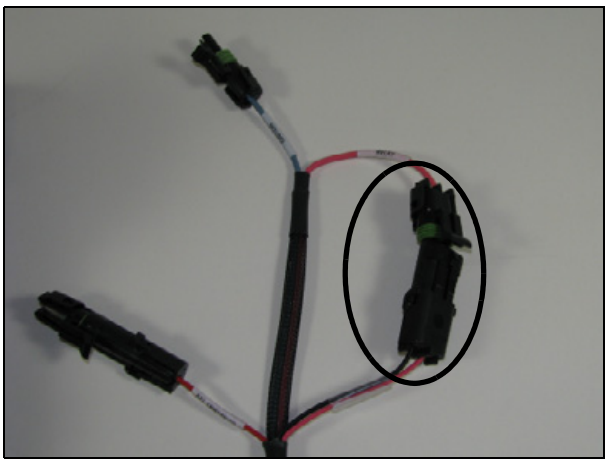


Step 2


Connect the cable labeled **R8 Ignition** (included with the power bus) to connector **P3 Ignition** on the power bus.

Step 3

Route the cable to the vehicles ignition.

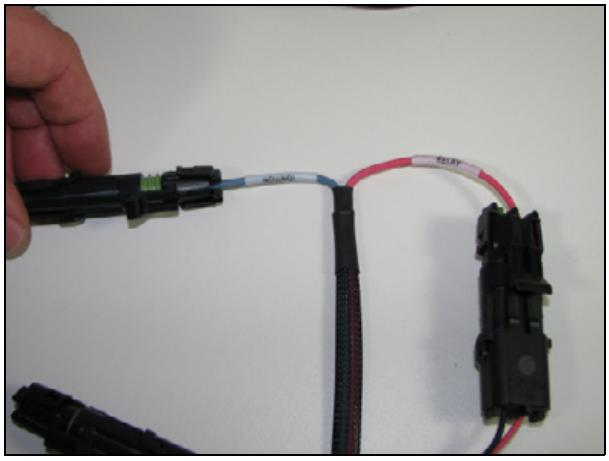

TMX-2050 display: Components

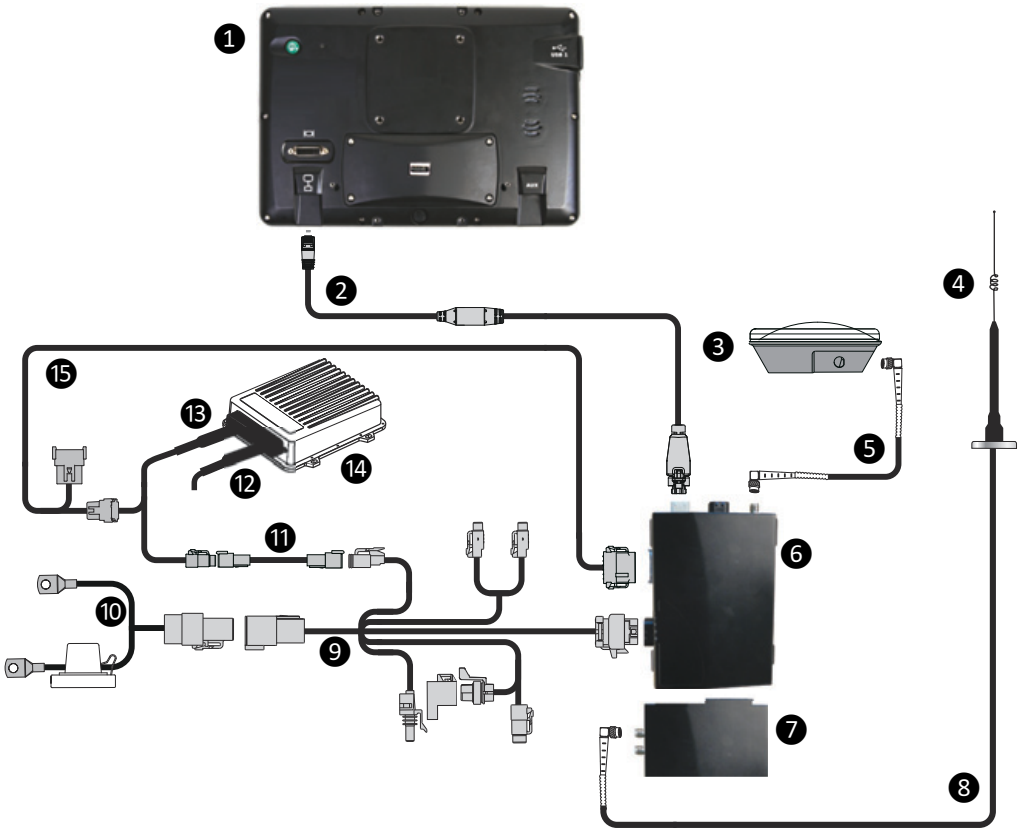


Item	Description	Trimble part number
1	TMX-2050 display	96700-00
2	TM-200 Module to display cable	93843
3	AG-25 GNSS antenna	77038-00
4	900 MHz radio antenna kit	22882-10
5	8 m GNSS TNC/TNC RT angle cable	50449
6	TM-200 Module	95060-00
7	AG-815 radio	
8	NMO-to-TNC 20 ft antenna cable and base	72122
9	TM-200 Module power and I/O cable	92676
10	Cable, battery	92905
11	2-pin DTM to 2-pin DT power adapter cable	67095
12	Cable, NavController diagnostic	54602
13	Main NavController cable	54601
14	NavController	55563-00 55566-00
15	TM-200 Module to NavController cable with port replicator	75741

TMX-2050 display: Installing the power harness


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the basic power cable to the vehicle battery and then route the cable into the cab.

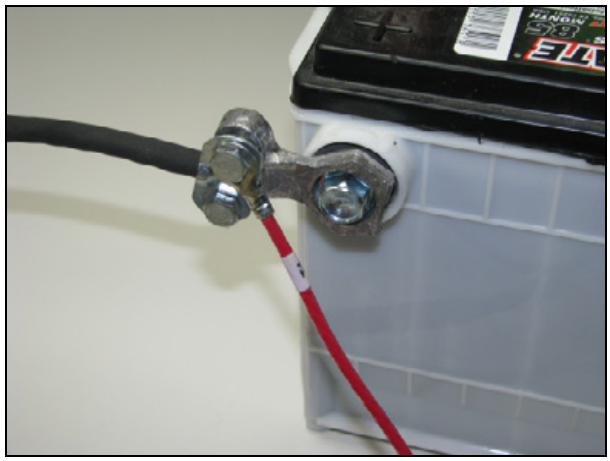

⚠ **CAUTION –** If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example. Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

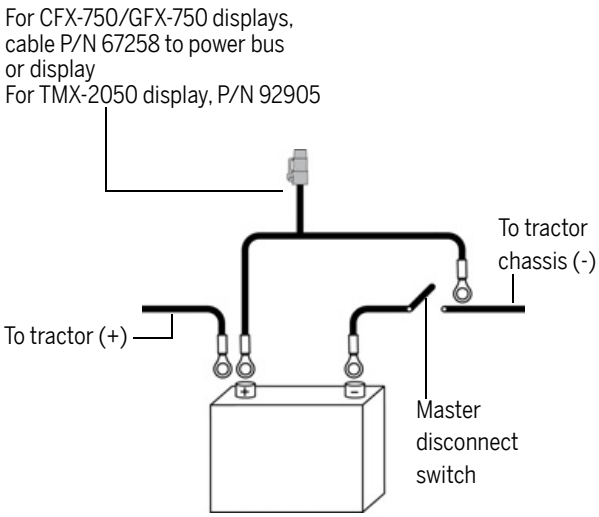


Step 2

Connect the power I/O cable P/N 92676 to the power port on the TM-200 Module.



Step 3


Route the power cable P/N 92905 that you previously connected to the battery and connect it to the R3 power in plug on the P/N 92676 cable.

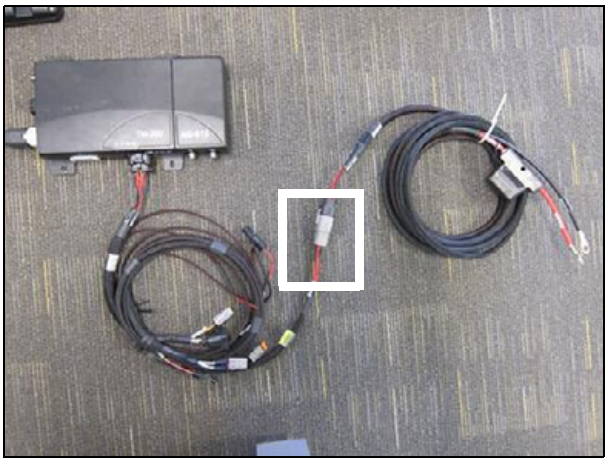

Step 4


Connect the 2-pin DTM to 2-pin DT power adapter P/N 67095 to the P2 power out connector on the P/N 92676 cable.

Route the other end to the NavController harness P/N 54601.

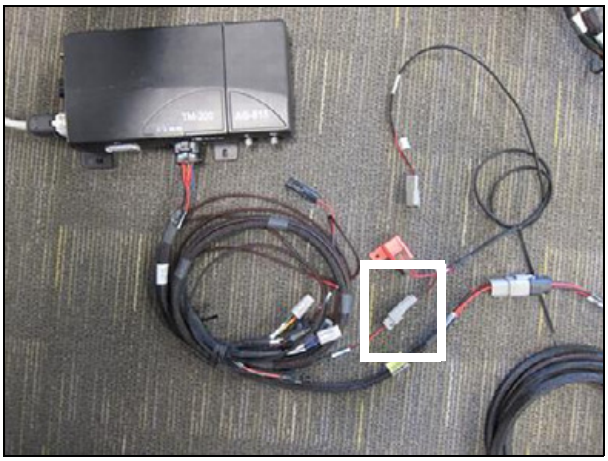

Step 5

Connect the other end of the P/N 67095 cable to the P2 power plug on the P/N 54601 cable.

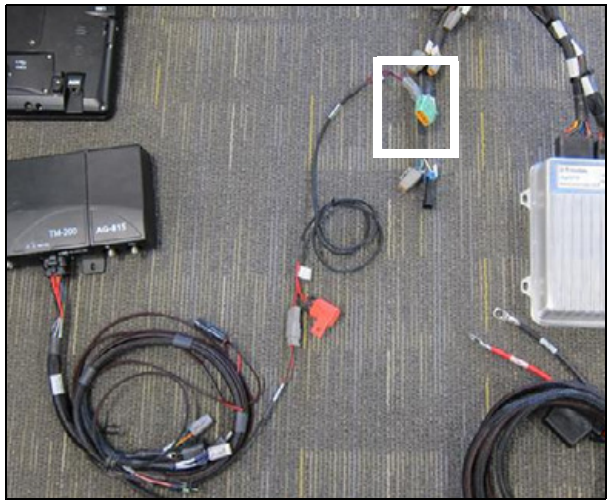

TMX-2050 display: Configuring the power options


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

When you use the power bus cable, use one of the following methods to turn on the Autopilot system on the Trimble TMX-2050 displays:

- The display power button. No further changes need to be made to the power cables.
- Ignition sensing. See below.

Ignition sensing


For ignition sensing with the TMX-2050 display, connect the ignition on the power supply to the R1 connector on the harness, P/N 92676.

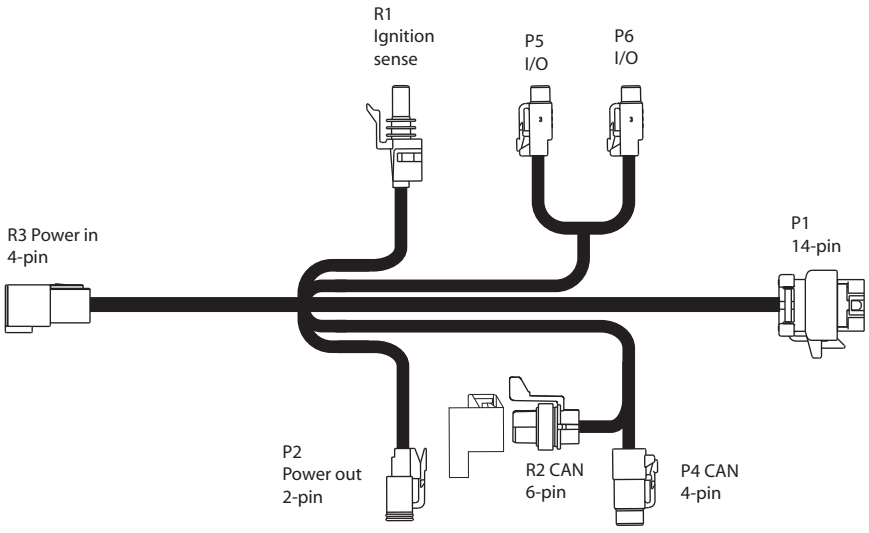

For more information on how to use the ignition sensing option, refer to the *TMX-2050 Display User Guide*.


Step 1

Locate the R1 ignition sensing plug on the P/N 92676 cable; also locate the ignition sensing wire provided with the P/N 92676 cable.

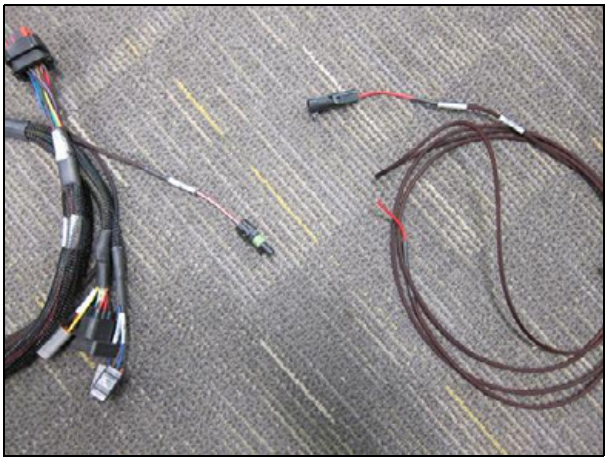

Step 2

Connect the red ignition sense wire to the vehicle ignition source then route to the plug on the harness and then connect it.

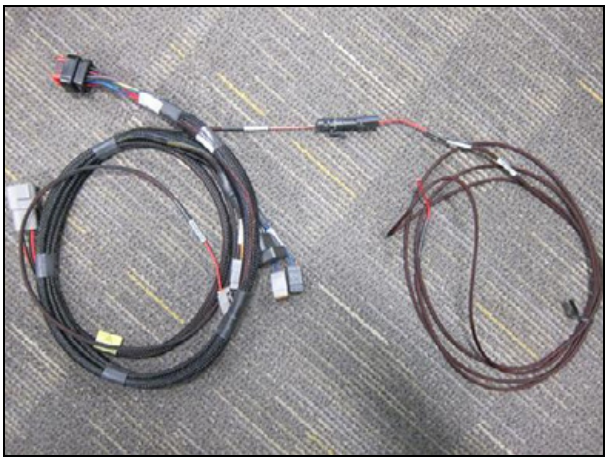

7

Controller Installation

- Installing the controller
- Controller connections

Installing the controller

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Mount the NavController III next to the seat, along the wall of the machine.



Step 1


Using the NavController bracket P/N 116679 as a template, carefully level the bracket then mark four holes for fixing the bracket to the machine.



Step 2

Drill four 5/16" holes for fixing the bracket to the machine.

Then, use the provided ¼" hardware to attach the bracket to the machine.

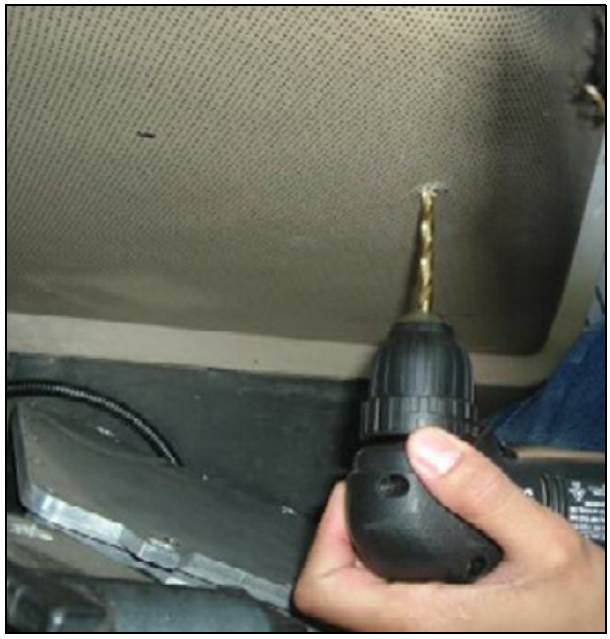

Step 3

Before you install the controller, attach the main and auxiliary cable harnesses. Use an Allen wrench to secure the connectors to the controller.




Step 4

Use the four provided 10-32 screws to attach the NavController to the mounting bracket.

The label should be facing to the right, and connectors pointing to the rear of the vehicle.



Controller connections

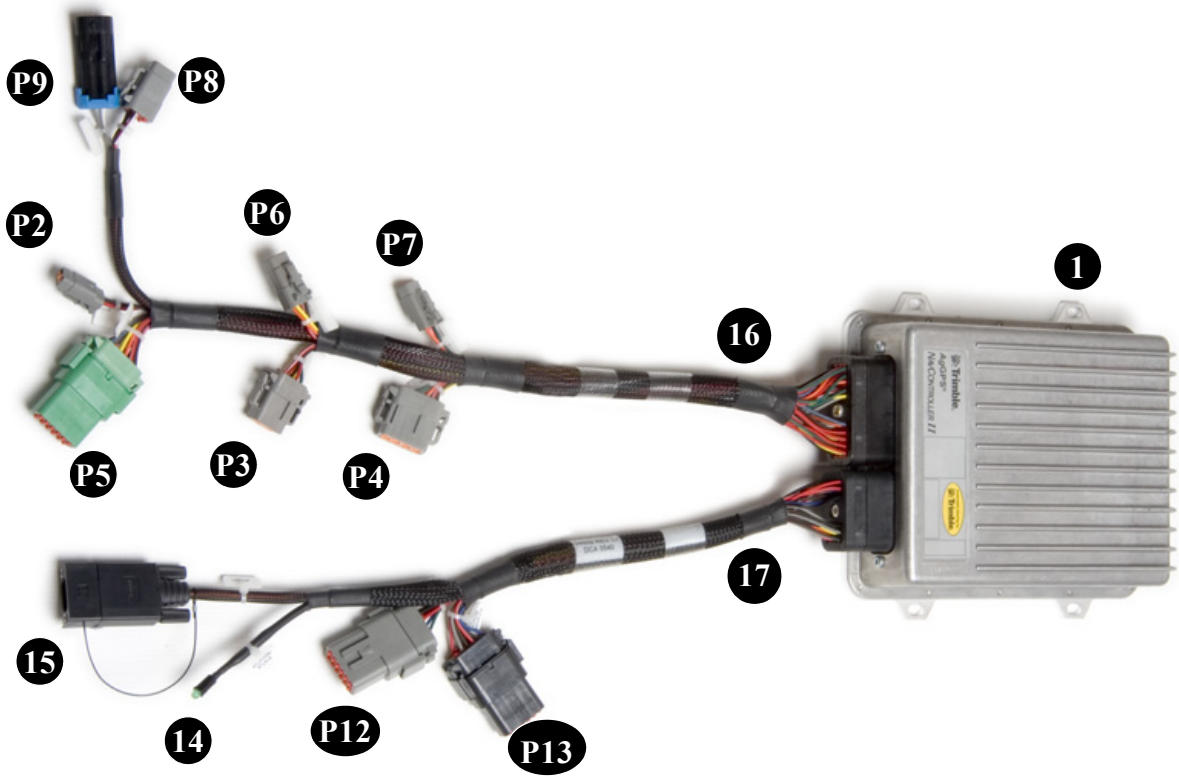


Item	Description	Item	Description
1	NavController III	**P9**	Sonalert connector
P2	Power connector	**P12**	Lightbar/spare connector
P3	GNSS connector	**P13**	Spare sensors connector
P4	Display connector	**14**	Status indicator
P5	Vehicle sensors connector	**15**	Laptop connector
P6	Steering sensor connector	**16**	Main harness
P7	Manual override connector	**17**	Auxiliary harness
P8	Hydraulic valve connector		

Step 1

Connect the power cable connection to P2, which is labeled **Power**. P2 is located on the main wiring harness.


NOTE – The power connection supplies power through the controller to all connected devices, including GNSS and displays.

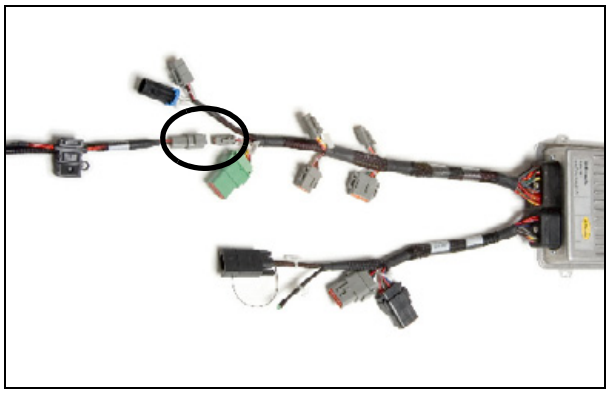

Step 2

Connect the GNSS cable connection to P3, which is labeled **GPS**. P3 is located on the main wiring harness.

NOTE – If you are installing a CFX-750 display, plug the display in here.

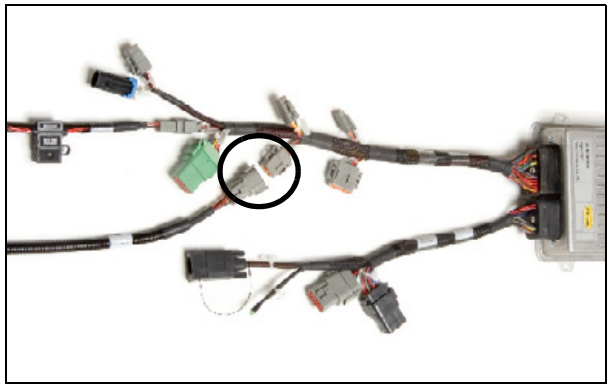


Step 3

Connect the primary display cable connection to P4, which is labeled **Display**. P4 is located on the main wiring harness.


NOTE – *Do not* connect the cable to the connector labeled **Spare** on the auxiliary harness.

NOTE – *Do not* use this connection for CFX-750 display installations.

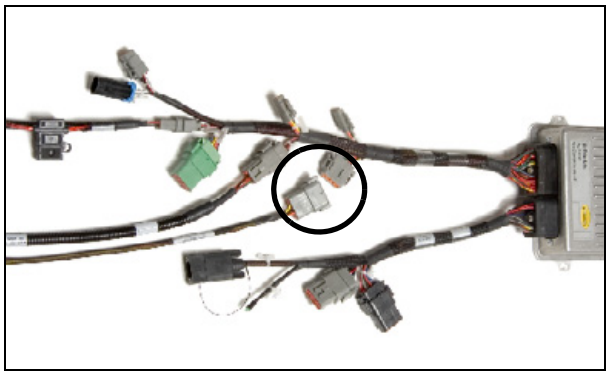


Step 4

Connect the steering sensor cable connection to P6, which is labeled **Steering Sensor**. P6 is located on the main wiring harness.

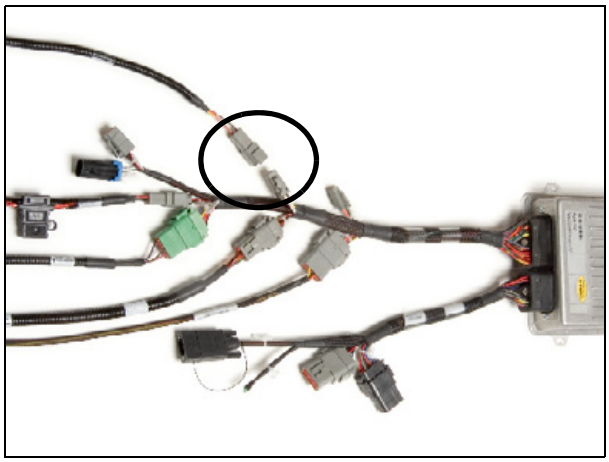


Step 5

Connect the hydraulic steering valve cable connection to P8, which is labeled **Hydraulic Valve**. P8 is located on the main wiring harness.

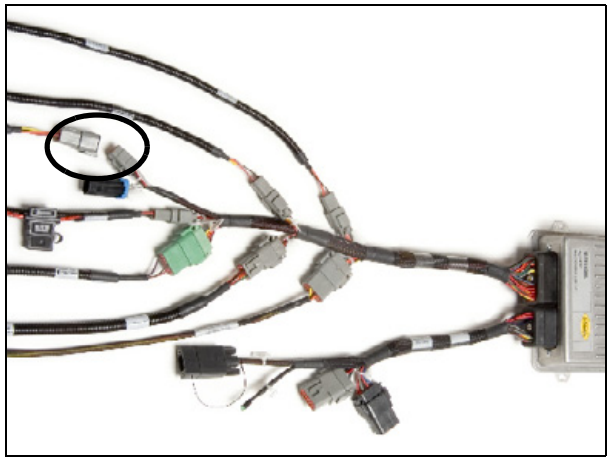


Step 6

Connect the Sonalert P9 to the two-pin Delphi connector on the main wiring harness. Route the cable so the Sonalert warning device is in a position that is audible to the operator.

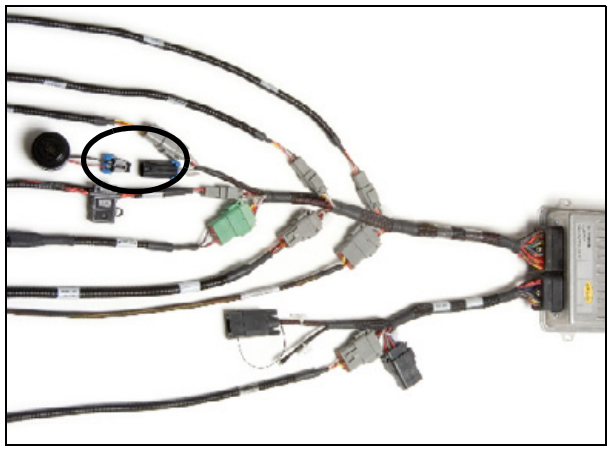

Step 7

Route the LED and laptop lead, which is located on the auxiliary wiring harness, to a location that allows the operator to determine the controller status. See controller LED status for status determination. Six flashes per second indicates a correctly functioning controller.

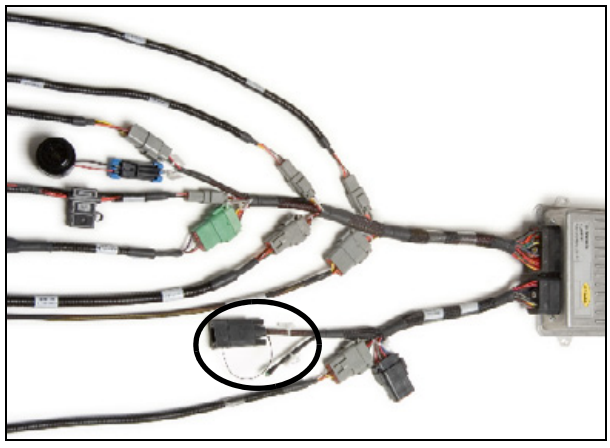

Step 8

Use the provided sleeving to secure the harness cables with tie wraps. Cover and route the cable bundle to avoid damage to connectors and strain on wire connections.

8

Final Machine Check

Performing the final machine check

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

1. Start the machine and check for hydraulic leaks. Correct as needed.
2. Update the Trimble display and the Autopilot NavController III to the latest firmware from http://agpartners.trimble.com.

   You can use FlashLoader 200 software version 3.19 to update the Autopilot controller: Download it from http://agpartners.trimble.com.
3. Load the correct configuration file into the Autopilot NavController III for the sprayer model being used.

   Download the latest set of **External Vehicle Profile** files from http://agpartners.trimble.com.

   You can use Autopilot Toolbox II software version 4.01 to load the configuration file into the Autopilot controller. You can download the Autopilot Toolbox II software from http://agpartners.trimble.com.
4. Calibrate the Autopilot system using the Trimble display or Autopilot Toolbox II software version 4.01. Depending on your machine type, the following items must be calibrated before you can use the Autopilot system:
   - NavController II/III mounting orientation
   - Pump calibration – Done through machine console
   - Antenna height/Antenna axle offset, and Roll offset

NOTE – For best performance, it is recommended that the machine is updated to the latest console and main ECU firmware.