INSTALLATION INSTRUCTIONS

Trimble® Autopilot™ Automated Steering System

Inter-Drain Tile Plow

- 2030
- 2040
- 2050

Version 5.00
Revision A
June 2014
Part number 54035-83-E05

Trimble

Legal Notices

Agriculture Business Area

Trimble Agriculture Division
10368 Westmoor Drive
Westminster, CO 80021-2712
USA
www.trimble.com

Copyright and Trademarks

©1999–2014, Trimble Navigation Limited. All rights reserved.
Trimble, the Globe & Triangle logo, *Ag*GPS, FmX, and OmniSTAR are trademarks of Trimble Navigation Limited, registered in the United States and in other countries. Autopilot, Autosense, and CFX-750 are trademarks of Trimble Navigation Limited. Developed under a License of the European Union and the European Space Agency.

All other trademarks are the property of their respective owners.

Official Language

THE OFFICIAL LANGUAGE OF THESE TERMS AND CONDITIONS IS ENGLISH. IN THE EVENT OF A CONFLICT BETWEEN ENGLISH AND OTHER LANGUAGE VERSIONS, THE ENGLISH LANGUAGE SHALL CONTROL.

Release Notice

This is the June 2014 release (Revision A) of the *Autopilot Automated Steering System Installation Instructions*, part number 54035-83-E05. It applies to version 5.00 of the Autopilot automated steering system.

The following limited warranties give you specific legal rights. You may have others, which vary from state/jurisdiction to state/jurisdiction.

Product Limited Warranty

Trimble warrants that this Trimble product and its internal components (the "Product") shall be free from defects in materials and workmanship and will substantially conform to Trimble's applicable published specifications for the Product for a period of one (1) year, starting from the earlier of (i) the date of installation, or (ii) six (6) months from the date of product shipment from Trimble. This warranty applies only to the Product if installed by Trimble or a distributor authorized by Trimble to perform Product installation services.

Software Components and Enhancements

All Product software components (sometimes hereinafter also referred to as "Software") are licensed and not sold. Any Software accompanied by a separate End User License Agreement ("EULA") shall be governed by the terms, conditions, restrictions and limited warranty terms of such EULA notwithstanding the preceding paragraph. During the limited warranty period you will be entitled to receive, at no additional charge, such Fix Updates and Minor Updates to the Product software as Trimble may develop for general release, subject to the procedures for delivery to purchasers of Trimble products generally. If you have purchased the Product from an authorized Trimble distributor rather than from Trimble directly, Trimble may, at its option, forward the software Fix Update or Minor Update to the Trimble distributor for final distribution to you. Major Upgrades, new products, or substantially new software releases, as identified by Trimble are expressly excused from this enhancement process and limited warranty. Receipt of software updates shall not serve to extend the limited warranty period.
For purposes of this warranty the following definitions shall apply: (1) "Fix Update" means an error correction or other update created to fix a previous software version that does not substantially conform to its published specifications; (2) "Minor Update" occurs when enhancements are made to current features in a software program; and (3) "Major Upgrade" occurs when significant new features are added to software, or when a new product containing new features replaces the further development of a current product line. Trimble reserves the right to determine, in its sole discretion, what constitutes a significant new feature and Major Upgrade.

Warranty Remedies

Trimble's sole liability and your exclusive remedy under the warranties set forth above shall be, at Trimble's option, to repair or replace any Product that fails to conform to such warranty ("Nonconforming Product"), and/or issue a cash refund up to the purchase price paid by you for any such Nonconforming Product, excluding costs of installation, upon your return of the Nonconforming Product to Trimble in accordance with Trimble's standard return material authorization process. Such remedy may include reimbursement of the cost of repairs for damage to third-party equipment onto which the Product is installed, if such damage is found to be directly caused by the Product as reasonably determined by Trimble following a root cause analysis.

Warranty Exclusions and Disclaimer

These warranties shall be applied only in the event and to the extent that (i) the Products and Software are properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's relevant operator's manual and specifications, and; (ii) the Products and Software are not modified or misused. The preceding warranties shall not apply to, and Trimble shall not be responsible for defects or performance problems resulting from (i) the combination or utilization of the Product or Software with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Trimble; (ii) the operation of the Product or Software under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized, installation, modification, or use of the Product or Software; (iv) damage caused by accident, lightning or other electrical discharge, fresh or salt water immersion or spray; or (v) normal wear and tear on consumable parts (e.g., batteries). Trimble does not warrant or guarantee the results obtained through the use of the Product.

THE WARRANTIES ABOVE STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO PERFORMANCE OF THE PRODUCTS AND SOFTWARE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND BY EITHER TRIMBLE NAVIGATION LIMITED OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCTS OR SOFTWARE. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

TRIMBLE NAVIGATION LIMITED IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF GPS SATELLITES OR THE AVAILABILITY OF GPS SATELLITE SIGNALS.

Limitation of Liability

TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT OR SOFTWARE LICENSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANY WAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS), REGARDLESS WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

NOTE: THE ABOVE LIMITED WARRANTY PROVISIONS MAY NOT APPLY TO PRODUCTS OR SOFTWARE PURCHASED IN THE EUROPEAN UNION. PLEASE CONTACT YOUR TRIMBLE DEALER FOR APPLICABLE WARRANTY INFORMATION.

Notices

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

Notice to Our European Union Customers

For product recycling instructions and more information, please go to:
www.trimble.com/ev.shtml



Recycling in Europe: To recycle Trimble WEEE, Call +31 497 53 2430, and ask for the "WEEE Associate"
Or
Mail a request for recycling instructions to:
Trimble Europe BV
c/o Menlo Worldwide Logistics
Meerheide 45
5521 DZ Eersel, NL

Safety Information

Always follow the instructions that accompany a Warning or Caution. The information they provide is intended to minimize the risk of personal injury and/or damage to property. In particular, observe safety instructions that are presented in the following format:

WARNING – This alert warns of a potential hazard, which, if not avoided, can cause severe injury.

CAUTION – This alert warns of a hazard or unsafe practice which, if not avoided, can cause injury or damage.

Note – *An absence of specific alerts does not mean that there are no safety risks involved.*

Warnings

WARNING – When you are working on the vehicle's hydraulic systems, vehicle attachments that are suspended can drop. If you are working around the vehicle, you could suffer serious injury if an attachment dropped on you. To avoid this risk, lower all vehicle attachments to the ground before you begin work.

WARNING – If someone else attempts to drive the vehicle while you are working on or under it, you can suffer serious or fatal injuries. To avoid this possibility, install a lockout box on the battery terminal to prevent the battery from being reconnected, remove the key from the vehicle's ignition switch, and attach a "Do not operate" tag in the cab.

WARNING – Agricultural chemicals can pose serious health risks. If the vehicle has been used to apply agricultural chemicals, steam clean the vehicle to remove any chemical residue from the areas of the vehicle where you will be working.

WARNING – Vehicle cabs can be quite high in the air. To avoid potentially serious injury through falling from this height, always use the steps and handrails, and face the vehicle, when you enter or exit it.

Cautions

CAUTION – When the vehicle has been running, parts of the vehicle, including the engine and exhaust, can become extremely hot and can cause serious burns. To avoid burns, allow hot machine parts to cool before you begin working on them.

CAUTION – The system installation may bring you into contact with chemical substances, such as oil, which can cause poisoning. Wash your hands thoroughly after you finish working on the system.

CAUTION – Battery posts, terminals, and related accessories contain lead and lead compounds, which can cause serious illness. To avoid ingesting lead, wash your hands thoroughly after touching the battery.

CAUTION – Always wear protective equipment appropriate to the job conditions and the nature of the vehicle. This includes wearing protective glasses when you use pressurized air or water, and correct protective welder's clothing when welding. Avoid wearing loose clothing or jewelry that can catch on machine parts or tools.

CAUTION – Parts of the vehicle may be under pressure. To avoid injury from pressurized parts, relieve all pressure in oil, air, and water systems before you disconnect any lines, fittings, or related items. To avoid being sprayed by pressurized liquids, hold a rag over fill caps, breathers, or hose connections when you remove them. Do not use your bare hands to check for hydraulic leaks. Use a board or cardboard instead.

CAUTION – Do not direct pressurized water at:
- electronic or electrical components or connectors
- bearings
- hydraulic seals
- fuel injection pumps
- any other sensitive parts or components



Set the hose pressure as low as practicable, and spray at a 45° to 90° angle. Keep the nozzle of the power washer away from the machine at the distance recommended by the manufacturer.

CAUTION – To prevent damage to the system, make sure that no wires or hoses interfere with or catch on any mechanical linkages, or contact any machine parts that get hot.

Contents

Legal Notices 2

Safety Information 3

Warnings 3

Cautions 3

1 Introduction 7

Technical assistance 7

Manual system upgrade to Autopilot 8

CFX-750 display and FmX integrated display 8

Required components 8

Antenna mounting kits 8

Accessory kits 8

Autopilot hardware organization: As shipped 9

Preparing the vehicle for installation 9

2 Vehicle Interface Cable Installation 10

Machine pre-check: Identifying the pump connector 11

Installing the interface cable 12

3 Antenna/Receiver Installation 15

Antenna and receiver installation options 16

Possible mounting methods 16

Attaching the plate with VHB adhesive 17

AG-372 receiver with AgGPS 450/900 radio module (if equipped) components 19

Installing the AG-372 GPS receiver with AgGPS 450 / 900 radio module (if equipped) 20

Removable installation 20

Installing the RTK radio module (if equipped) 21

Installing an AG-372 receiver with magnetic feet 26

AgGPS 542 receiver components 28

Installing the AgGPS 542 receiver 29

4 Display Installation 33

CFX-750 display components 34

FmX integrated display components 35

Preparing the CFX-750 display 36

Installing the CFX-750 display 37

CFX-750 display: Installing the wiring harness 38

Preparing the FmX integrated display 39

Installing the FmX integrated display 40

FmX integrated display: Installing the wiring harness 41

CFX-750 display and FmX integrated display: Connecting accessory options 42

AgCam 42

CFX-750 and FmX displays: Installing the GNSS antenna and plate using VHB 44

CFX-750 and FmX displays: Installing the RTK radio antenna 48

5 Remote Engage Switch Installation 50

Remote engage switch components: Rocker switch 51

Remote engage switch components: Foot switch 52

Preparing the remote engage cable 53
Using the remote engage switch 56

6 Controller Installation 57

Installing the controller 58
Controller connections 60

7 Final Machine Check 63

CHAPTER 1

Introduction

In this chapter:

- Technical assistance
- Manual system upgrade to Autopilot
- Required components
- Autopilot hardware organization: As shipped
- Preparing the vehicle for installation

This manual describes how to install the Trimble® Autopilot™ automated steering system.

Even if you have used another GNSS (Global Navigation Satellite System), such as the United States' GPS (Global Positioning System), before, spend some time reading this manual to learn about the special features of this product. If you are not familiar with GNSS, go to the Trimble website (www.trimble.com) for an interactive look at Trimble and GNSS.

Technical assistance

If you have a problem and cannot find the information you need in the product documentation, contact Trimble technical support:

1. Log into http://agpartners.trimble.com.
2. Click the *Feedback* link at the right of the screen. A form appears.
3. Complete the form and then click **Submit Feedback**.

Manual system upgrade to Autopilot

CFX-750 display and FmX integrated display

Retain	Remove
CFX-750™ display: P/N 94000-xx Power cable CFX-750 display: P/N 77282 **FmX® integrated display: P/N 93100-xx** Power cable FmX display: P/N 66694 Antenna for display: P/N 60600-02 (DGPS) or 77038-00 (OmniSTAR®/RTK) Antenna to receiver cable: P/N 50449 Basic cable (both displays): P/N 67258	

Required components

Kits required	Special tools
Platform kit: P/N 54035-83	Drill $^{5}/_{16}$" drill bit ⅜-16 tap 2" hole saw

Antenna mounting kits

Kits required
P/N 62034

Accessory kits

Kits required
Remote engage switch assembly – standard Euro: P/N 57227-10 Remote engage switch assembly – full Euro: P/N 57227-20 Remote engage foot pedal: P/N 57259

Autopilot hardware organization: As shipped

Hardware	Component	See...
Platform kit: P/N 54035-83	Manual override cable	Chapter 2
	Bolt kit controller	Chapter 6
Roof bracket kit: P/N 62034	Roof brackets	Chapter 3
	Bolt kit, roof bracket	
GNSS receiver	GNSS receiver	Chapter 3
	GNSS antenna	
	GNSS receiver power/data cable	
	RTK radio, cable, and radio antenna	
Display	CFX-750 display	Chapter 4
	FmX integrated display	
	Display cable	
	Mounting bracket	
Common parts	Controller	Chapter 6
	Controller mounting bracket	
	Cable kit: • Main wiring harness • Power bus auxiliary wiring harness • Sonalert alarm	

Preparing the vehicle for installation

Note – *The left and right sides of the vehicle are referenced while standing behind the unit, facing the normal direction of travel.*

1. Park the vehicle on a hard, level surface. Block the front and rear wheels.
2. Align the steering straight ahead. On an articulated vehicle, install the articulation locks.
3. Remove all dirt and debris from the areas of the vehicle where the Autopilot system will be installed.
4. Open all kit boxes and check the contents of the box against the packing list/s. Lay all of the parts out on a clean workbench.

CHAPTER 2

Vehicle Interface Cable Installation

In this chapter:

- Machine pre-check: Identifying the pump connector
- Installing the interface cable

This chapter describes how to install the vehicle interface cable.

Machine pre-check: Identifying the pump connector

Identify and remove the steering valve connections. There will be one 4-pin connector on each pump.

Standard connections are either a metallic Cannon connector, or a Weather Pack connector.

- The Weather Pack valve adapter cable is included with the steering interface harness (Trimble P/N 91081).
- The Cannon-style valve adapter is available as an optional purchase (Trimble P/N 91081-01).



Installing the interface cable


Step 1

Locate the steering interface harness (Trimble P/N 91081).



Step 2

Plug connector R8 (Hydraulic Valve) on the steering harness P/N 91081 into P8 on the NavController II harness (Trimble P/N 54601).

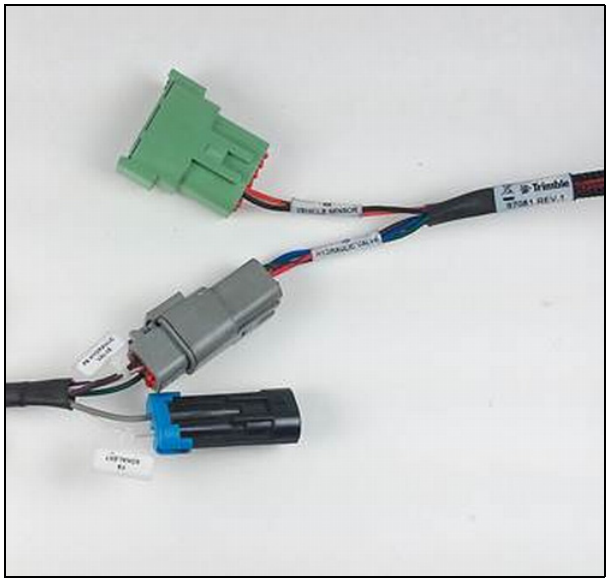

Step 3

Identify the in-line valve resistor cable (P/N 98081-10) and plug it into P3 VALVE RES on the steering interface cable (P/N 98081).



Step 4

Identify the manual override push-button switch (P/N 98004) and cable (P/N 98404).

Identify an appropriate location to mount the switch. It should be located in an easily accessible location that is close to the steering joysticks. Drill a ½" hole and insert the switch for a snap-in installation.



Step 5


Route the wires from behind the panel, and insert the four wires into the provided 4-pin DTM female connector (R1) as described below:

Pin	Color	Desc.
1	Orange	Signal
2	Red	+5V
3	Brown	Signal ground
4	Black	LED ground

Step 6

Plug R1 on cable P/N 98004 into P1 on cable P/N 98404.

Then, plug connector R7 on cable P/N 98404 into connector P7 OVERRIDE on the controller main harness (Trimble P/N 54601) using the gray 3-pin Deutsch connector.

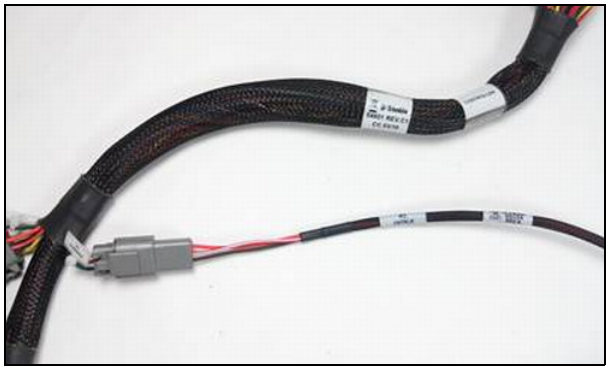

Step 7

On the outside of the machine, locate the steering pumps in the center of the machine, near the front of the tracks.




Step 8

Remove the steering valve connections. There will be one 4-pin connector on each pump.

Standard connections are either a metallic Cannon connector, or a Weather Pack connector (see Machine pre-check: Identifying the pump connector, page 11).

Plug the appropriate adapter into this location.

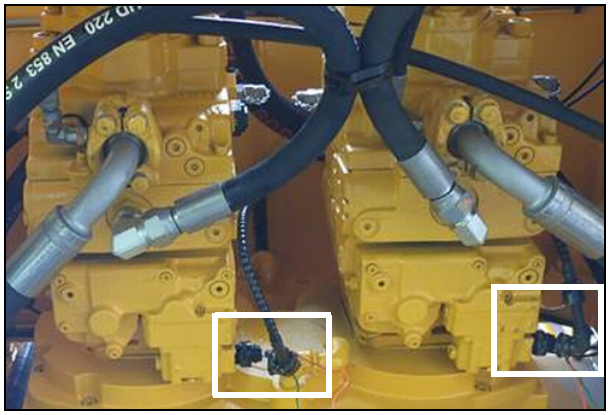

CHAPTER 3

Antenna/Receiver Installation

In this chapter:

- Antenna and receiver installation options
- AG-372 receiver with AgGPS 450/900 radio module (if equipped) components
- Installing the AG-372 GPS receiver with AgGPS 450 / 900 radio module (if equipped)
- Installing an AG-372 receiver with magnetic feet
- AgGPS 542 receiver components
- Installing the AgGPS 542 receiver

This chapter describes how to install the required receiver and antenna, and radio module (if used).

To install the antenna for the CFX-750 or FmX display, see Chapter 4, Display Installation.

Antenna and receiver installation options

Note – *Performance of the Autopilot system on tracked machines such as these tile plows is dependent on mounting the GPS antenna as close as possible to the center of rotation of the machine. Mounting the antenna within 1-2 feet of the center of the machine is ideal.*

There are several options for mounting components (the antenna, radio module, or GNSS receiver) on the cab roof depending on the accuracy required and the antenna type:

- **VHB mount** – Attach a P/N 62034 plate or a V plate directly to the roof with VHB (Very High Bond) adhesive for magnetic mounting. See page 17.
- **Magnetic mounting** – Magnetic mounting for quick release is available for both VHB and spar type mounting.

Possible mounting methods

GNSS receiver	VHB mounted plate	VHB V mounted plate
CFX-750 display; FmX integrated display	✓	✓
AG-372 receiver	✘	✓
Trimble®*Ag*GPS® 542 receiver	✓	✓

Note – *For WAAS, EGNOS, OmniSTAR VBS, Beacon, and DGPS applications, place either of the plates in a firm location using the VHB.*

Attaching the plate with VHB adhesive

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Standard P/N 62034 plates are provided in most kits. You can use the VHB mounting method to attach either a P/N 62034 plate or a V plate.

- **RTK, OmniSTAR, DGPS, GLONASS applications** – To use this method for high accuracy, the surface must be rigid and free of "oil panning". For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a P/N 62034 plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust. Apply force to the roof to find a firm location.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


Note – *The VHB strips are pre-applied to the P/N 62034 plate.*

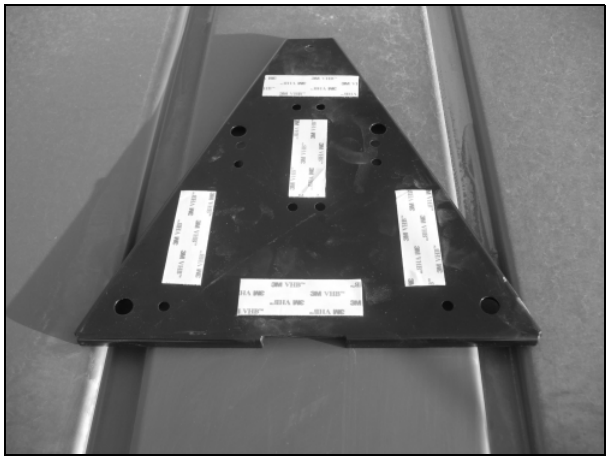

Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end of the plate points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

Note – *The arrow points to the front of the vehicle.*

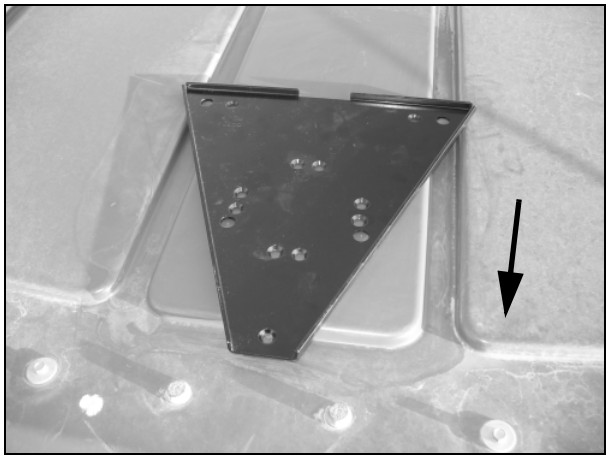


V plate



P/N 62034

AG-372 receiver with *Ag*GPS 450/900 radio module (if equipped) components

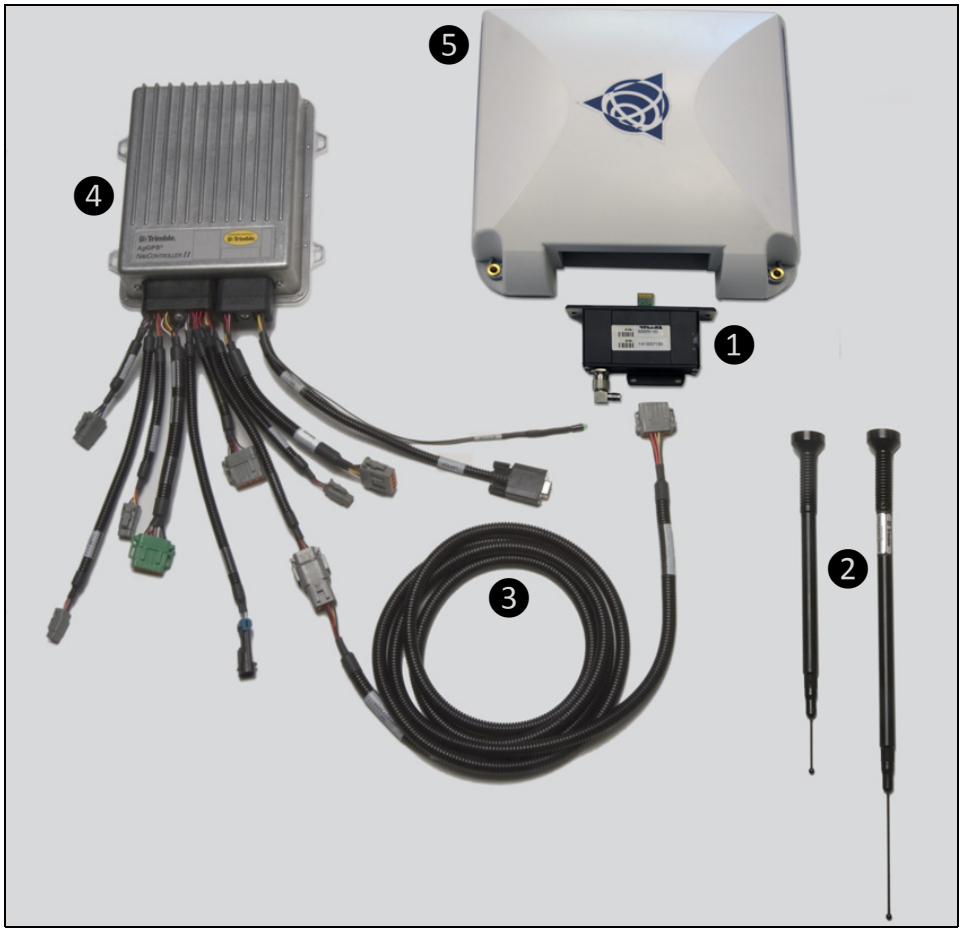

Item	Description	Trimble part number
❶	*Ag*GPS 450 or 900 radio (if equipped)	
❷	Radio antenna cable and magnetic mount	
❸	*Ag*GPS 450 or 900 radio antenna	
❹	Antenna/receiver cable	54608
❺	Autopilot controller	

Installing the AG-372 GPS receiver with *Ag*GPS 450 / 900 radio module (if equipped)

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.


To attach the AG-372 receiver plate to the cab roof so that it can be removed if required, attach a V plate to the roof using VHB and then stick the receiver plate to the V plate with magnets.

Removable installation

Step 1


V plate

Attach the V plate to the roof using VHB adhesive. Ensure that the narrow end points forward.

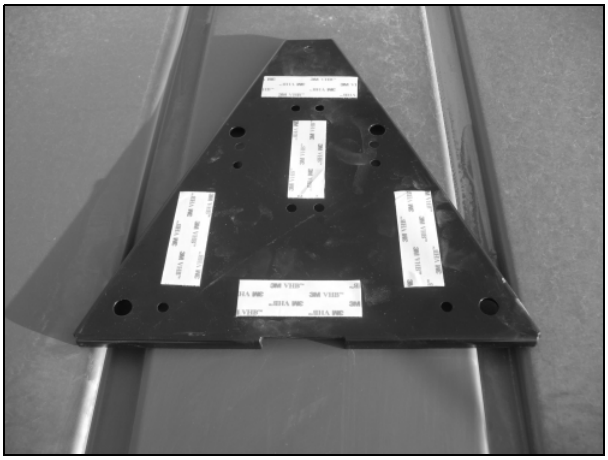

Mounting plate

Attach the three provided magnets to the plate with the ¼" flathead screws and hardware provided.

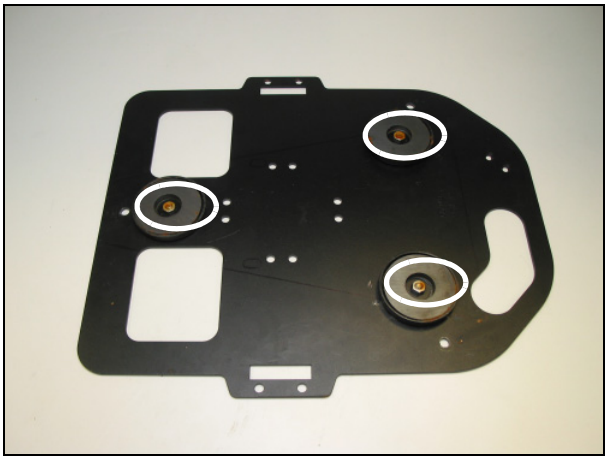

Underside of plate

Installing the RTK radio module (if equipped)


Step 1

Remove the blanking plate and set it aside.




Step 2

Place the integrated radio inside the AG-372 receiver. Ensure that the circuit board is aligned with the slot in the vertical wall of the receiver.

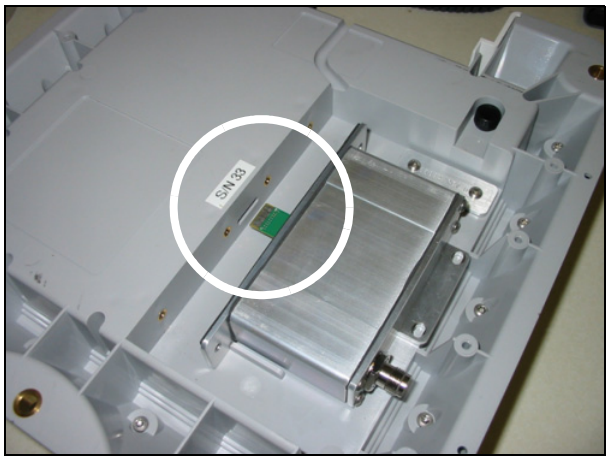


Step 3

Slide the integrated radio back so that it is flush with the vertical wall of the receiver.

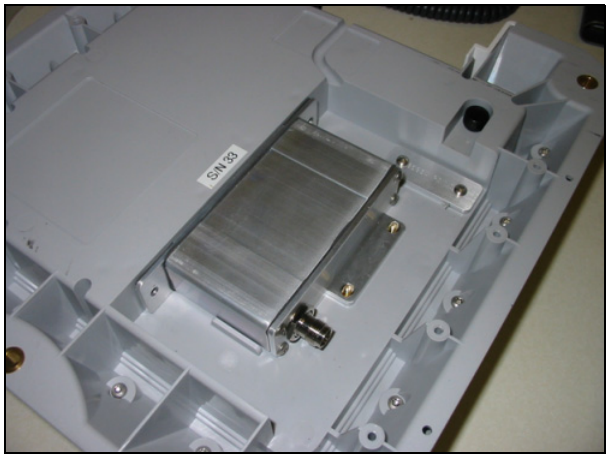

Step 4


Use a #1 or #2 Phillips screwdriver and the supplied screws to install the integrated radio. First insert and tighten the two screws on the horizontal wall (arrowed), and then insert the remaining screws.

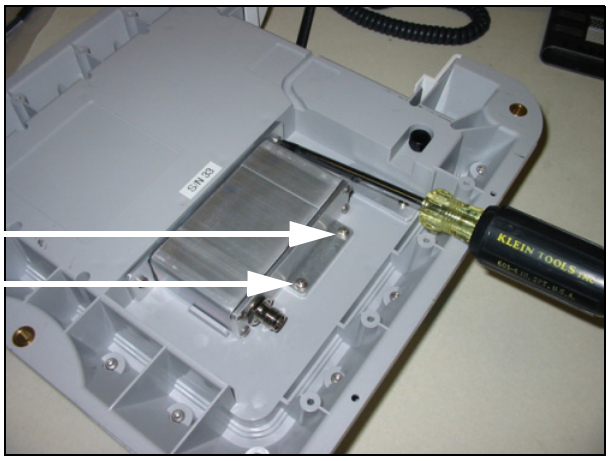

Step 5

Install the supplied antenna cable.

Notes: *The housing can accommodate a cable diameter of up to ¼".*

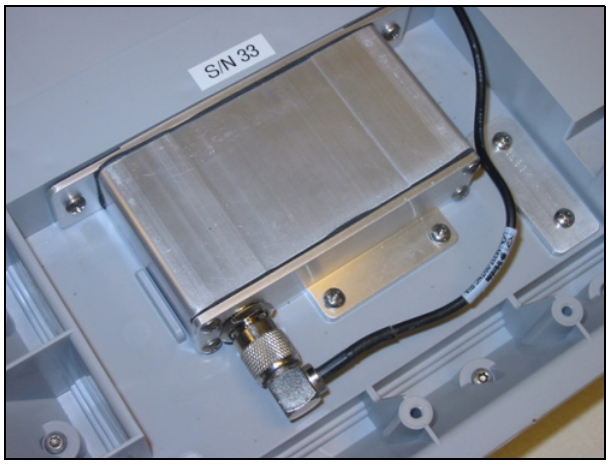


Step 6

Route the cable through the cable channel and then insert the cable cover.




This image shows the unit with the cable routed through the channel.

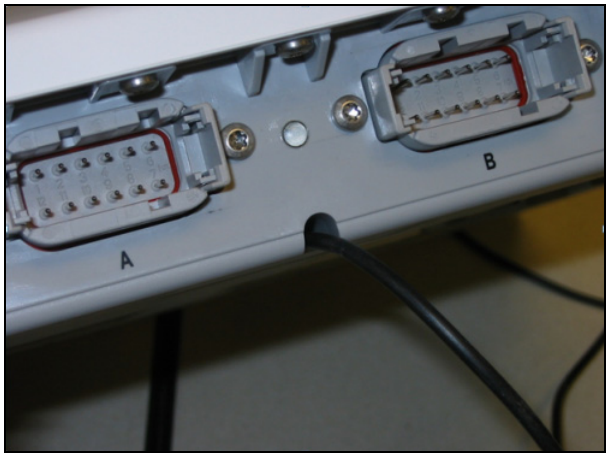


Step 7

Attach the antenna base to the rear of the plate with the two flathead screws provided.

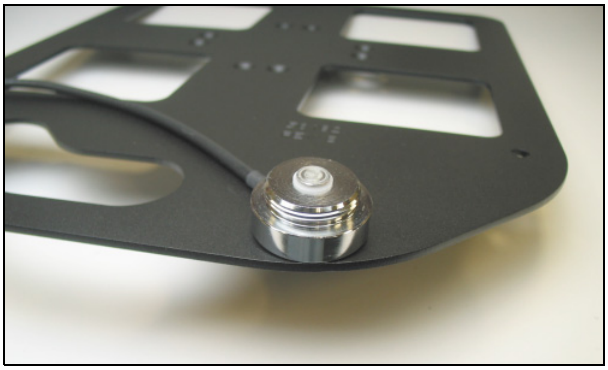

Step 8

Attach the radio antenna to the antenna base.

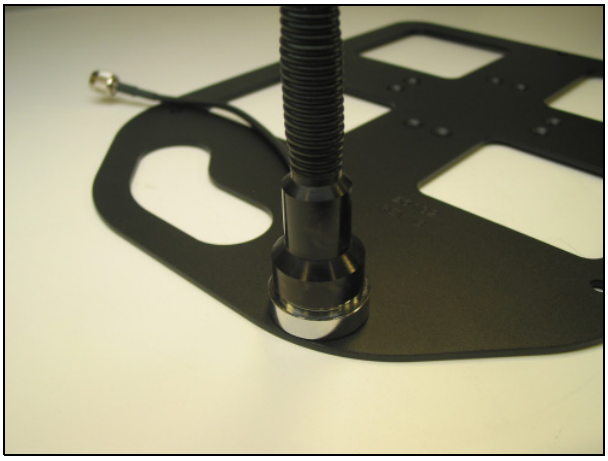

Step 9

Position the AG-372 receiver and radio on the mounting plate with the connector ports facing the radio antenna. Align the three bolt holes with the receiver, radio, and mounting plate.




Step 10

Insert the nylon bushings provided.



Step 11


Insert the bolts through the receiver, radio, and mounting bracket. Place nuts on the bolt ends and then tighten them.

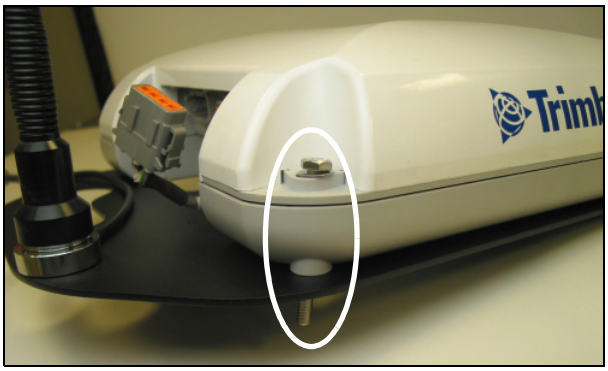

Step 12

Magnet method


Place the receiver on the roof by aligning the magnets with the V plate. Ensure that the handle ❶ is toward the back of the vehicle.

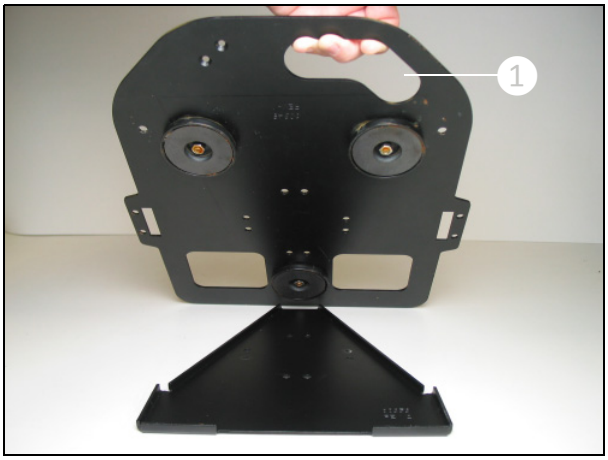

Step 13

Connect the cable from the cab controller into port A ❶ of the AG-372 receiver. Bolt the cable clamp ❷ to the left side of the receiver.

Route the cable into the cab and into the controller.

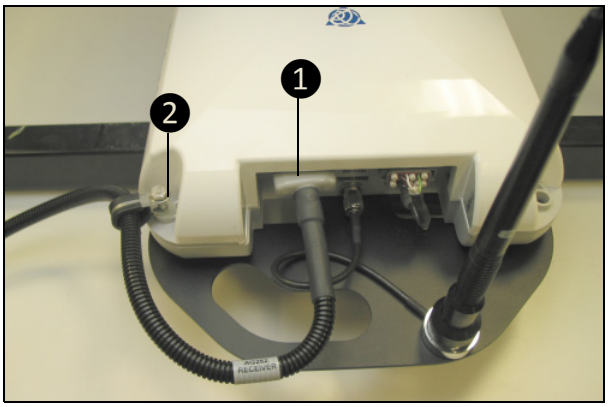

Installing an AG-372 receiver with magnetic feet

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Use this option only when all other options are unavailable. It requires a firm surface for mounting to avoid vertical vibration and is not an easily repeatable location when moving receivers. Many cabs do not offer roof bolts; you may need to drill or to construct a firm location.

Step 1


Attach the magnets to the receiver mounting plate. Use the three ¼" bolts to mount the AG-372 receiver.

Place the nuts on the receiver side.



Step 2

Turn the mounting plate upside down. Stick the covers onto the magnets as shown.

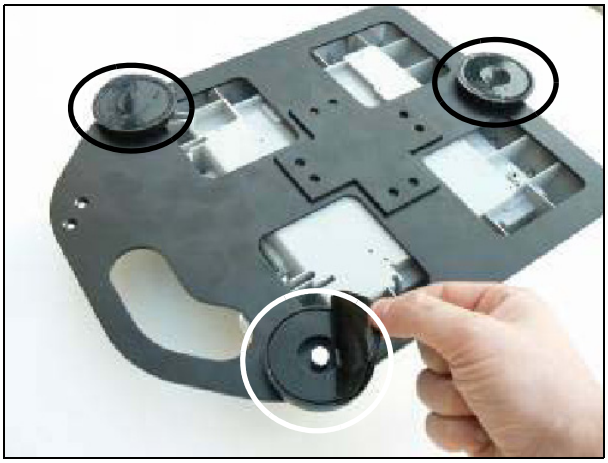


Step 3

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.


Remove the backing from the VHB strips and then apply the plates to the cab roof.

Attach the three mounting plates so that the receiver is as firm as possible.

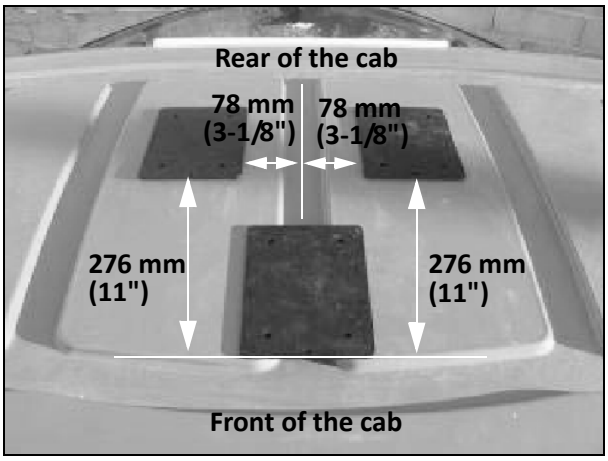


Step 4

Stick the antenna magnetic mounts at the center of the mounting plates.

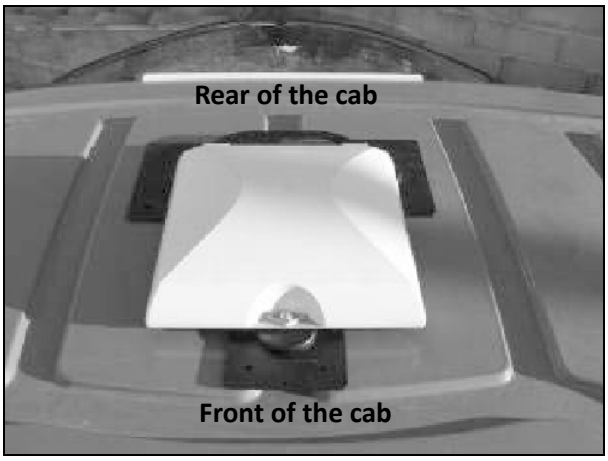


Step 5

Connect the antenna cable to port A of the AG-372 GPS receiver and then route the cable toward the NavController II harness.

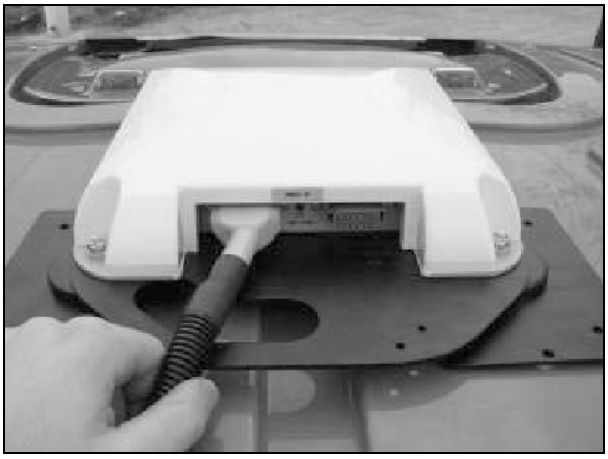

*Ag*GPS 542 receiver components

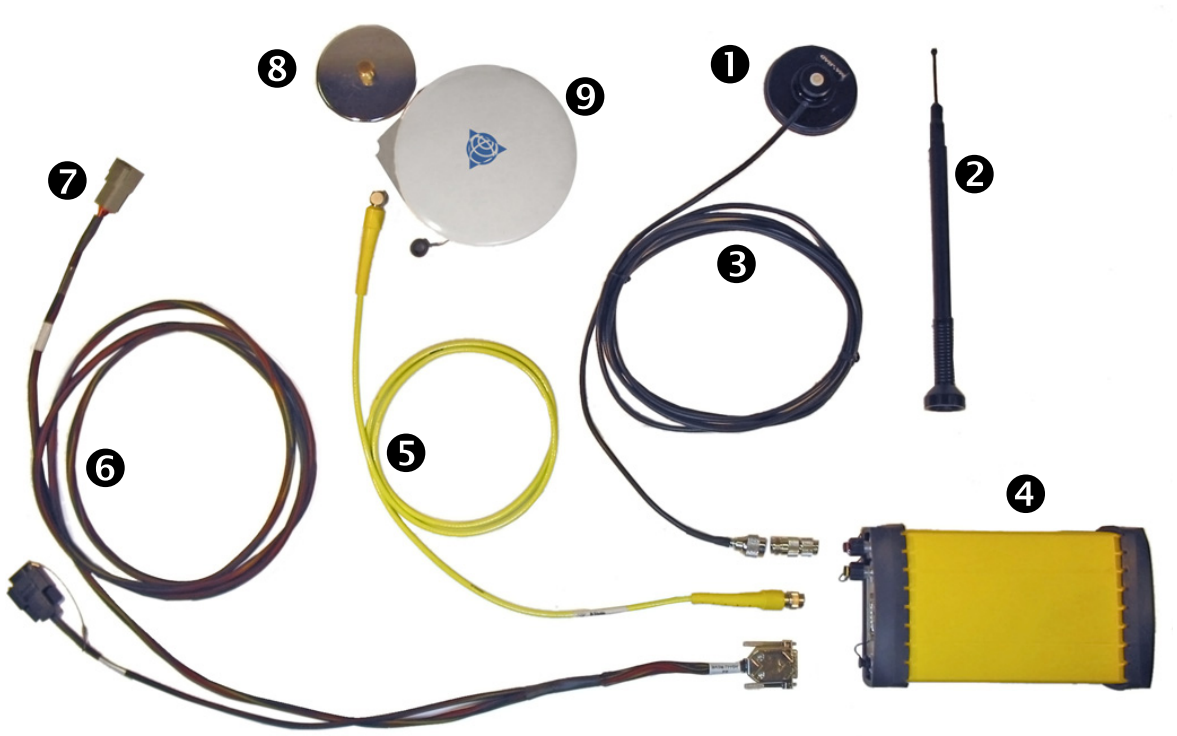

Item	Description	Trimble part number
❶	Radio antenna magnetic base	
❷	Radio antenna	
❸	Radio antenna cable	
❹	*Ag*GPS 542 GPS receiver	
❺	Antenna cable	
❻	Receiver cable	62037
❼	To controller “P3 GPS”	
❽	Antenna magnetic mount	
❾	*Ag*GPS 542 GPS receiver	

Installing the *Ag*GPS 542 receiver


WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Attach the large magnet with a $^{5}/_{8}$" stud to the GPS antenna.



If the antenna has magnets built in, skip this step.

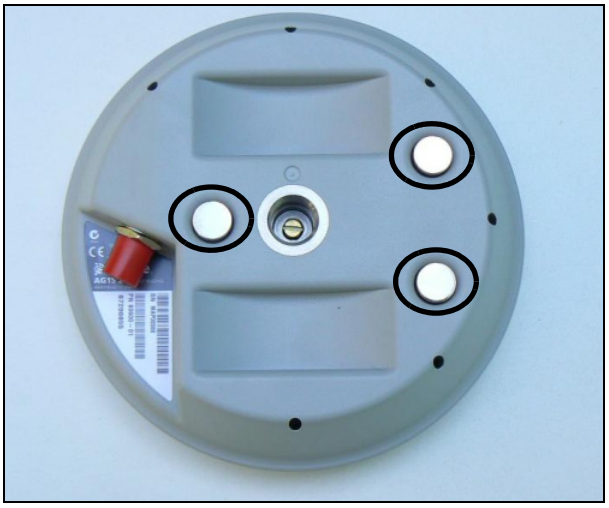

Step 2

GLONASS,RTK, OmniSTAR, DGPS applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



Step 3

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



Step 4

Mount the receiver in a convenient location in the cab. Route the antenna cable to the receiver and then connect it.




Step 5

Identify the correct adaptor for the radio connection:


❶ Reverse polarity TNC-to-N for 900 MHz radios

❷ Normal polarity TNC-to-N for 400 MHz radios

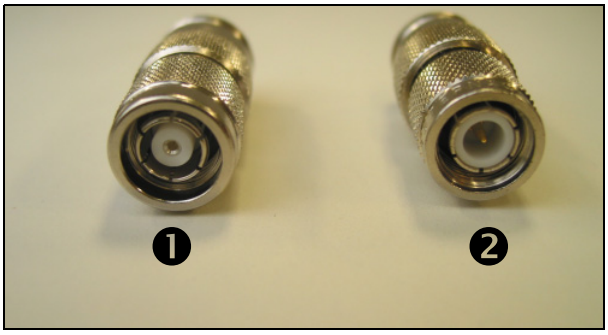

Step 6

Attach the adaptor to the radio port.

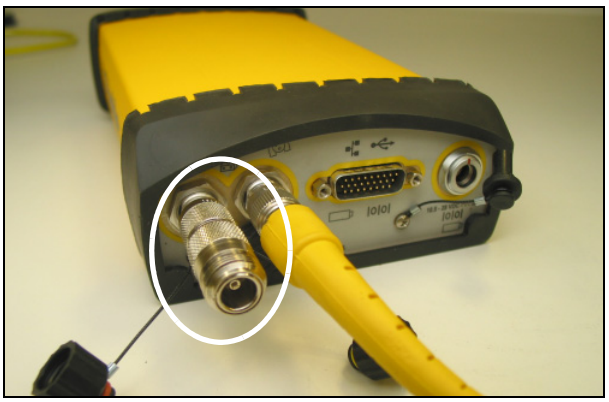

Step 7

Connect the radio antenna cable to the radio port adaptor.



Step 8

Connect the controller cable to the 26-pin connector of the receiver. Controller cable connections will be completed in Chapter 6, Controller Installation.




Step 9

Connect the radio antenna to the magnetic antenna base.



Step 10

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the 4" x 6" plate with the VHB provided to relocate the antenna.

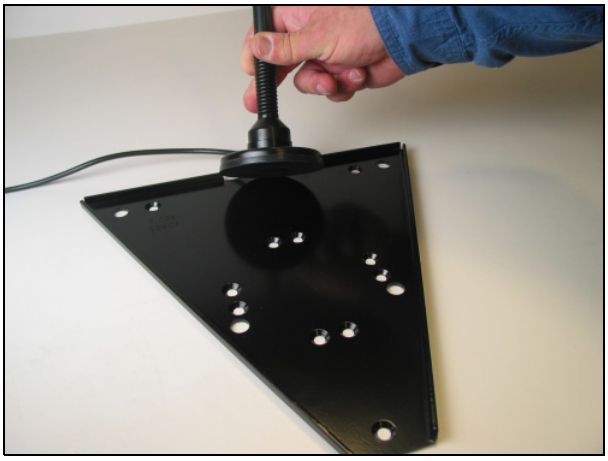

CHAPTER 4


Display Installation

In this chapter:

- CFX-750 display components
- FmX integrated display components
- Preparing the CFX-750 display
- Installing the CFX-750 display
- CFX-750 display: Installing the wiring harness
- Preparing the FmX integrated display
- Installing the FmX integrated display
- FmX integrated display: Installing the wiring harness
- CFX-750 display and FmX integrated display: Connecting accessory options
- CFX-750 and FmX displays: Installing the GNSS antenna and plate using VHB
- CFX-750 and FmX displays: Installing the RTK radio antenna

This chapter describes how to install and connect the FmX integrated display or the CFX-750 display in the vehicle.


CFX-750 display components

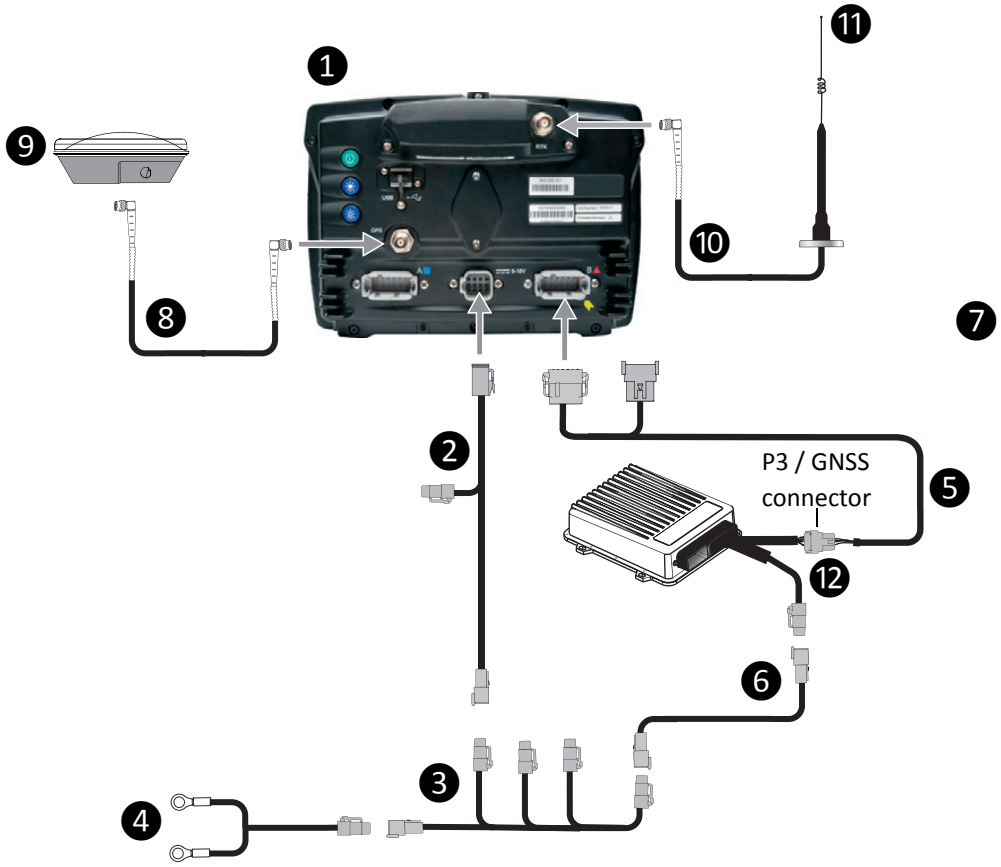

CAUTION – Connecting the Port Replicator on the CFX-750 display to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓬ will result in damage to the CFX-750 display, and will void the warranty.

Item	Description	Trimble part number
❶	CFX-750 display ***Note –*** *RTK password required.*	93100-02
❷	CFX-750 power cable	66694
❸	CFX-750 power cable with relay and switch (power bus)	67259
❹	Basic power cable	67258
❺	FmX to NavController II cable with port replicator	75741
❻	2-pin DTM to 2-pin DT power adaptor	67095
❼	NavController II	55563-00
❽	8 m GNSS TNC/TNC RT angle cable	50449
❾	AG-25 GNSS antenna	77038-00
❿	NMO to TNC 20ft antenna cable and base	72122
⓫	900 MHz radio antenna kit	22882-10
⓬	Main NavController II cable	54601

FmX integrated display components

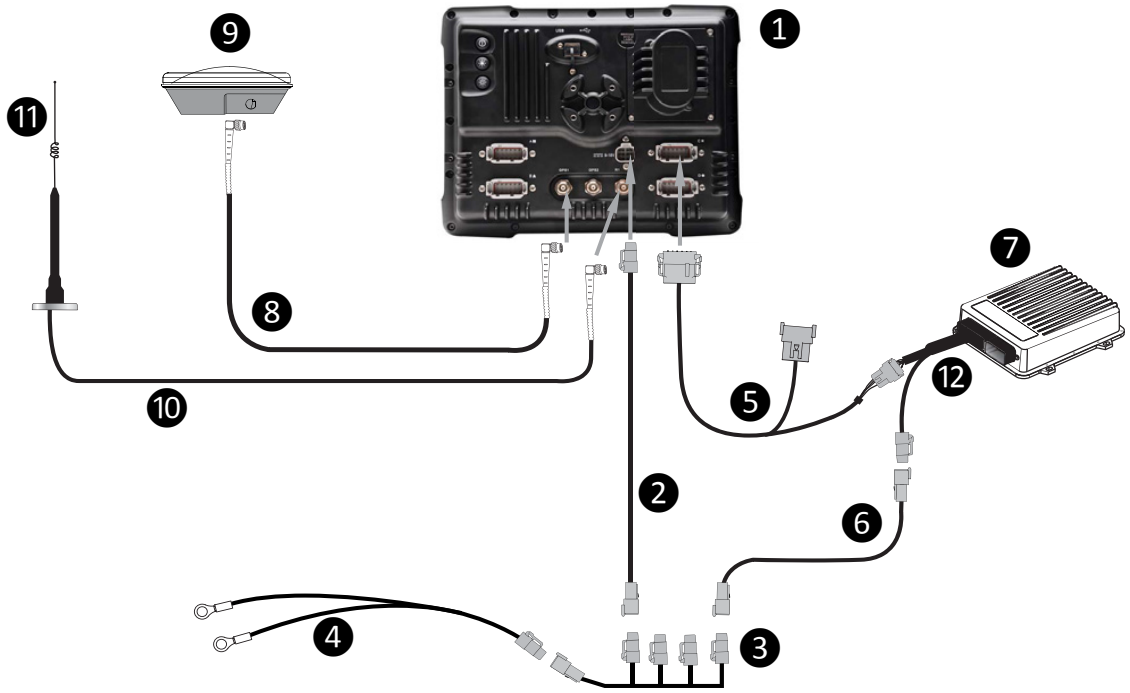

CAUTION – Connecting the Port Replicator on the FmX integrated display to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓬ will result in damage to the FmX display, and will void the warranty.

Item	Description	Trimble part number
❶	FmX integrated display	93100-02
❷	FmX power cable	66694
❸	FmX power cable with relay and switch (power bus)	67259
❹	Basic power cable	67258
❺	FmX to NavController II cable with port replicator	75741
❻	2-pin DTM to 2-pin DT power adaptor	67095
❼	NavController II	55563-00
❽	8 m GNSS TNC/TNC RT angle cable	50449
❾	AG-25 GNSS antenna	77038-00
❿	NMO to TNC 20ft antenna cable and base	72122
⓫	900 MHz radio antenna kit	22882-10
⓬	Main NavController II cable	54601

Preparing the CFX-750 display

Step 1

Locate the CFX-750 display, the RAM mount, and the RAM mount clamp.



Step 2

Use the provided metric hardware to attach the RAM mount to the rear of the display.



Step 3

Attach the RAM mount to the rear of the display.



Installing the CFX-750 display

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the bar mount to the rail.

Attach the free end of the RAM mount to the bar mount and then tighten the clamp on the RAM mount so that the display is secure.

Step 2

Connect the cable to the B port of the CFX-750 display.

To connect power to the CFX-750 display, see Chapter 6, Controller Installation.



CFX-750 display: Installing the wiring harness

Step 1

Locate the cable that connects the CFX-750 display to the NavController II.

Step 2

Connect the cable to the P3 connector on the NavController II main harness and then route the cable from the NavController II to the mounting location on the CFX-750 display.



Preparing the FmX integrated display

Step 1

Locate the FmX integrated display, the RAM mount, and the RAM mount clamp.



Step 2

Use the provided metric hardware to attach the RAM mount to the rear of the display.



Step 3

Attach the RAM mount to the rear of the display.



Installing the FmX integrated display

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.


Step 1

Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the bar mount to the rail. Attach the free end of the RAM mount to the bar mount and then tighten the clamp on the RAM mount so that the display is secure.

Step 2

Connect the cable to the C port of the FmX integrated display.


To connect power to the FmX integrated display, see Chapter 6, Controller Installation.

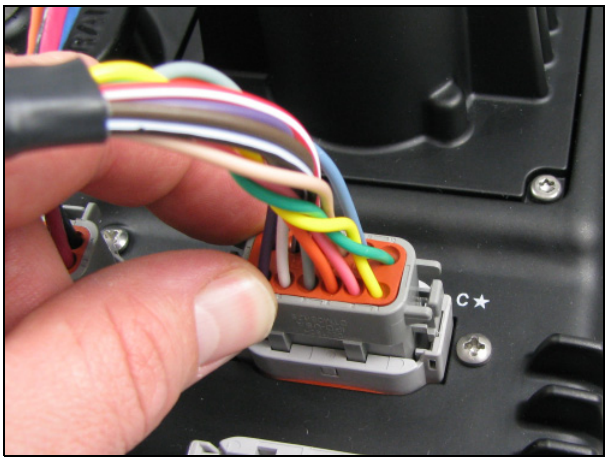

FmX integrated display: Installing the wiring harness


Step 1

Locate the cable that connects the FmX integrated display to the NavController II ❶.

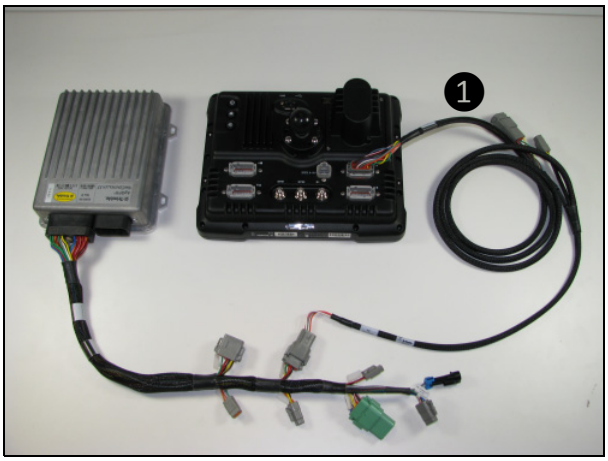

Step 2

Connect the cable to the P3 connector on the NavController II main harness, and then route the cable from the NavController II to the mounting location on the FmX integrated display.

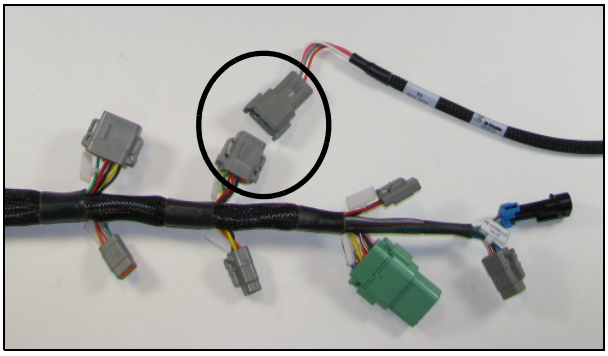

CFX-750 display and FmX integrated display: Connecting accessory options

Note – *Unless otherwise stated, "the display" applies to the CFX-750 display or the FmX integrated display.*

AgCam

The AgCam and AgCam cable are accessory items that you can purchase separately from the display. The CFX-750 display allows up to two video inputs; the FmX integrated display allows up to four.

Step 1

Locate the AgCam and AgCam cable.

Step 2

Mount the AgCam in a secure location and then route the cable towards the display.




CFX-750 display



FmX display


Step 3

Connect the AgCam cable to the display adaptor cable.

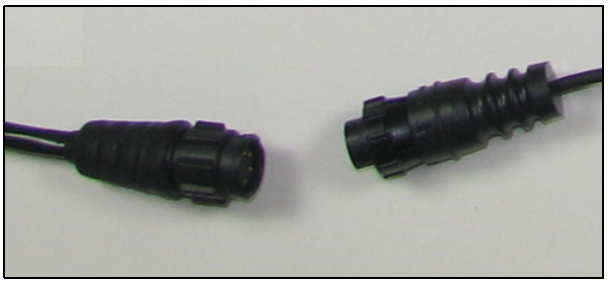

Step 4

Connect the display to AgCam adaptor cable to one of the open 12-pin connectors on the back of the display.

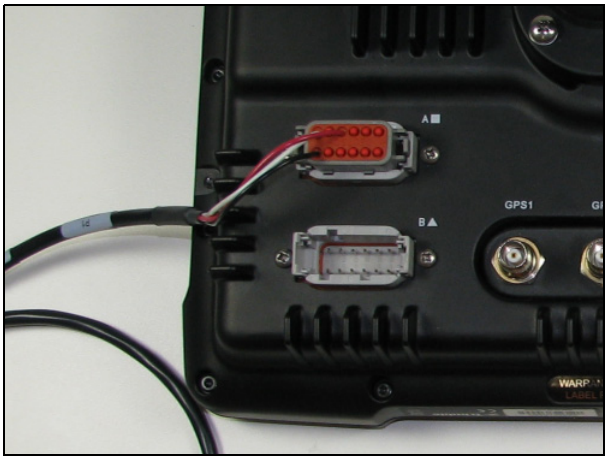

CFX-750 and FmX displays: Installing the GNSS antenna and plate using VHB

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Note – *The V plate antenna bracket is available on the Autopilot price list. See* *Antenna mounting kits, page 8**.*

Standard 5" x 5" plates (P/N 62034)are provided in most kits. You can use Very High Bond (VHB) to attach either a 5" x 5" plate (P/N 62034) or a V plate.

- **GLONASS, RTK, OmniSTAR, DGPS applications** – To use this method for high accuracy, the surface must be rigid and free of “oil panning”. For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a the P/N 62034 plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


Note – *The VHB strips are pre-applied to the P/N 62034 plate.*

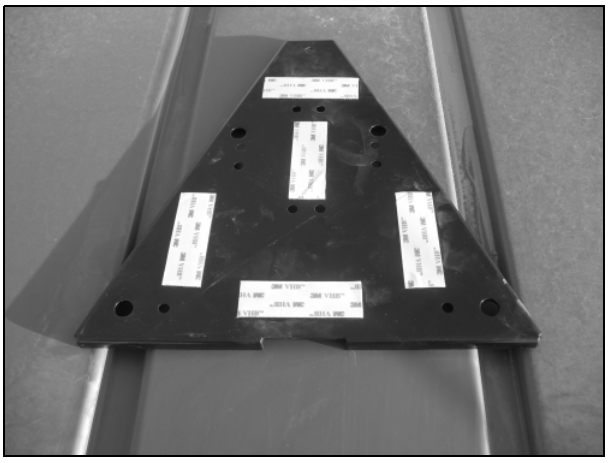

Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

Note – *The arrow in this figure points to the front of the vehicle.*

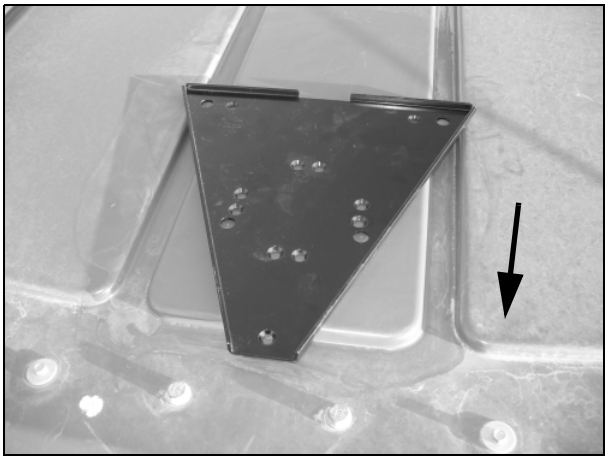


V plate



P/N 62034

Step 4

If the antenna has magnets built in, omit this step.

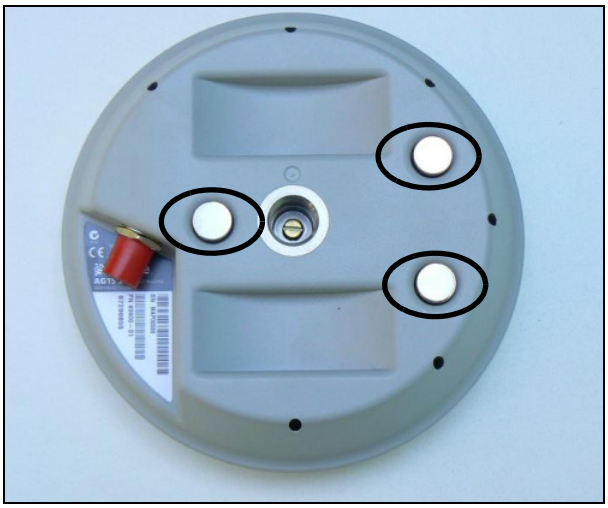

Otherwise, attach the large magnet with a ⅝" stud to the GNSS antenna.



Step 5

GLONASS, RTK, OmniSTAR, DGPS, applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



WAAS, EGNOS, VBS, Beacon applications

Attach the antenna to the center of the 5" x 5" plate (P/N 62034).



Step 6

Both models

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



CFX-750 and FmX displays: Installing the RTK radio antenna

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.


Step 1

Connect the radio antenna to the magnetic antenna base



Step 2

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the P/N 62034 plate with the VHB provided to relocate the antenna.

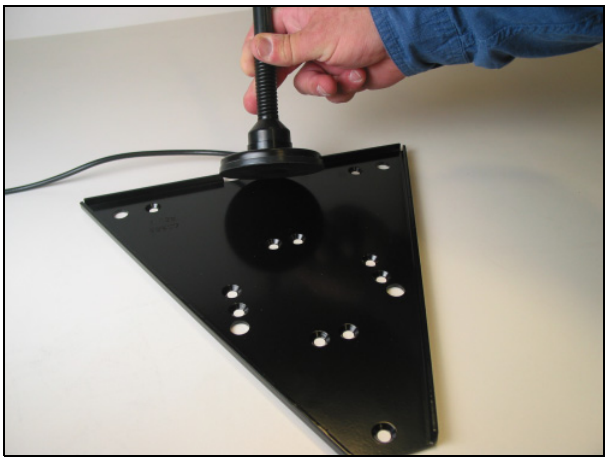

Step 3

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the P/N 62034 plate with the VHB provided to relocate the antenna.



CHAPTER 5

Remote Engage Switch Installation

In this chapter:

- Remote engage switch components: Rocker switch
- Remote engage switch components: Foot switch
- Preparing the remote engage cable
- Using the remote engage switch


This chapter describes how to install the remote engage switch.

Remote engage switch components: Rocker switch



Item	Description
❶	DTM receptacle
❷	Remote engage rocker switch

Remote engage switch components: Foot switch

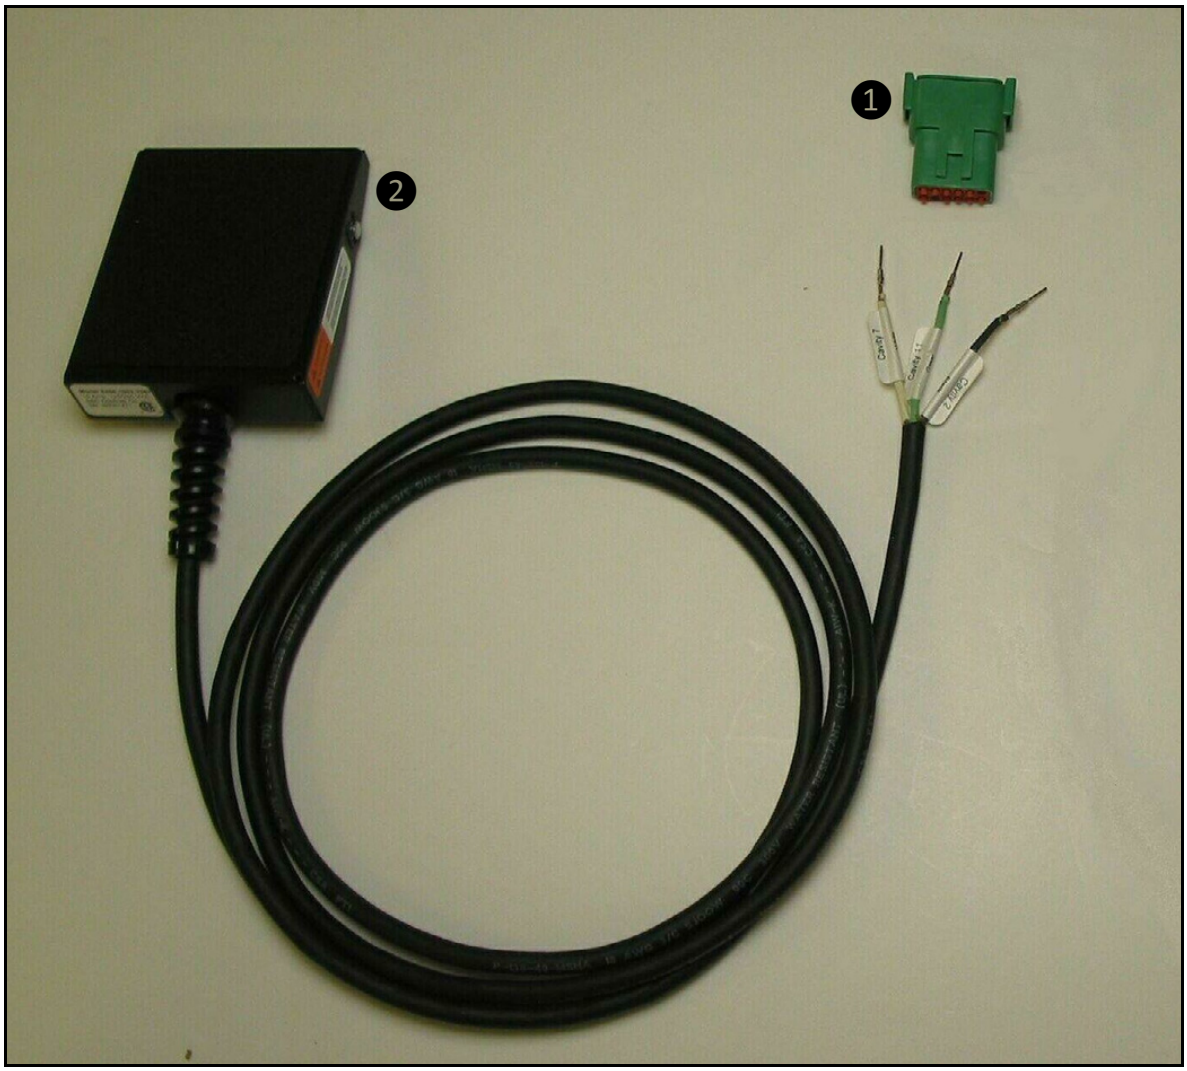


Item	Description
❶	DTM receptacle
❷	Remote engage rocker switch

Preparing the remote engage cable


Step 1

Locate the green 12-pin Deutsch receptacle on the P-5 leg of the main controller harness. For more information, see Chapter 6, Controller Installation.

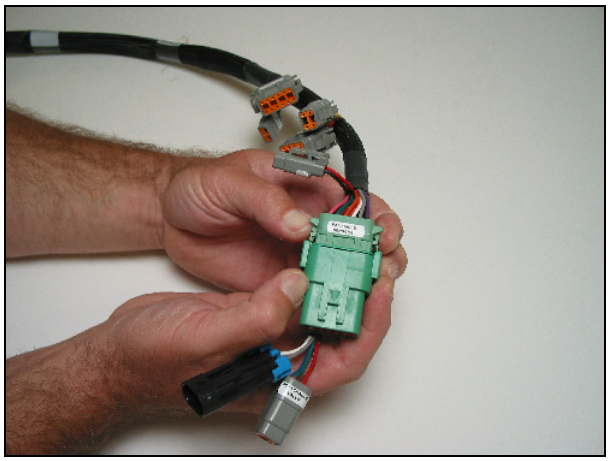

Step 2


Remove the wedge from the connector.

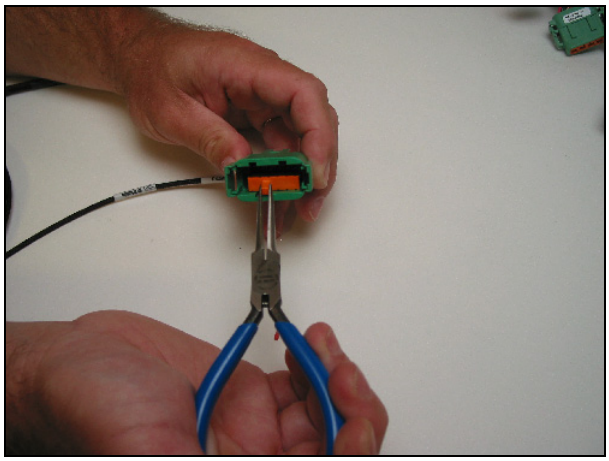

Step 3


Rocker switch only

Remove the plugs from cavity 2 and cavity 7.

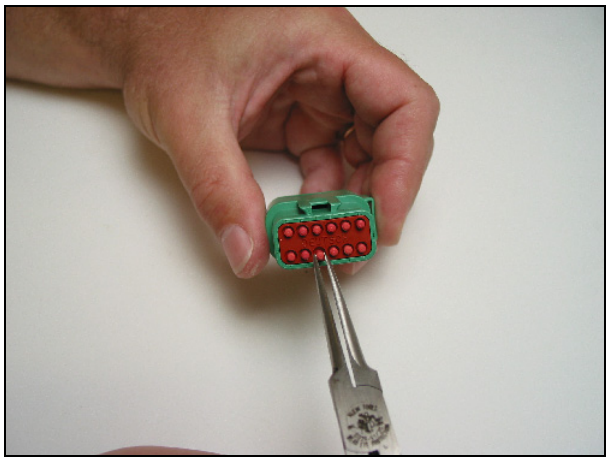

Foot Switch Only


Remove the plugs from cavity 2, cavity 7, and cavity 11.

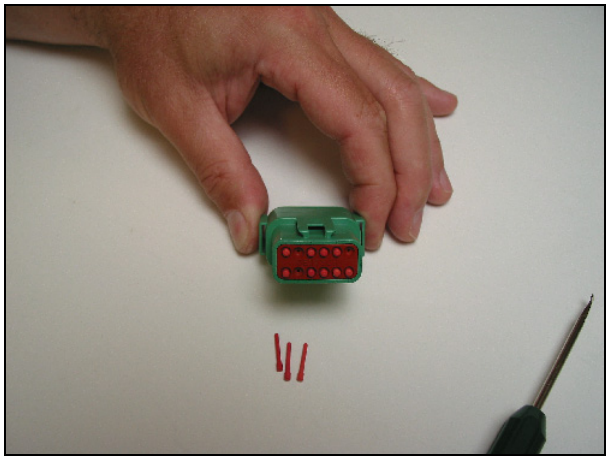

Step 4


Rocker switch only

Insert the DTM pins into cavity 2 and cavity 7, according to the labels on the wires.

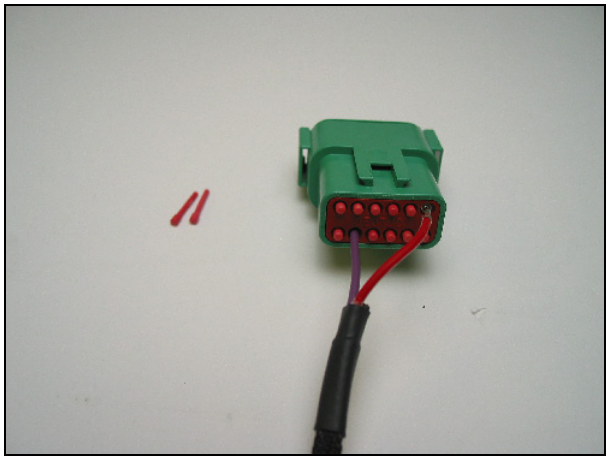


Foot switch only

Insert the DTM pins into cavity 2, cavity 7, and cavity 11, according to the labels on the wires.

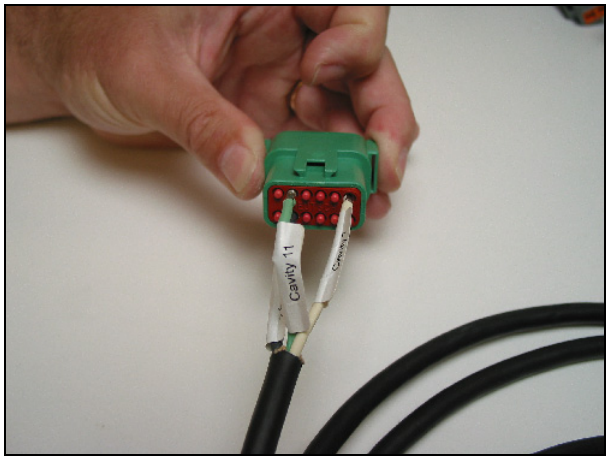

Step 5

Pull on the wires to seat them in place and then replace the wedge in the connector.

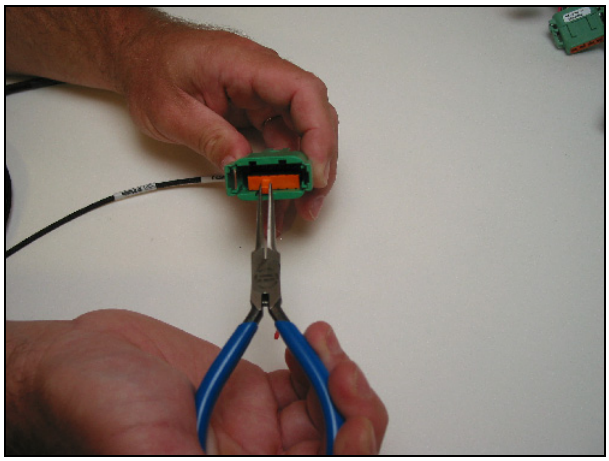

Step 6

Replace the receptacle on the P5 plug of the NavController II harness.

Step 7

Rocker switch only

Run the spade ends of the cable to a knockout location in the operator console.



Foot switch only


Run the cable to a clear location on the floor board. Use double-sided tape to secure the pedal. Route the cable under the floor mat.



Step 8

Rocker Switch Only

Connect the wires to the switch. Match the print on the switch body with the labels on the wires.

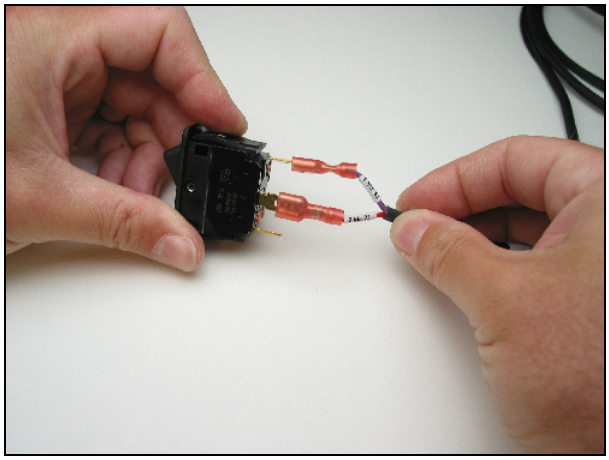

Step 9

Rocker Switch Only

Place the switch in the console.



Using the remote engage switch

To use NavController II to engage the system:

- For firmware versions 5.20 and earlier: Hold down the remote engage switch for longer than **0.5** seconds and less than **4** seconds.
- For firmware 5.21 and later: Hold the switch down for longer than **0.15** seconds and less than **4** seconds.

The system engages when you release the switch.

CHAPTER 6

Controller Installation

In this chapter:

- Installing the controller
- Controller connections


This chapter describes how to install the controller unit.

Installing the controller

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

The controller may be installed behind the access panel on the right side of the cab.

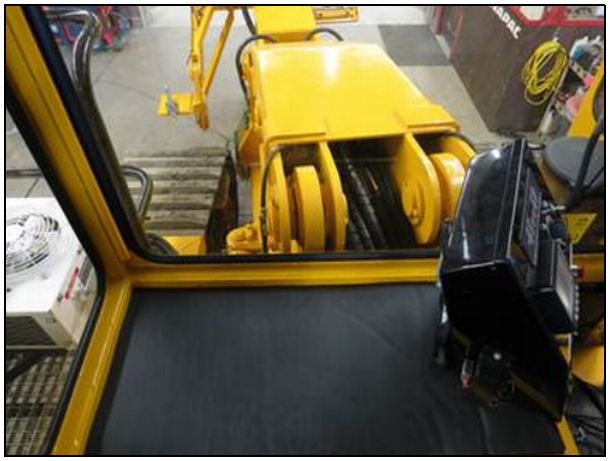

Step 2

Lift back the foam-lined cover and then remove the four bolts that hold the panel in place.




Step 3

Remove the access panel.



Step 4

Secure the controller vertically, behind the valve stack, with the connectors pointing towards the right.

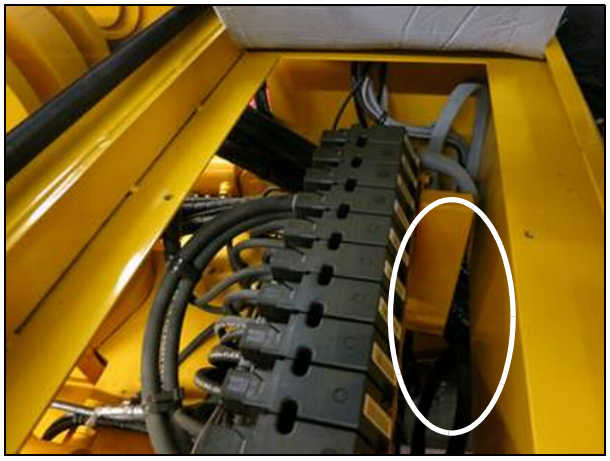


Step 5

Cables can be routed into the cab by following existing wiring which comes up underneath the OEM display.



Controller connections

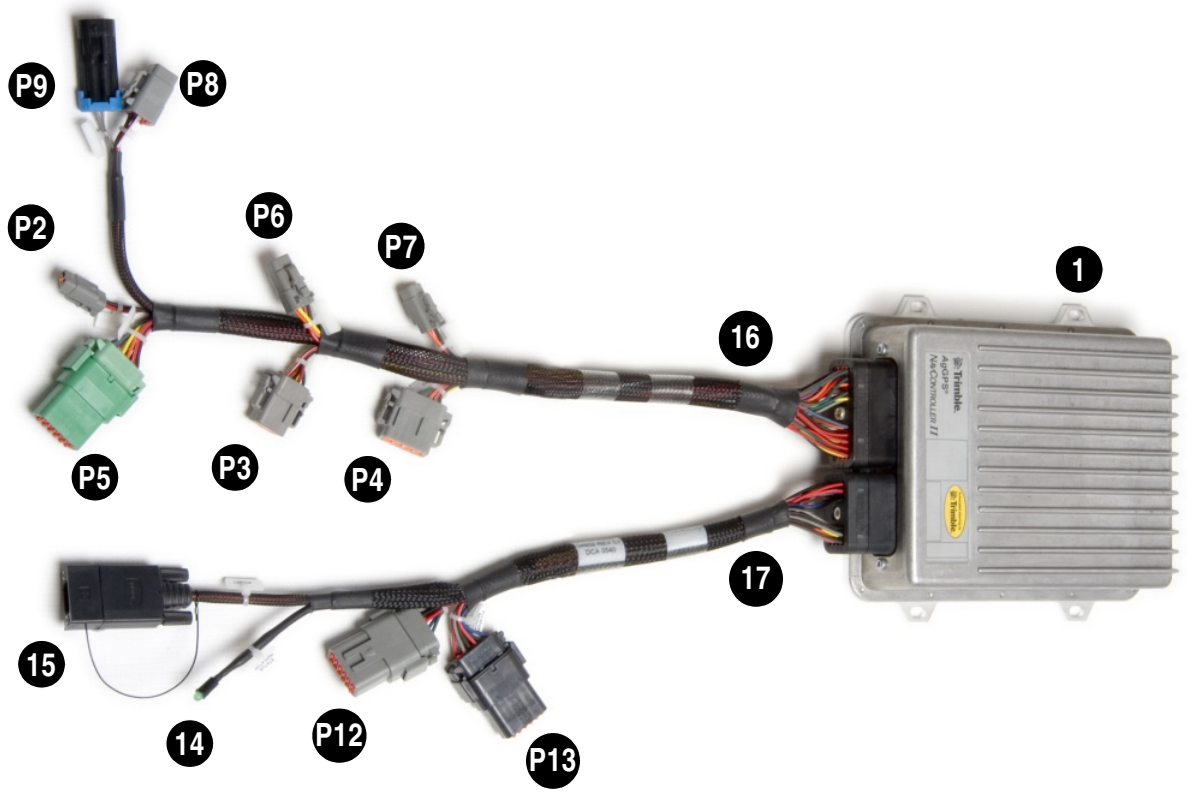


Item	Description
1	NavController II
P2	Power connector
P3	GNSS connector
P4	Display connector
P5	Vehicle sensors connector
P6	Steering sensor connector
P7	Manual override connector
P8	Hydraulic valve connector

Item	Description
P9	Sonalert connector
P12	Lightbar/spare connector
P13	Spare sensors connector
14	Status indicator
15	Laptop connector
16	Main harness
17	Auxiliary harness

Step 1


Connect the power cable connection to P-2, which is labeled **Power**. P-2 is located on the main wiring harness.

Note – *The power connection supplies power through the controller to all connected devices, including GNSS and displays.*

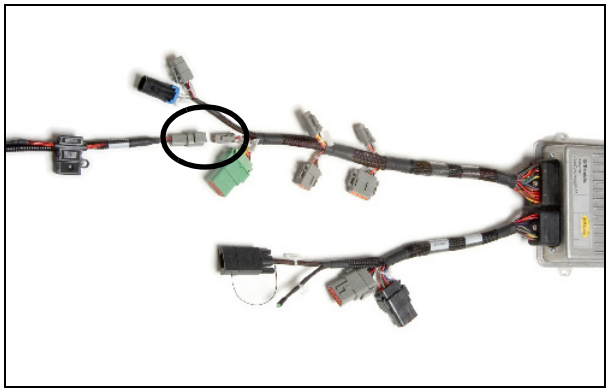


Step 2

Connect the CFX-750 display or FmX integrated display to P-3, which is labeled **GPS**. P-3 is located on the main wiring harness.

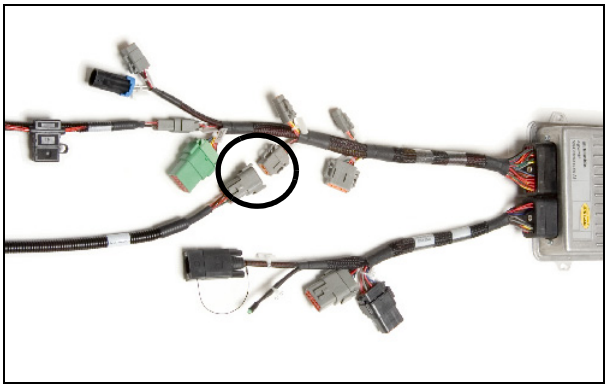

Step 3


Connect the steering sensor cable connection to P-6, which is labeled **Steering Sensor**. P-6 is located on the main wiring harness.

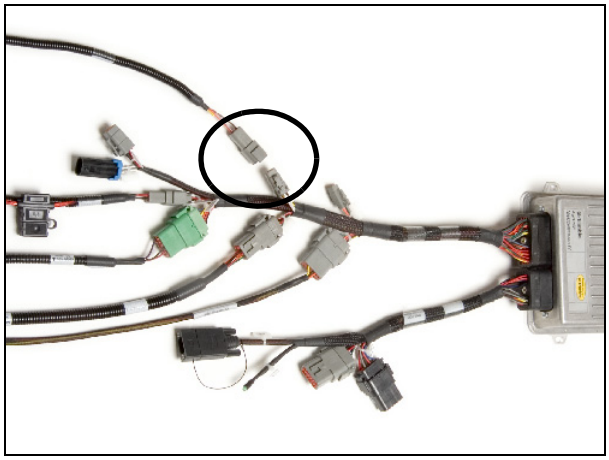

Step 4


Connect the manual override cable connection to P-7, which is labeled **Manual Override**. P-7 is located on the main wiring harness.

Note – *When you install the remote engage harness, add the pins to the existing connector.*

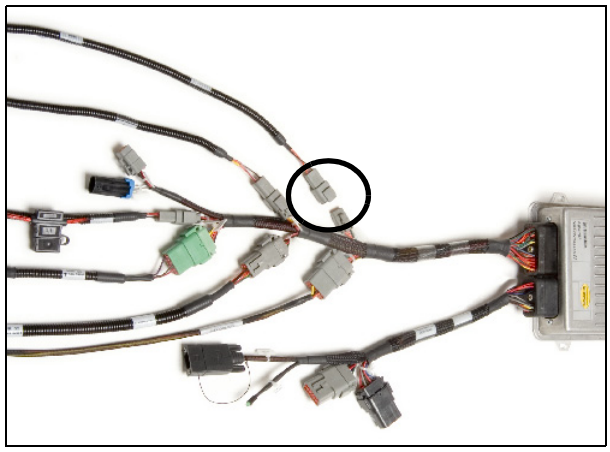


Step 5

Connect the hydraulic steering valve cable connection to P-8, which is labeled **Hydraulic Valve**. P-8 is located on the main wiring harness.

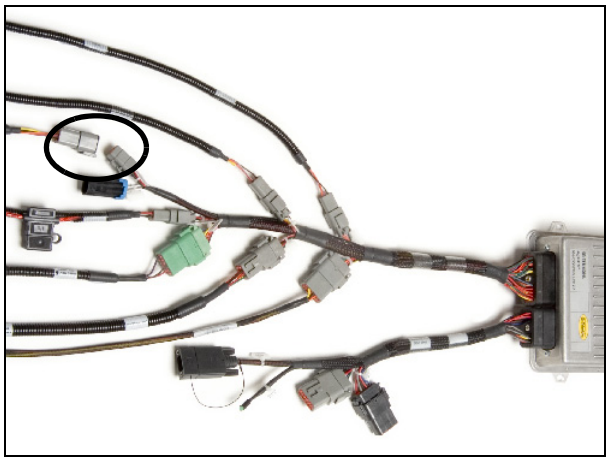


Step 6

Connect the Sonalert P-9 to the two pin Delphi connector on the main wiring harness. Route the cable so the Sonalert warning device is in a position that is audible to the operator.

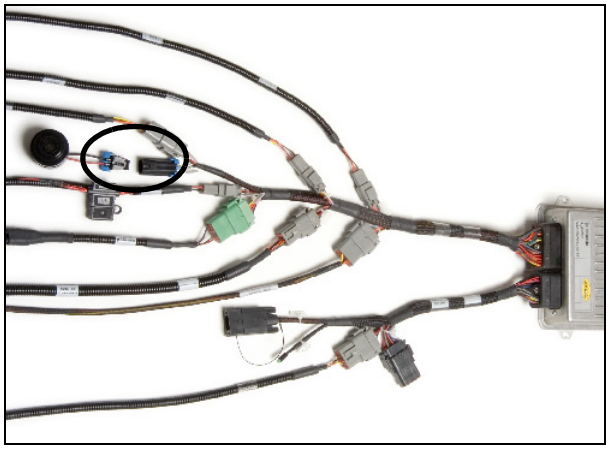

Step 7

Route the LED and laptop lead, which is located on the auxiliary wiring harness, to a location that allows the operator to determine the controller status. See controller LED status for status determination. Six flashes per second indicates a correctly functioning controller.

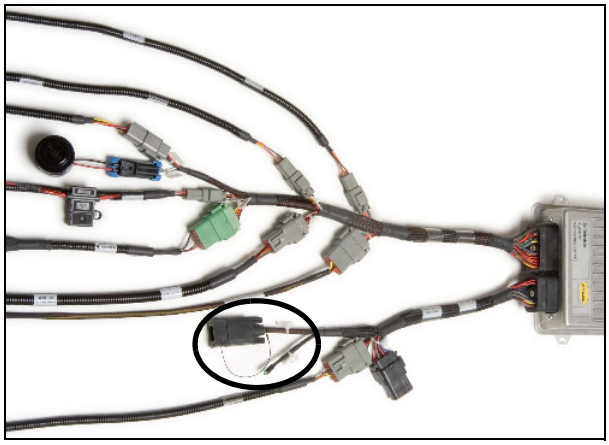

Step 8

Use the provided sleeving to secure the harness cables with tie wraps. Cover and route the cable bundle to avoid damage to connectors and strain on wire connections.

CHAPTER 7

Final Machine Check

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

To perform the final machine check:

1. Connect the battery.
2. Start the machine and check for hydraulic leaks. Correct as needed.
3. Update the Trimble display and the Autopilot NavController II to the latest firmware from http://agpartners.trimble.com.

   You can use FlashLoader 200 software version 3.19 to update the Autopilot controller: Download it from http://agpartners.trimble.com.
4. Load the correct configuration file into the Autopilot NavController II for the vehicle model being used.

   Download the latest set of configuration files from http://agpartners.trimble.com.

   You can use Autopilot Toolbox II software version 2.92 or later to load the configuration file into the Autopilot controller. You can download the Autopilot Toolbox II software from http://agpartners.trimble.com.
5. Calibrate the Autopilot system using the Trimble display or Autopilot Toolbox II software version 2.92 or later. Depending on your machine type, the following items must be calibrated before you can use the Autopilot system:
   - NavController II mounting orientation
   - Manual override
   - Autosense mounting orientation
   - Valve deadzone
   - Autopilot P-gain
   - Antenna height/Antenna axle offset, and Roll offset