INSTALLATION INSTRUCTIONS

Autopilot™ Automated Steering System

John Deere ■ 4940 Sprayer

Version 5.00
Revision A
June 2012
Part Number 54037-24-E05

Trimble

Agriculture Business Area

Trimble Agriculture Division
10355 Westmoor Drive
Suite #100
Westminster, CO 80021
USA
www.trimble.com

Legal Notices

Copyright and Trademarks

© 1999–2012, Trimble Navigation Limited. All rights reserved.
Trimble, the Globe & Triangle logo, *Ag*GPS, EZ-Guide, and FmX are trademarks of Trimble Navigation Limited, registered in the United States and in other countries. Autopilot, Autosense, and CFX-750 are trademarks of Trimble Navigation Limited. Developed under a License of the European Union and the European Space Agency.

All other trademarks are the property of their respective owners.

Release Notice

This is the June 2012 release (Revision A) of the *Autopilot Automated Steering System Installation Instructions*, part number 54037-24-E05. It applies to version 5.00 of the Autopilot automated steering system.

The following limited warranties give you specific legal rights. You may have others, which vary from state/jurisdiction to state/jurisdiction.

Product Limited Warranty

Trimble warrants that this Trimble product and its internal components (the "Product") shall be free from defects in materials and workmanship and will substantially conform to Trimble's applicable published specifications for the Product for a period of one (1) year, starting from the earlier of (i) the date of installation, or (ii) six (6) months from the date of product shipment from Trimble. This warranty applies only to the Product if installed by Trimble or a distributor authorized by Trimble to perform Product installation services.

Software Components and Enhancements

All Product software components (sometimes hereinafter also referred to as "Software") are licensed and not sold. Any Software accompanied by a separate End User License Agreement ("EULA") shall be governed by the terms, conditions, restrictions and limited warranty terms of such EULA notwithstanding the preceding paragraph. During the limited warranty period you will be entitled to receive, at no additional charge, such Fix Updates and Minor Updates to the Product software as Trimble may develop for general release, subject to the procedures for delivery to purchasers of Trimble products generally. If you have purchased the Product from an authorized Trimble distributor rather than from Trimble directly, Trimble may, at its option, forward the software Fix Update or Minor Update to the Trimble distributor for final distribution to you. Major Upgrades, new products, or substantially new software releases, as identified by Trimble are expressly excused from this enhancement process and limited warranty. Receipt of software updates shall not serve to extend the limited warranty period.
For purposes of this warranty the following definitions shall apply: (1) "Fix Update" means an error correction or other update created to fix a previous software version that does not substantially conform to its published specifications; (2) "Minor Update" occurs when enhancements are made to current features in a software program; and (3) "Major Upgrade" occurs when significant new features are added to software, or when a new product containing new features replaces the further development of a current product line. Trimble reserves the right to determine, in its sole discretion, what constitutes a significant new feature and Major Upgrade.

Warranty Remedies

Trimble's sole liability and your exclusive remedy under the warranties set forth above shall be, at Trimble's option, to repair or replace any Product that fails to conform to such warranty ("Nonconforming Product"), and/or issue a cash refund up to the purchase price paid by you for any such Nonconforming Product, excluding costs of installation, upon your return of the Nonconforming Product to Trimble in accordance with Trimble's standard return material authorization process. Such remedy may include reimbursement of the cost of repairs for damage to third-party equipment onto which the Product is installed, if such damage is found to be directly caused by the Product as reasonably determined by Trimble following a root cause analysis.

Warranty Exclusions and Disclaimer

These warranties shall be applied only in the event and to the extent that (i) the Products and Software are properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's relevant operator's manual and specifications, and; (ii) the Products and Software are not modified or misused. The preceding warranties shall not apply to, and Trimble shall not be responsible for defects or performance problems resulting from (i) the combination or utilization of the Product or Software with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Trimble; (ii) the operation of the Product or Software under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized, installation, modification, or use of the Product or Software; (iv) damage caused by accident, lightning or other electrical discharge, fresh or salt water immersion or spray; or (v) normal wear and tear on consumable parts (e.g., batteries). Trimble does not warrant or guarantee the results obtained through the use of the Product.

THE WARRANTIES ABOVE STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO PERFORMANCE OF THE PRODUCTS AND SOFTWARE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND BY EITHER TRIMBLE NAVIGATION LIMITED OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCTS OR SOFTWARE. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

TRIMBLE NAVIGATION LIMITED IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF GPS SATELLITES OR THE AVAILABILITY OF GPS SATELLITE SIGNALS.

Limitation of Liability

TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT OR SOFTWARE LICENSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANY WAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS), REGARDLESS WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

NOTE: THE ABOVE LIMITED WARRANTY PROVISIONS MAY NOT APPLY TO PRODUCTS OR SOFTWARE PURCHASED IN THE EUROPEAN UNION. PLEASE CONTACT YOUR TRIMBLE DEALER FOR APPLICABLE WARRANTY INFORMATION.

Notices

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

Notice to Our European Union Customers

For product recycling instructions and more information, please go to: www.trimble.com/ev.shtml

Recycling in Europe: To recycle Trimble WEEE, Call +31 497 53 2430, and ask for the "WEEE Associate"
Or
Mail a request for recycling instructions to:
Trimble Europe BV
c/o Menlo Worldwide Logistics
Meerheide 45
5521 DZ Eersel, NL



Safety Information

Always follow the instructions that accompany a Warning or Caution. The information they provide is intended to minimize the risk of personal injury and/or damage to property. In particular, observe safety instructions that are presented in the following format:

WARNING – This alert warns of a potential hazard, which, if not avoided, can cause severe injury.

CAUTION – This alert warns of a hazard or unsafe practice which, if not avoided, can cause injury or damage.

Note – *An absence of specific alerts does not mean that there are no safety risks involved.*

Warnings

WARNING – When you are working on the vehicle's hydraulic systems, vehicle attachments that are suspended can drop. If you are working around the vehicle, you could suffer serious injury if an attachment dropped on you. To avoid this risk, lower all vehicle attachments to the ground before you begin work.

WARNING – If someone else attempts to drive the vehicle while you are working on or under it, you can suffer serious or fatal injuries. To avoid this possibility, install a lockout box on the battery terminal to prevent the battery from being reconnected, remove the key from the vehicle's ignition switch, and attach a "Do not operate" tag in the cab.

WARNING – Agricultural chemicals can pose serious health risks. If the vehicle has been used to apply agricultural chemicals, steam clean the vehicle to remove any chemical residue from the areas of the vehicle where you will be working.

WARNING – Vehicle cabs can be quite high in the air. To avoid potentially serious injury through falling from this height, always use the steps and handrails, and face the vehicle, when you enter or exit it.

Cautions

CAUTION – When the vehicle has been running, parts of the vehicle, including the engine and exhaust, can become extremely hot and can cause serious burns. To avoid burns, allow hot machine parts to cool before you begin working on them.

CAUTION – The system installation may bring you into contact with chemical substances, such as oil, which can cause poisoning. Wash your hands thoroughly after you finish working on the system.

CAUTION – Battery posts, terminals, and related accessories contain lead and lead compounds, which can cause serious illness. To avoid ingesting lead, wash your hands thoroughly after touching the battery.

CAUTION – Always wear protective equipment appropriate to the job conditions and the nature of the vehicle. This includes wearing protective glasses when you use pressurized air or water, and correct protective welder's clothing when welding. Avoid wearing loose clothing or jewelry that can catch on machine parts or tools.

CAUTION – Parts of the vehicle may be under pressure. To avoid injury from pressurized parts, relieve all pressure in oil, air, and water systems before you disconnect any lines, fittings, or related items. To avoid being sprayed by pressurized liquids, hold a rag over fill caps, breathers, or hose connections when you remove them. Do not use your bare hands to check for hydraulic leaks. Use a board or cardboard instead.

CAUTION – Do not direct pressurized water at:
- electronic or electrical components or connectors
- bearings
- hydraulic seals
- fuel injection pumps
- any other sensitive parts or components



Set the hose pressure as low as practicable, and spray at a 45° to 90° angle. Keep the nozzle of the power washer away from the machine at the distance recommended by the manufacturer.

CAUTION – To prevent damage to the system, make sure that no wires or hoses interfere with or catch on any mechanical linkages, or contact any machine parts that get hot.

Contents

Safety Information 3

Warnings 3

Cautions 4

1 Introduction 7

Technical assistance 8

Manual system upgrade to Autopilot 8

CFX-750 display and FmX integrated display 8

EZ-Guide 500 system 8

Required components 9

Antenna mounting kits 9

Accessory kits 9

Autopilot hardware organization: As shipped 10

Preparing the vehicle for installation 11

2 AutoTrack Harness Component Connections 13

Introduction 14

Valve connections 14

Installing the steering sensor adapter cable 16

3 Autosense Steering Device Installation 19

Autosense steering device components 20

Installing the Autosense steering device 21

Preparing the harness: P/N 54602 Rev C 24

4 Antenna/Receiver Installation 27

Antenna and receiver installation options 28

Possible mounting methods 28

Mounting an adjustable spar to roof bolts 29

Attaching the plate with VHB adhesive 32

Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor 34

AgGPS 262/372 GPS receiver with an AgGPS 450/900 radio module (if equipped) components 38

Installing the AgGPS 262/AG-372 GPS receiver with AgGPS 450/900 radio module (if equipped) 39

Removable installation 39

Permanent installation 40

Installing an AgGPS 262/AG-372 receiver with magnetic feet 44

AgGPS 432/442 receiver components 46

Installing the AgGPS 432/442 receiver 47

5 Display Installation 51
FmX integrated display components 52
CFX-750 display components 53
EZ-Guide 500 lightbar components: With SNB900 radio for RTK corrections (if equipped) . 55
Preparing the FmX integrated display 57
Installing the FmX integrated display 58
FmX integrated display: Installing the wiring harness 59
Preparing the CFX-750 display. 60
Installing the CFX-750 display 61
CFX - 750 display: Installing the wiring harness 62
FmX integrated display and CFX-750 display:
Connecting accessory options 63
AgCam 63
Preparing the EZ-Guide 500 lightbar 65
Connecting the EZ-Guide 500 lightbar cables 66
Installing the EZ-Guide 500 lightbar 69
EZ-Guide 500 lightbar, and CFX-750 and FmX displays:
Installing the GNSS antenna and plate 71
Spar mount method 71
VHB adhesive method 71
EZ-Guide 500 lightbar, and CFX-750 and FmX displays: Installing the RTK radio antenna . . 75

6 Power Harness Installation. 77
FmX integrated display components 78
CFX-750 display components 80
EZ-Guide 500 lightbar components 82
Installing the power harness for the display 83
Configuring the power bus options for the display 85
Display power button is used to turn on the Autopilot system 85
External switch is used to turn on the Autopilot system. 85
Ignition is used to turn on the Autopilot system 87
Configuring the power bus options for the EZ-Guide 500 lightbar 89

7 Remote Engage Switch Installation 93
Remote engage switch components: Rocker switch. 94
Remote engage switch components: Foot switch 95
Preparing the remote engage cable 96
Using the remote engage switch 99

8 Controller Installation 101
Installing the controller 102
Controller connections 103

9 Final Machine Check 107
Performing the final machine check 108

CHAPTER

1

Introduction

In this chapter:

- Technical assistance
- Manual system upgrade to Autopilot
- Required components
- Autopilot hardware organization: As shipped
- Preparing the vehicle for installation

This manual describes how to install the Trimble® Autopilot™ automated steering system.

Even if you have used another GNSS (Global Navigation Satellite System), such as the United States' GPS (Global Positioning System), before, spend some time reading this manual to learn about the special features of this product. If you are not familiar with GNSS, go to the Trimble website (www.trimble.com) for an interactive look at Trimble and GNSS.

Technical assistance

If you have a problem and cannot find the information you need in the product documentation, contact Trimble technical support:

1. Go to the Trimble website (www.trimble.com).
2. Click the **Support & Training** link at the top of the screen, select *Support* and then select *Support A–Z list of products*.
3. Scroll to the bottom of the list.
4. Click the *submit an inquiry* link. A form appears.
5. Complete the form and then click **Send**.

Manual system upgrade to Autopilot

CFX-750 display and FmX integrated display

Retain	Remove
CFX-750™ display: P/N 94000-xx Power cable CFX-750 display: P/N 77282 **FmX® integrated display: P/N 93100-xx** Power cable FmX display: P/N 66694 Antenna for display: P/N 60600-02 (DGPS) or 77038-00 (OmniStar/RTK) Antenna to receiver cable: P/N 50449 Basic cable (both displays): P/N 67258	

EZ-Guide 500 system

Retain	Remove
EZ-Guide® 500 lightbar: 66100-xx Antenna for EZ-Guide 500 lightbar: P/N 60600-xx (DGPS) or 57200-00 (OmniStar/RTK) Antenna to receiver cable: P/N 50449 Power cable: P/N 62817 *Optional.* Remote keypad	Power connection cable: P/N 62818

Required components

Kits required	Special tools
Platform kit: P/N 54037-24	Drill $^{5}/_{16}$" drill bit $^{3}/_{8}$-16 tap 2" hole saw

Antenna mounting kits

Antenna options
Antenna spar mount: P/N 53676
John Deere quick release: P/N 84804
Antenna V plate mount and *Ag*GPS 262/AG-372 receiver magnetic mount: P/N 62388-01 (includes magnets for quick release of the *Ag*GPS 262/AG-372 receiver – see Chapter 4, Antenna/Receiver Installation).

Accessory kits

Accessory options
Remote engage switch assembly – standard Euro: P/N 57227-10
Remote engage switch assembly – full Euro: P/N 57227-20
Remote engage foot pedal: P/N 57259

Autopilot hardware organization: As shipped

Hardware	Component	See...
Platform kit (P/N 54037-24)	Steering control valve cable and lock out	Chapter 2
	Manual override cable	
	Autosense™ steering device and cabling	Chapter 3
	Autosense mounting bracket and hardware	
	Power switch	Chapter 6
	Bolt kit controller	Chapter 8
Common parts	Controller	Chapter 8
	Controller mounting bracket	
	Cable kit: • Main wiring harness • Power bus auxiliary wiring harness • Sonalert alarm	
GNSS receiver	GNSS receiver	Chapter 4
	GNSS antenna	
	GNSS receiver power/data cable	
	RTK radio, cable, and radio antenna	
Display	CFX-750 display	Chapter 5
	FmX integrated display	
	EZ-Guide 500 lightbar	
	Display cable	
	Mounting bracket	
Roof bracket kit: (P/N 53676)	Roof brackets	Chapter 4
	Bolt kit, roof bracket	

Preparing the vehicle for installation

The left and right sides of the vehicle are referenced while standing behind the unit, facing the normal direction of travel.

1. Park the vehicle on a hard, level surface. Block the front and rear wheels.
2. Align the steering straight ahead. On an articulated vehicle, install the articulation locks.
3. Remove all dirt and debris from the areas of the vehicle where the Autopilot system will be installed.
4. Open all kit boxes and check the contents of the box against the packing list/s. Lay all of the parts out on a clean workbench.

CHAPTER

2

AutoTrack Harness Component Connections

In this chapter:

- Introduction
- Valve connections
- Installing the steering sensor adapter cable

This chapter describes how to connect the AutoTrack components.

Introduction

Before you start to connect the AutoTrack components, check that machine has a FEMA steering valve. To gain access to the valve, open the large access panel that is located under the cab and towards the left side of the vehicle.



Valve connections

Step 1

Identify the steering valve interface cables:

- P/N 84253
- P/N 54617
- P/N 84252

Step 2

Plug the **R2** connector on cable P/N 84253 into any free connector on the power bus harness P/N 67259.

Plug the **R1** connector on cable P/N 84253 into the FEMA valve where it is labeled "CO," on the right-hand side.

Step 3

For steering control:

Plug the **P8** connector on cable P/N 54617 into connector **R8** on the NavController II harness (P/N 54601).

Plug the connector labeled '**Valve A P2**' on cable P/N 54617 into the cable P/N 84252 labeled '**Steering Right**.'

Plug the other end of cable P/N 84252 into the FEMA valve at the location labeled **CB**.

Plug the connector labeled '**Valve B P3**' on cable P/N 54617 into the cable P/N 84252 labeled '**Steering Left**.'

Plug the other end of cable P/N 84252 into the FEMA valve at the location labeled **CA**.



Step 4

Terminate the OEM steering harnesses with the following phantoms:

- CO valve: P/N 89231
- CA & CB valves: P/N 89232

Lightly tug the terminators to check that the connectors are fully seated. Use a wire wrap tie to fasten the phantoms securely to a stationary location.



Installing the steering sensor adapter cable

Step 1

The connector for the sheering shaft sensor is located inside the steering column. To gain access to this area, take out the four Phillips head bolts and then remove the two-piece steering column cover.



Step 2

On the right side of the steering column, locate the black 6-pin Tyco connector that has a small red locking tab.

Unplug the Tyco connector, and insert the steering sensor jumper cable (P/N 81349), between the Tyco connector and the steering column plug.

Route the cable securely, and replace the steering column cover.



Step 3

Plug the other end of the steering sensor jumper cable (P/N 81349) cable into connectors P5 and P13 of the NavController II harnesses.

CHAPTER

3

Autosense Steering Device Installation

In this chapter:

- Autosense steering device components
- Installing the Autosense steering device
- Preparing the harness: P/N 54602 Rev C

This chapter describes how to install the Autosense™ steering device.


If the required mounting location is not accessible, chose a different place. To ensure proper function, the Autosense device must be located where it is free of obstructions and can rotate with the wheels when they turn.

On articulated vehicles, mount the Autosense device on the opposite side of the pivot point to the Autopilot controller.

Mount the device base down or base up so that it maintains a level orientation. Do not mount it on its side. An angle of up to 10° in any direction is acceptable.

To avoid stretching the cable, leave adequate length on the service loop.

Autosense steering device components

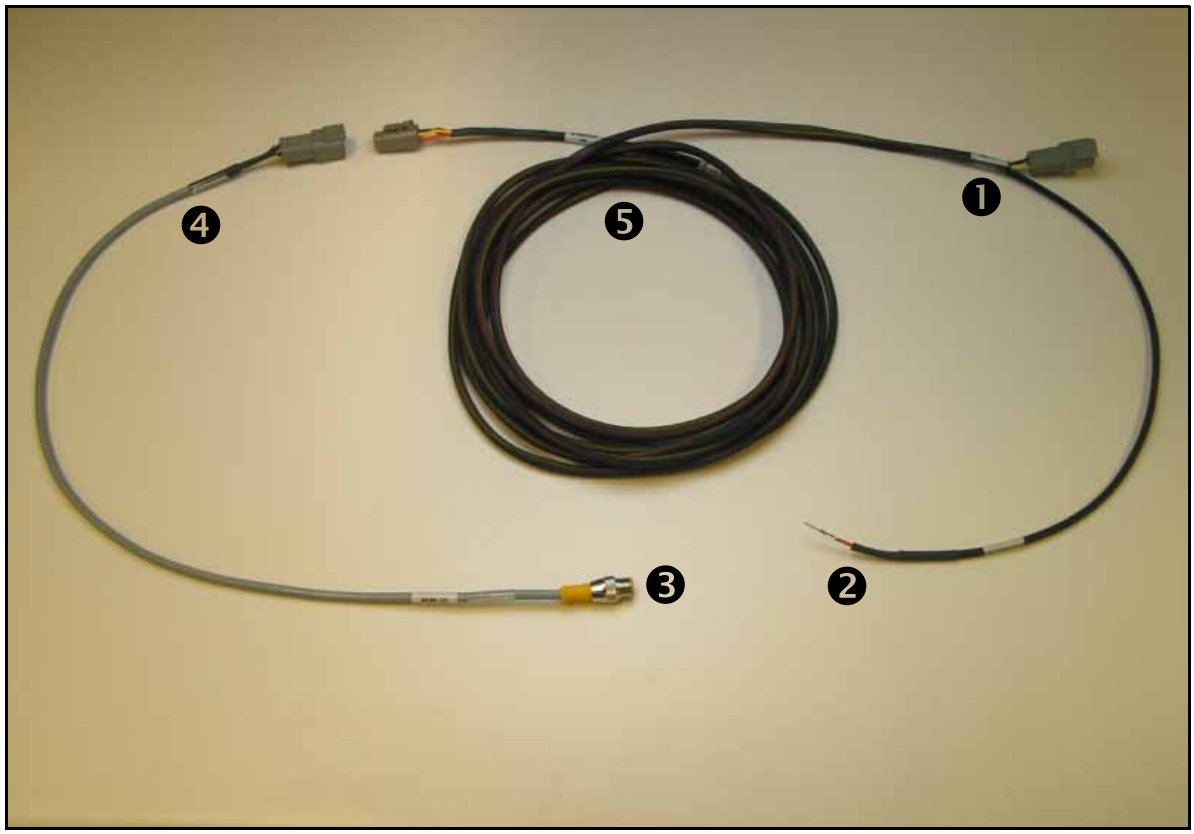

Item	Description	Trimble part number
❶	P-6 connector	
❷	Power connector	
❸	Autosense connector	
❹	Jumper cable	57560
❺	Autosense steering cable	57885

Installing the Autosense steering device

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Locate the mounting location on the right fender bracket.



Step 2

Position the bracket as shown and drill two ½" holes.



Step 3

Mount the Autosense device on the bracket as shown. Use the #6 flathead screws and countersunk holes.



Step 4

Mount the Autosense device with the connector pointing toward the front of the vehicle, and the label facing up. To secure the device use the ½" bolts with flat washers and nylock lock nuts provided in the kit.



Step 5


Route the steering cable to the device along the existing hoses and then connect it to the steering device. Leave adequate length on the service loop to avoid stretching the cable.



Step 6

Plug the steering sensor cable to P-6 on the Autopilot controller main wiring harness.


The P6 connector is labeled **Steering Sensor**.

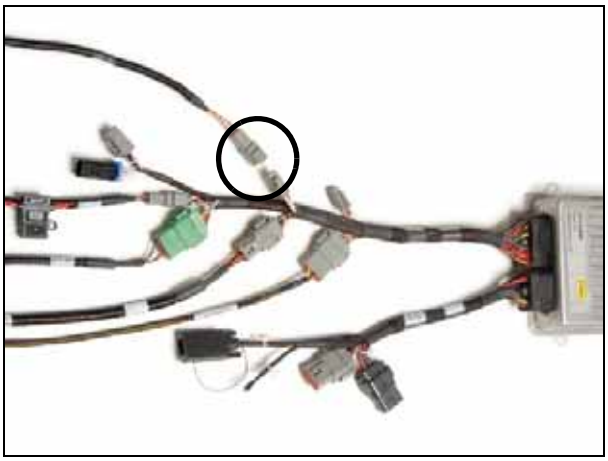

Preparing the harness: P/N 54602 Rev C


Step 1

Disconnect P-13 of the AutoTrac manual override harness from P-13 of the auxiliary harness. See Chapter 8, Controller Installation.

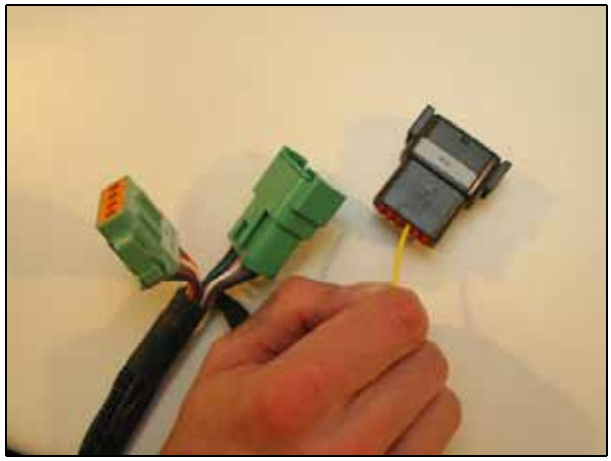


Step 2

Remove the plug from cavity number 1.

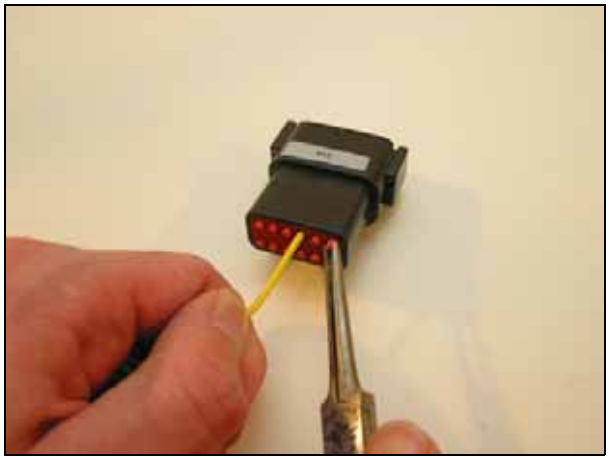


Step 3

Remove the wedge from the connector.

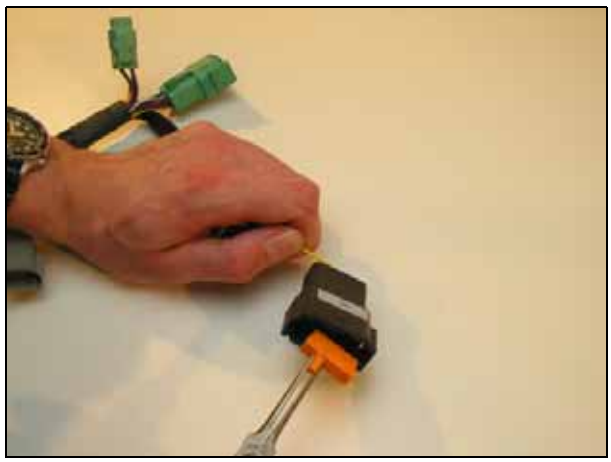


Step 4

Insert the DTM pin labeled “Cavity 1” into the connector.

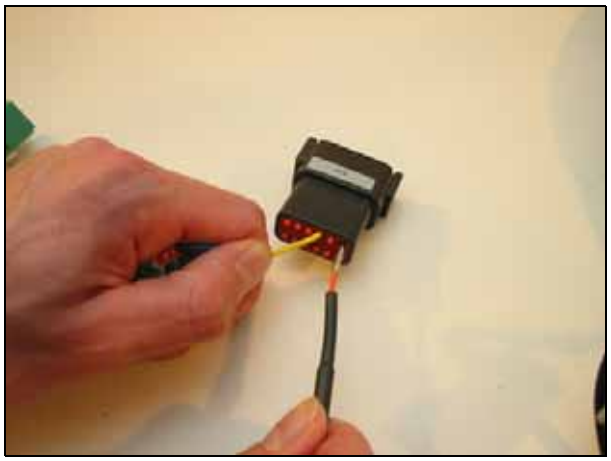

Step 5

Pull back on the wire to seat the pin. Replace the wedge in the connector.

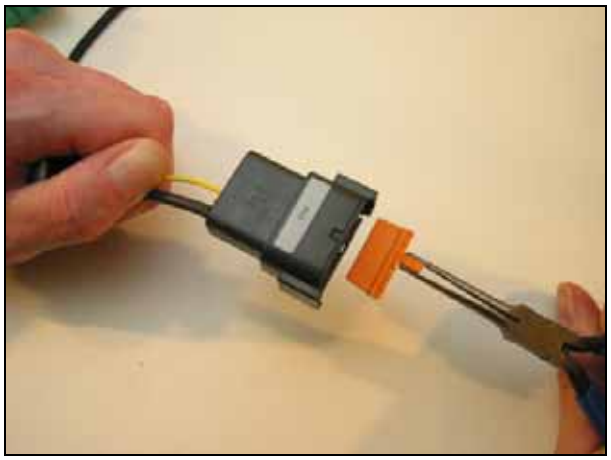

Step 6

Reconnect P-13 to the AutoPilot harness. See Controller connections, page 103.

CHAPTER

4

Antenna/Receiver Installation

In this chapter:

- Antenna and receiver installation options
- Mounting an adjustable spar to roof bolts

This chapter describes how to install the:

- *Ag*GPS 262/AG-372 receiver and *Ag*GPS radio module
- *Ag*GPS 432 receiver and antenna
- *Ag*GPS 442 receiver and antenna
- *Ag*GPS 542 receiver and antenna

Note – *To install the antenna for an EZ-Guide 500 system, see* Chapter 5, Display Installation*.*

Antenna and receiver installation options

There are several options for mounting components (the antenna, radio module, or GNSS receiver) on the cab roof depending on the accuracy required and the antenna type:

- **Spar mount** – This bracket mounts directly to the roof bolts and is required for all high accuracy applications such as RTK and OmniSTAR. Trimble recommends this method for mounting an *Ag*GPS 262/AG-372 receiver. Bolt a metal spar to the roof or to a light bracket and then attach either a V plate for magnetic mounting or an *Ag*GPS 262/AG-372 receiver plate for permanent mounting.
- **VHB mount** – Attach a 4" x 6" plate or a V plate directly to the roof with VHB (Very High Bond) adhesive for magnetic mounting. See page 32.
- **Starfire quick release mount** – Attach the required receiver or receiver mount plate as described in the Starfire adaptor section. See page 34.
- **Magnetic mounting** – Magnetic mounting for quick release is available for both VHB and spar type mounting:

Possible mounting methods

GPS receiver	V plate on spar (removable)	VHB plate on roof (removable)	Standard *Ag*GPS 262/AG-372 plate bolted to spar (permanent)	Starfire mount (removable)
*Ag*GPS 262/AG-372 receiver	✓	X	✓	✓
*Ag*GPS 432/442/542 receiver	✓	X	X	✓
FmX integrated display CFX-750 display	✓	✓	✓	✓

- *For quick release magnetic mounting with an AgGPS 262/AG-372 receiver, order the kit listed in Antenna mounting kits, page 9 and bolt the V plate to the spar.*
- *With all other antennas, bolt the V plate to the spar for high accuracy and repeatability.*
- *For WAAS, EGNOS, OmniSTAR VBS, Beacon, and DGPS applications, place either of the plates in a firm location using the VHB.*

Mounting an adjustable spar to roof bolts


WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Position the cab bolts on the roof of the vehicle.




If a light bracket already occupies the roof studs, mount the spar directly onto the light bracket.

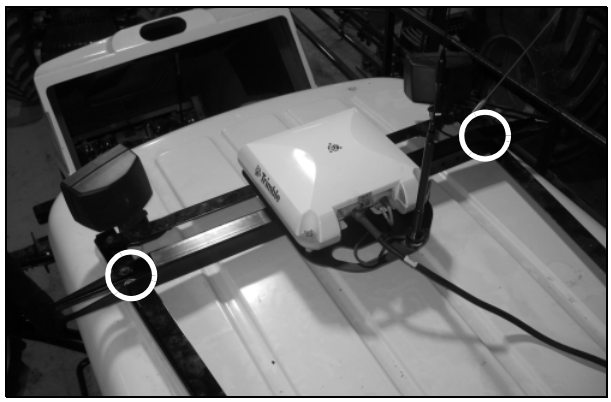

Step 2

If required, replace the existing bolts with longer bolts.

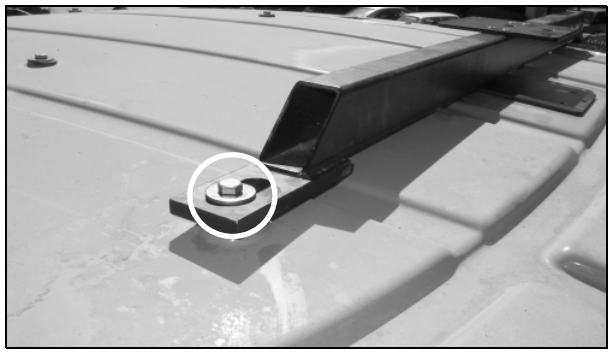


If you use the light bracket, drill two holes to match the spar width.



Step 3

Use the slotted holes to center the spar and then tighten the bolts. If required, use the spacers and flat washers provided to secure the spar.

Note – *If the receiver is offset to the left or the right of the vehicle, Autopilot system performance may be affected. Before you tighten the cab bolts, make sure that the GNSS antenna is aligned with the center of the vehicle.*

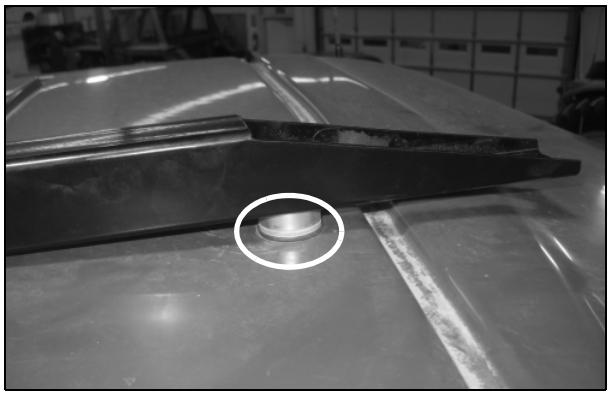

Step 4

For either of the following applications:


- A single magnet antenna mount
- An *Ag*GPS 262/AG-372 receiver with magnetic option for quick removal

Attach a V plate with four ¼" flathead screws.

The narrow end points to the front of the vehicle.



V plate on the spar

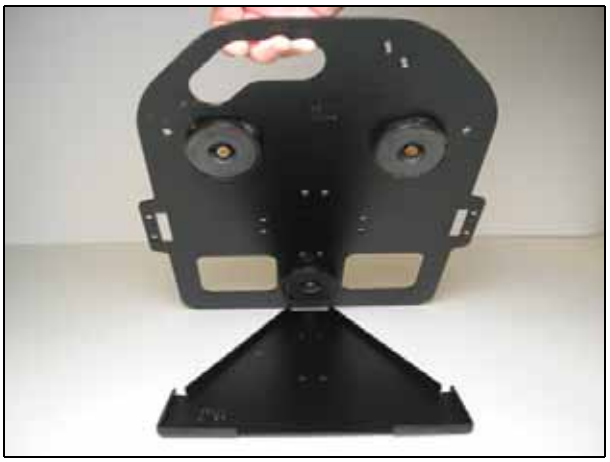

Magnetic mount on the V plate

If you use a standard AgGPS 262/AG-372 plate for permanent mounting, install the radio antenna first. Use four ¼" flathead screws to attach the plate, with the handle toward the back of the vehicle.



Plate on the spar

Attaching the plate with VHB adhesive

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Standard 4" x 6" plates are provided in most kits. You can use the VHB mounting method to attach either a 4" x 6" plate or a V plate.

- **RTK, OmniSTAR, DGPS, GLONASS applications** – To use this method for high accuracy, the surface must be rigid and free of “oil panning”. For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a 4" x 6" plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust. Apply force to the roof to find a firm location.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


Note – *The VHB strips are pre-applied to the 4" x 6" plate.*

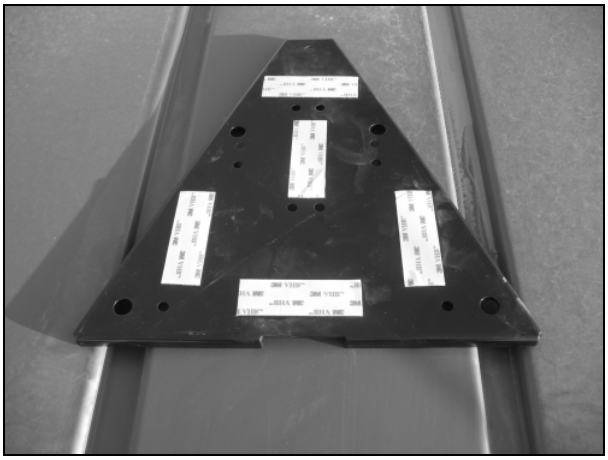

Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end of the plate points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

Note – *The arrow points to the front of the vehicle.*

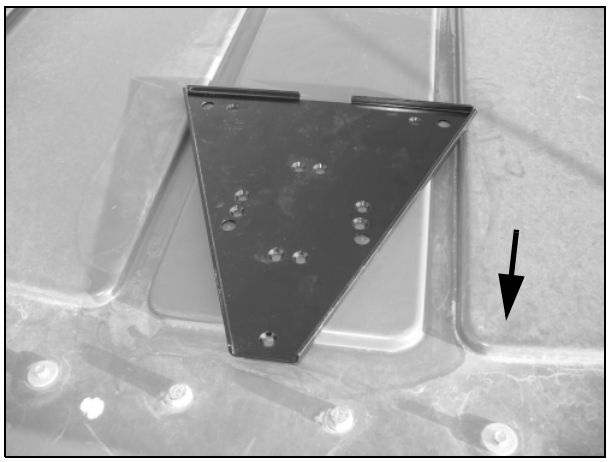

V plate

Assembling and installing antenna solutions using the John Deere Starfire antenna bracket adaptor

On vehicles equipped with the John Deere optional Starfire antenna bracket, you can use the Trimble JD ATR antenna bracket to provide a fast release antenna mount.

Step 1

Layout the bracket and hardware on a clean surface.



Step 2

Using the hardware provided, install the lock-pin and the lanyard as shown.



Step 3

Install two washers onto a stud.



Step 4

Install a T-knob locking handle onto the stud and then repeat Steps 3 to 4 for the second stud.



Step 5

Standard mount


For antennas using a standard $^{5}/_{8}$" - 11 threaded mount, attach the antenna to the bracket with a $^{5}/_{8}$" - 11 bolt.



Plate mount

For antennas that use a plate mount, attach the adaptor to the plate with four ¼" - 20 flat head screws.

Note – *A standard mount (P/N 56182) is shown, others are similar.*

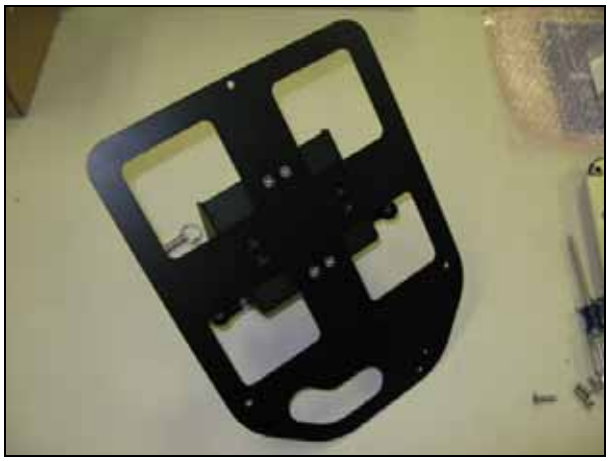

Step 6

If you are using an external radio antenna with this option, attach the radio antenna to the *Ag*GPS 262/AG-372 flat mount plate as shown.



Step 7

Insert the tab situated at the bottom of the adaptor into the slot in the vehicle mounted antenna bracket.



Step 8

Tighten both knobs securely.



Step 9

Tip the adaptor back until the pin holes line up and insert the attached steel lock pin through the bracket and the adaptor.

Note – *The pin prevents the bracket from falling should you forget to tighten the locking knobs.*




Step 10

When using the Starfire antenna bracket adaptor with an external radio antenna

Provision for mounting the radio antenna can be made using the standard adhesive backed steel plate with a standard magnetic mount as shown.



*Ag*GPS 262/372 GPS receiver with an *Ag*GPS 450/900 radio module (if equipped) components

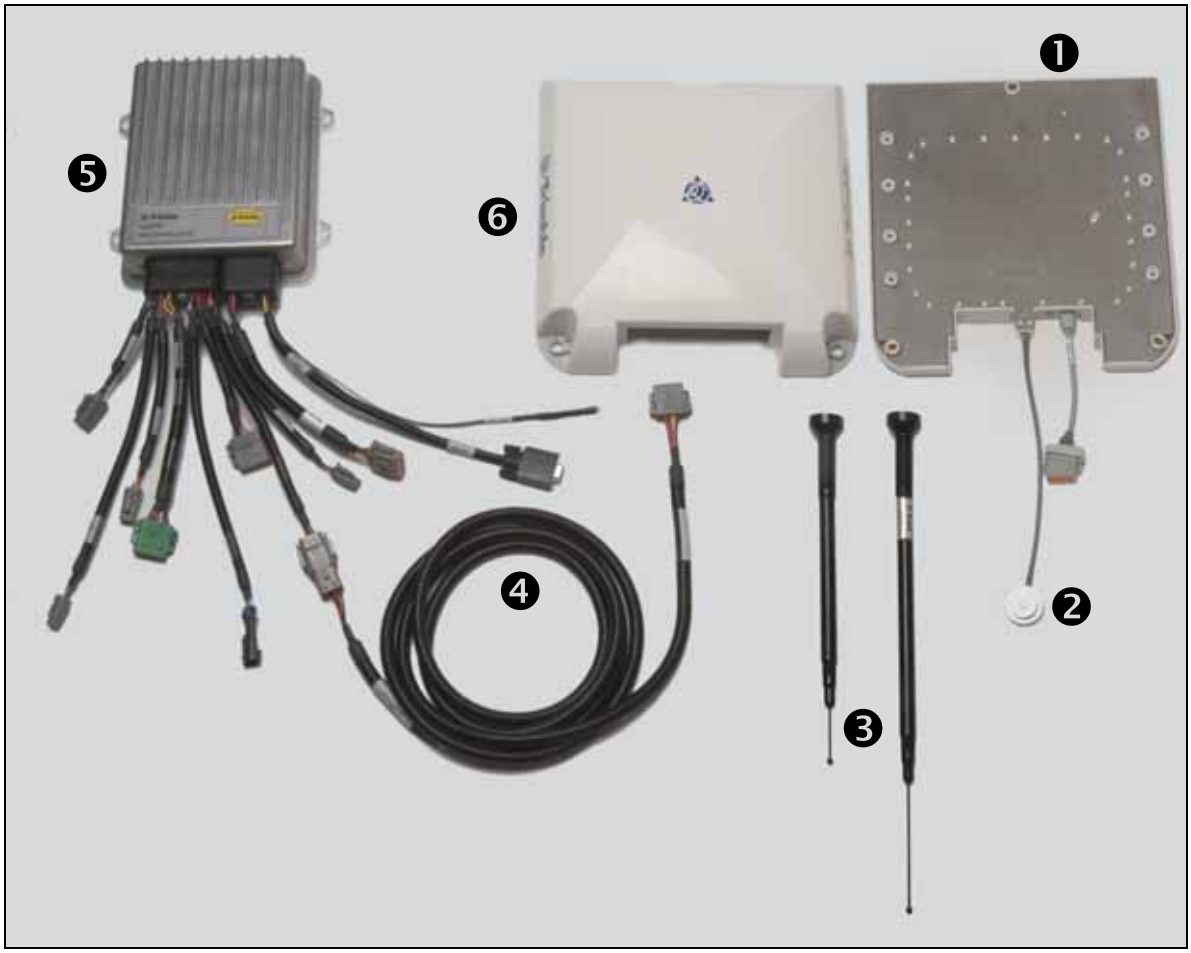

Item	Description	Trimble part number
❶	*Ag*GPS 450 or 900 radio (if equipped)	
❷	Radio antenna cable and magnetic mount	
❸	*Ag*GPS 450 or 900 radio antenna	
❹	Antenna/receiver cable	54608
❺	*Ag*GPS Autopilot controller	
❻	*Ag*GPS 262/AG-372 antenna/receiver	

Installing the *Ag*GPS 262/AG-372 GPS receiver with *Ag*GPS 450/900 radio module (if equipped)

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

To attach the *Ag*GPS 262/AG-372 receiver plate to the cab roof, do one of the following:

- For a removable installation, attach a V plate to a spar and then stick the receiver plate to the V plate with magnets.
- For a permanent installation, bolt the receiver plate to a spar.

Removable installation

Step 1

V plate

Attach the V plate to the spar using the ¼" flathead screws provided in the V plate bolt kit. Ensure that the narrow end points forward.

For spar mounting instructions, see page 29.



Mounting plate

Attach the three provided magnets to the plate with the ¼" flathead screws and hardware provided.




Underside of plate

Permanent installation

Step 1

Use the four provided ¼" flathead screws ❶ to attach the receiver mounting bracket to the spar.


For spar mounting instructions, see page 29.

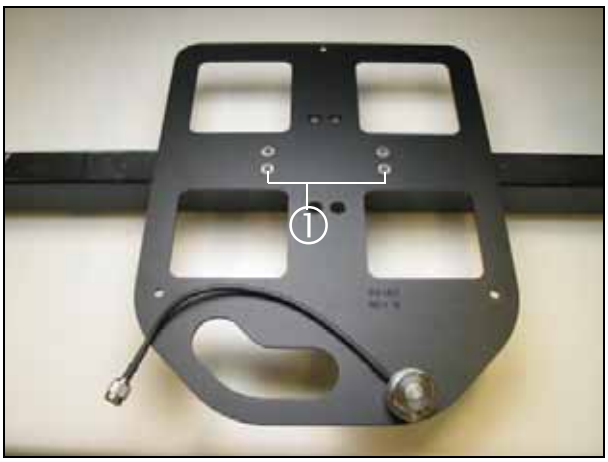

Step 2

Both installation methods

Place the radio module on the *Ag*GPS 262/AG-372 receiver. Secure it with the eight screws in the positions shown ❶.

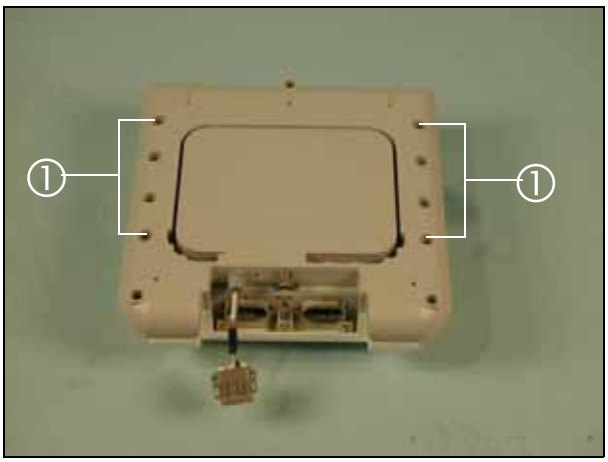


Step 3

Attach the antenna base to the rear of the plate with the two flathead screws provided.



Step 4

Attach the radio antenna to the antenna base.

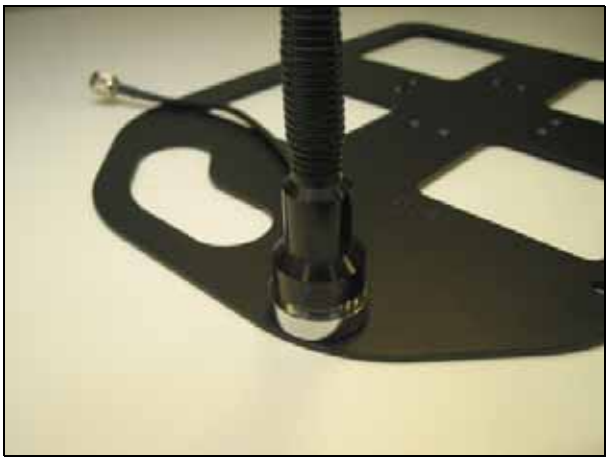

Step 5

Position the *Ag*GPS 262/AG-372 receiver and radio on the mounting plate with the connector ports facing the radio antenna. Align the three bolt holes with the receiver, radio, and mounting plate.




Step 6

Insert the nylon bushings provided.




Step 7

Insert the bolts through the receiver, radio, and mounting bracket. Place nuts on the bolt ends and then tighten them.

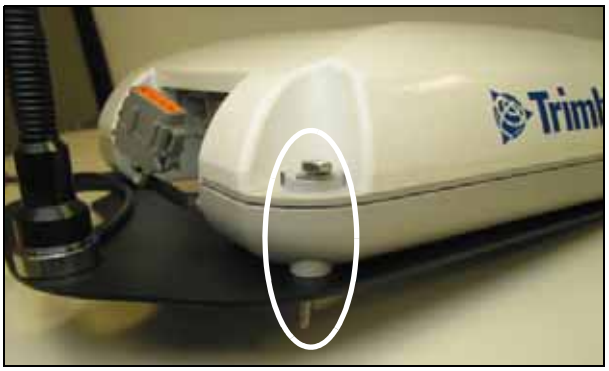

Step 8

Remove the connector plug from port B ❶.

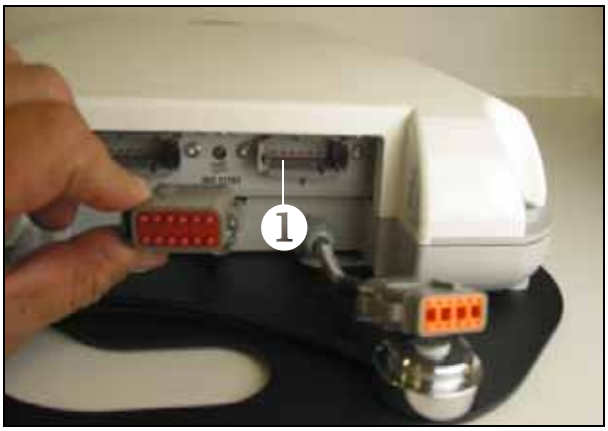

Step 9

Place the radio module connector into port B of the receiver.



Step 10


Connect the radio antenna to the antenna port.



Step 11

Magnet method

Place the receiver on the roof by aligning the magnets with the V plate. Ensure that the handle ❶ is toward the back of the vehicle.

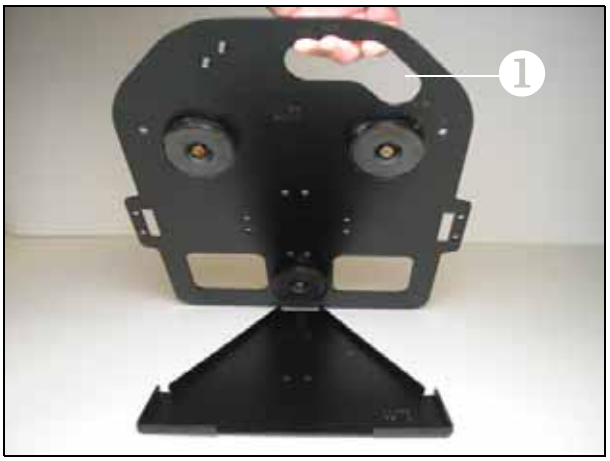


Step 12

Both methods

Connect the cable from the cab controller into port A ❶ of the *Ag*GPS 262/AG-372 receiver. Bolt the cable clamp ❷ to the left side of the receiver.

Route the cable into the cab and into the controller.

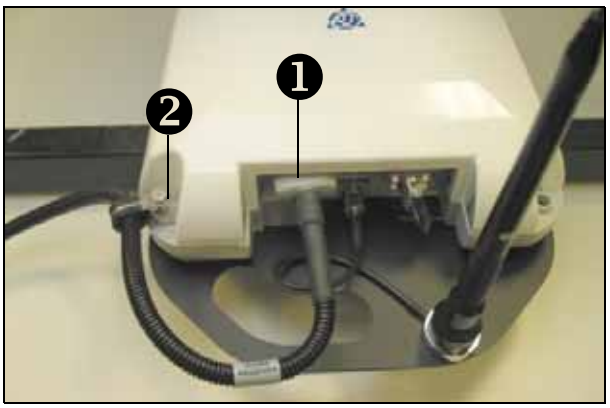

Installing an *Ag*GPS 262/AG-372 receiver with magnetic feet

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Use this option only when all other options are unavailable. It requires a firm surface for mounting to avoid vertical vibration and is not an easily repeatable location when moving receivers. Many cabs do not offer roof bolts; you may need to drill or to construct a firm location.

Step 1


Attach the magnets to the receiver mounting plate. Mount the *Ag*GPS 262/AG-372 GPS receiver using the three ¼" bolts.

Place the nuts on the receiver side.



Step 2

Turn the mounting plate upside down. Stick the covers onto the magnets as shown.

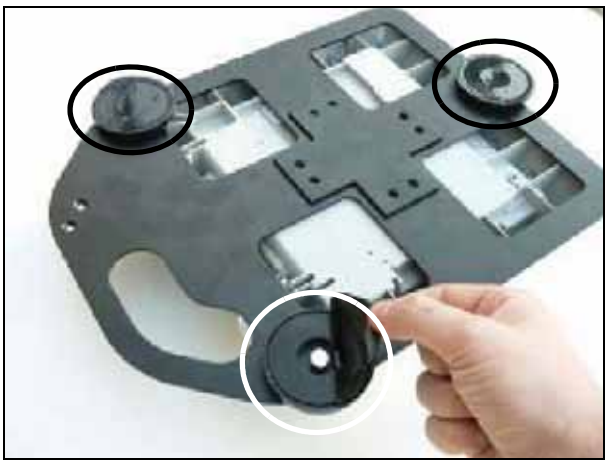


Step 3

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.


Remove the backing from the VHB strips and then apply the plates to the cab roof.

Attach the three mounting plates so that the receiver is as firm as possible.

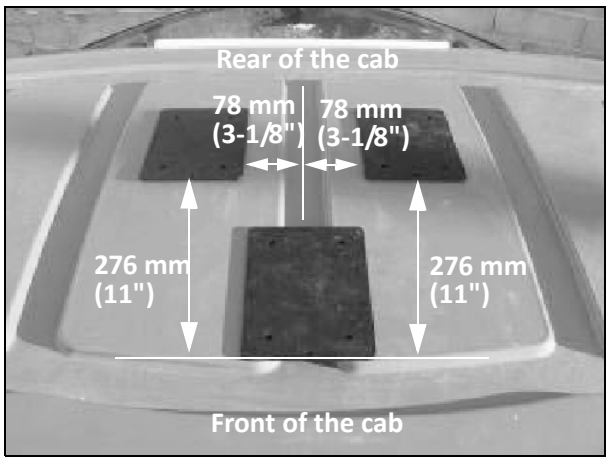


Step 4

Stick the antenna magnetic mounts at the center of the mounting plates.

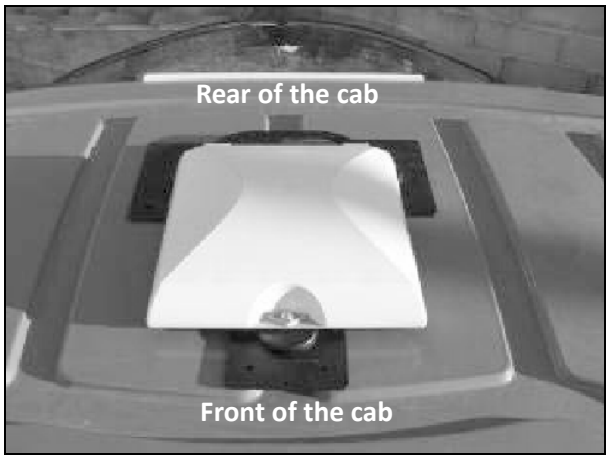


Step 5

Connect the antenna cable to port A of the *Ag*GPS 262/AG-372 GPS receiver and then route the cable toward the NavController II harness.

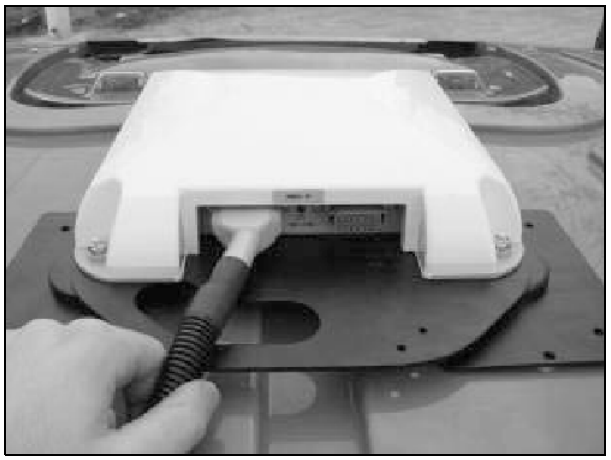

*Ag*GPS 432/442 receiver components

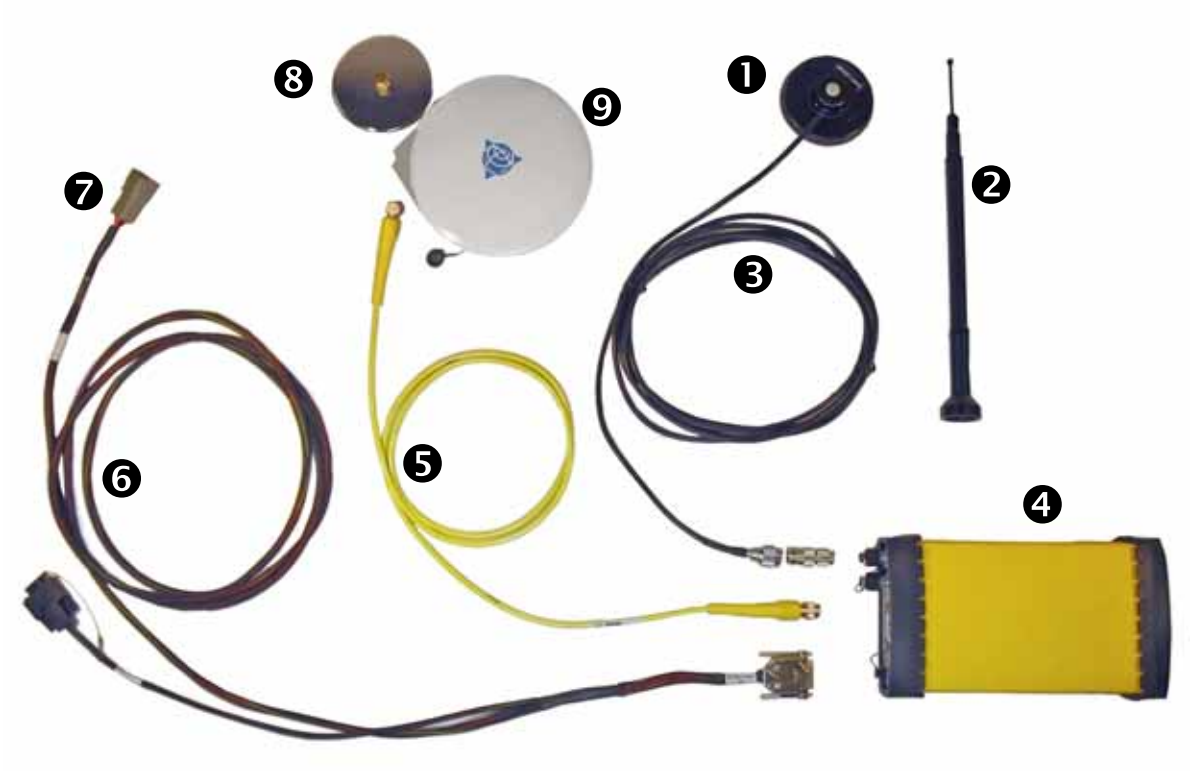

Item	Description	Trimble part number
❶	Radio antenna magnetic base	
❷	Radio antenna	
❸	Radio antenna cable	
❹	*Ag*GPS 432/442 GPS receiver	
❺	Antenna cable	
❻	Receiver cable	62037
❼	To controller “P3 GPS”	
❽	Antenna magnetic mount	
❾	*Ag*GPS 432/442 antenna	

Installing the *Ag*GPS 432/442 receiver


WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Attach the large magnet with a $^{5}/_{8}$" stud to the GPS antenna.



If the antenna has magnets built in, skip this step.

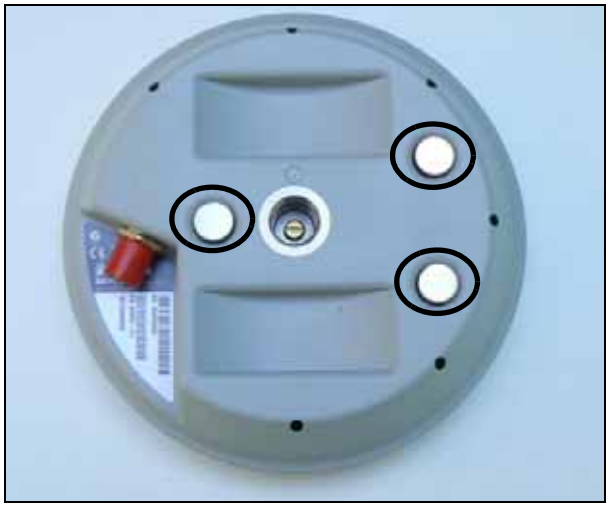

Step 2

GLONASS, RTK, OmniSTAR, DGPS applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



Step 3

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



Step 4

Mount the receiver in a convenient location in the cab. Route the antenna cable to the receiver and then connect it.




Step 5

Identify the correct adaptor for the radio connection:

❶ Reverse polarity TNC-to-N for 900 MHz radios

❷ Normal polarity TNC-to-N for 400 MHz radios

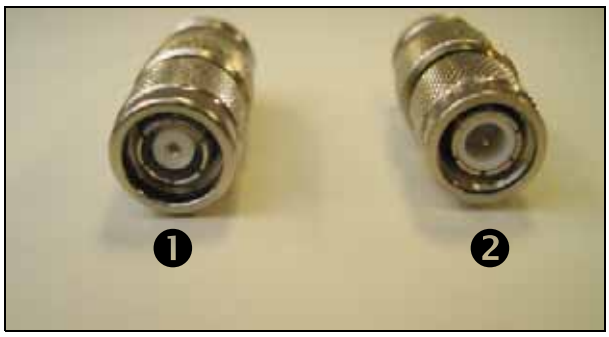

Step 6

Attach the adaptor to the radio port.



Step 7

Connect the radio antenna cable to the radio port adaptor.



Step 8

Connect the controller cable to the 26-pin connector of the receiver. Controller cable connections will be completed in Chapter 8, Controller Installation.



Step 9


Connect the radio antenna to the magnetic antenna base.



Step 10

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the 4" x 6" plate with the VHB provided to relocate the antenna.



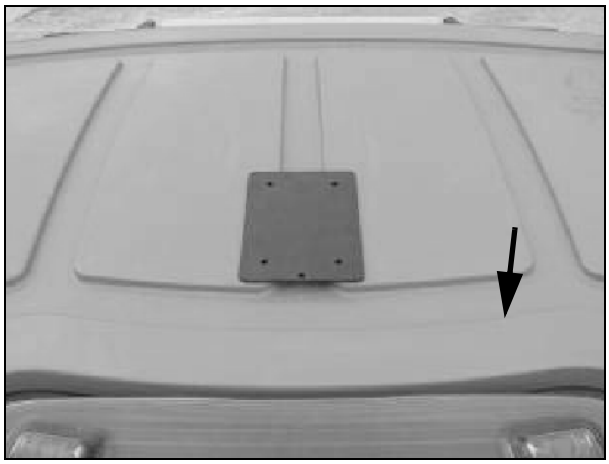

4" x 6" plate

CHAPTER

5


Display Installation

In this chapter:

- FmX integrated display components
- CFX-750 display components
- EZ-Guide 500 lightbar components: With SNB900 radio for RTK corrections (if equipped)
- Preparing the FmX integrated display
- Installing the FmX integrated display
- FmX integrated display: Installing the wiring harness
- Preparing the CFX-750 display
- Installing the CFX-750 display
- CFX - 750 display: Installing the wiring harness
- FmX integrated display and CFX-750 display: Connecting accessory options
- Preparing the EZ-Guide 500 lightbar
- Connecting the EZ-Guide 500 lightbar cables
- Installing the EZ-Guide 500 lightbar
- EZ-Guide 500 lightbar, and CFX-750 and FmX displays: Installing the GNSS antenna and plate
- EZ-Guide 500 lightbar, and CFX-750 and FmX displays: Installing the RTK radio antenna

This chapter describes and how to install and connect the FmX integrated display, CFX-750 display, or the EZ-Guide 500 lightbar in the vehicle.


FmX integrated display components

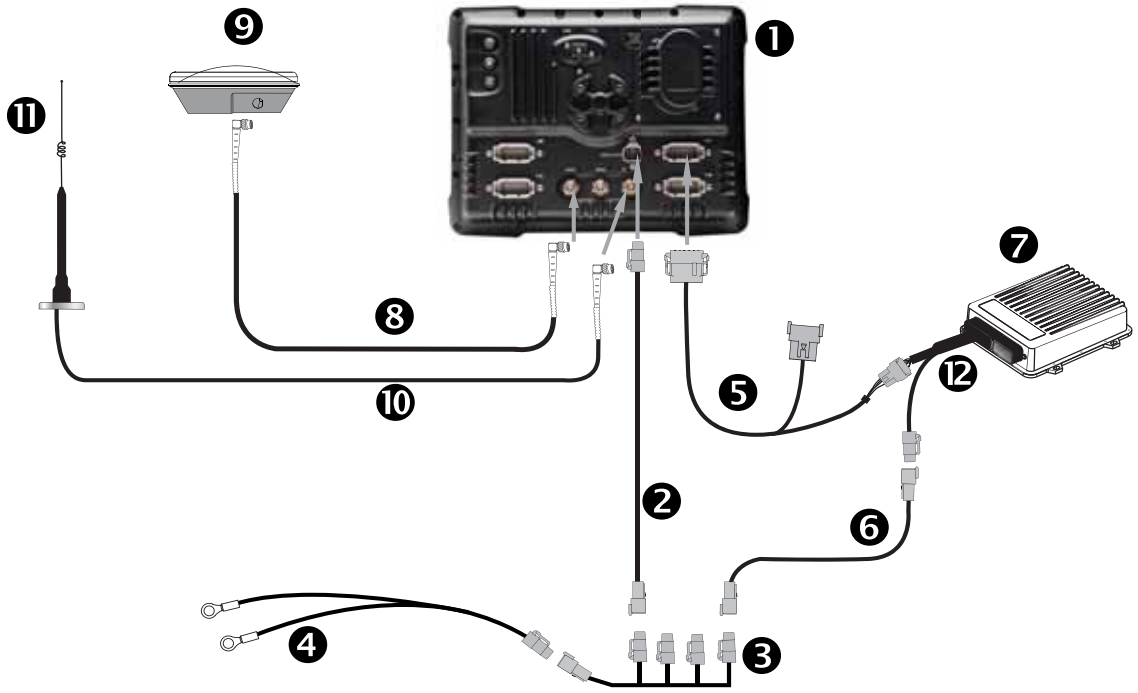

CAUTION – Connecting the Port Replicator on the FmX to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓬ will result in damage to the FmX / FM-1000 integrated display, and will void the warranty.

Item	Description	Trimble part number
❶	FmX integrated display	93100-02
❷	FmX power cable	66694
❸	FmX power cable with relay and switch (power bus)	67259
❹	Basic power cable	67258
❺	FmX to NavController II cable with port replicator	75741
❻	2 pin DTM to 2 pin DT power adaptor	67095
❼	NavController II	55563-00
❽	8 m GNSS TNC/TNC RT angle cable	50449
❾	AG25 GNSS antenna	77038-00
❿	NMO to TNC 20ft antenna cable and base	62120
⓫	900 MHz radio antenna kit	22882-10
⓬	Main NavController II cable	54601

CFX-750 display components

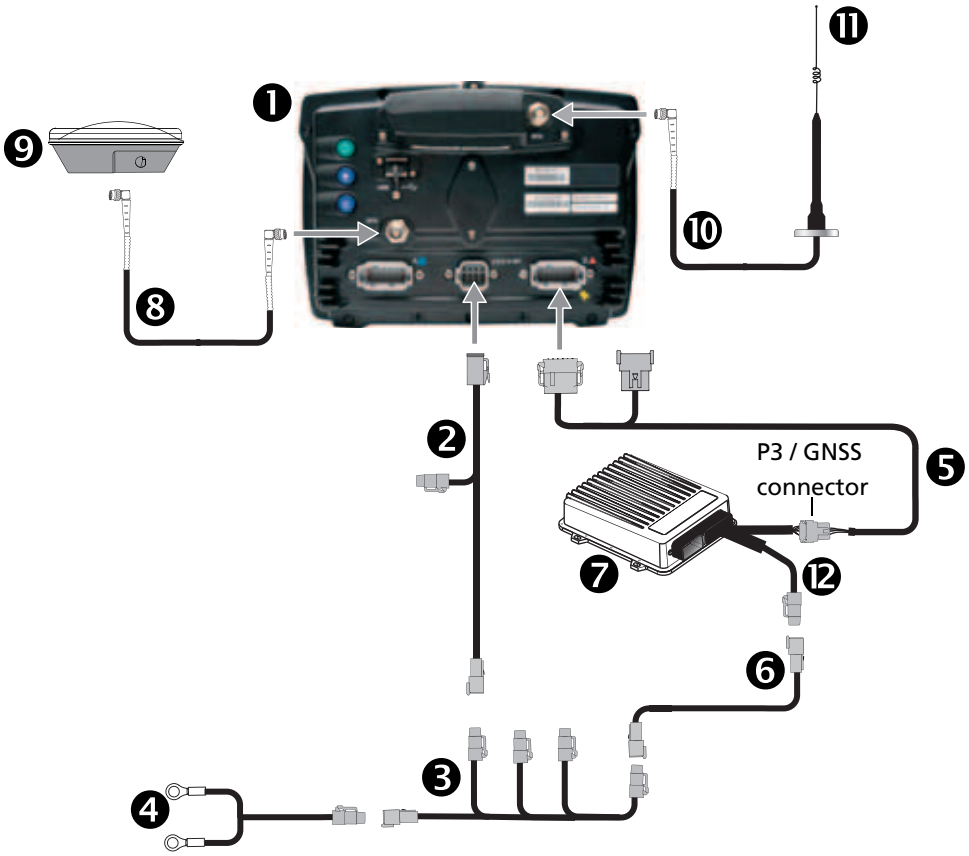


CAUTION – Connecting the Port Replicator on the CFX-750 display to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓬ will result in damage to the CFX-750 display and will void the warranty.

Item	Description	Trimble part number
❶	CFX-750 display ***Note –*** *RTK password required.*	94100-01
❷	CFX-750 power cable	77282
❸	CFX-750 power cable with relay and switch (power bus)	67259
❹	Basic power cable	67258
❺	CFX-750 to NavController II cable with port replicator	75741
❻	2 pin DTM to 2 pin DT power adaptor	67095
❼	NavController II	55563-00
❽	8 m GNSS TNC/TNC RT angle cable	50449
❾	AG25 GNSS antenna	77038-00

Item	Description	Trimble part number
⑩	NMO to TNC 20ft antenna cable and base	62120
⑪	900 MHz radio antenna kit	22882-10
⑫	Main NavController II cable	54601

EZ-Guide 500 lightbar components: With SNB900 radio for RTK corrections (if equipped)

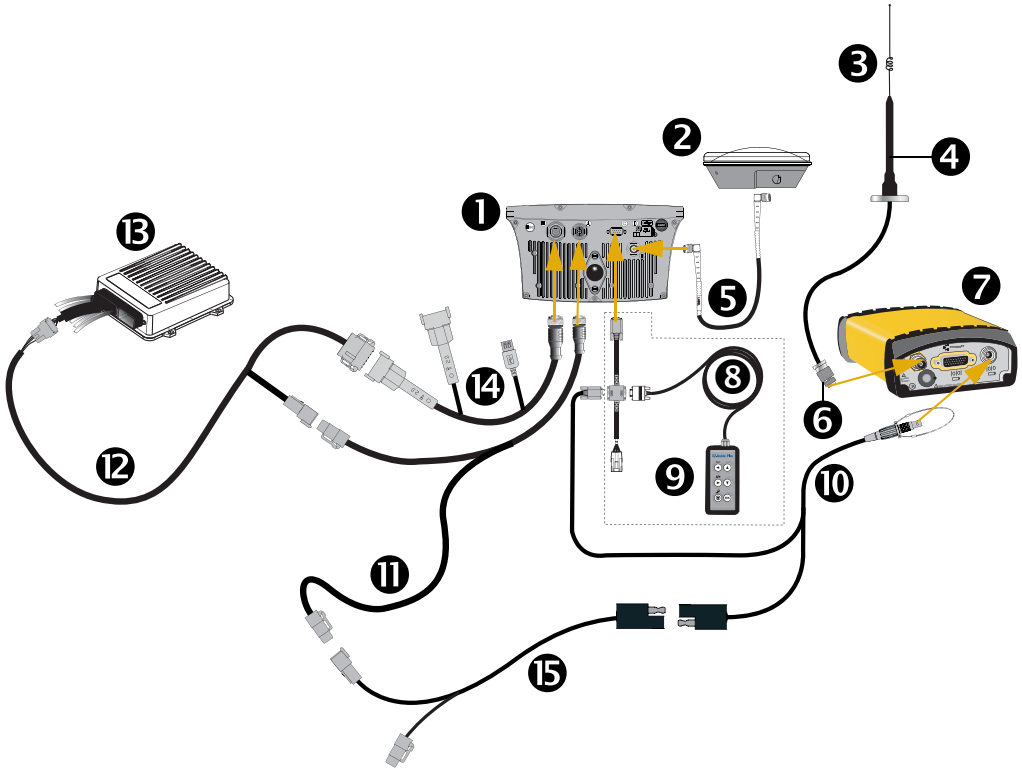

Item	Description	Trimble part number
❶	EZ-Guide 500 lightbar	
❷	GNSS antenna	57200-00
❸	SNB900 radio antenna	22882-00
❹	SNB900 radio antenna magnetic mount	62109
❺	GNSS antenna cable	50449
❻	N Female to REV. POL TNC Male	62114
❼	SNB900 radio	X8480-X0
❽	Remote keypad (optional)	66030-00
❾	External interface cable	62749
❿	Radio power/data cable	61158
⓫	EZ-Guide 500 power cable	62817
⓬	EZ-Guide 500-to-Autopilot cable	62754
⓭	NavController II	55563-00

Item	Description	Trimble part number
⓮	Port expansion cable	62609
⓯	Power tap to PDL radio	63185

Preparing the FmX integrated display

Step 1

Locate the FmX integrated display, the RAM mount, and the RAM mount clamp.



Step 2

Use the provided metric hardware to attach the RAM mount to the rear of the display.



Step 3

Attach the RAM mount to the rear of the display.



Installing the FmX integrated display

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the bar mount to the rail. Attach the free end of the RAM mount to the bar mount and then tighten the clamp on the RAM mount so that the display is secure.

Step 2

Connect the cable to the C port of the FmX integrated display.

To connect power to the FmX integrated display, see Chapter 6, Power Harness Installation.



FmX integrated display: Installing the wiring harness


Step 1

Locate the cable that connects the FmX integrated display to the NavController II ❶.



Step 2

Connect the cable to the P3 connector on the NavController II main harness, and then route the cable from the NavController II to the mounting location on the FmX integrated display.

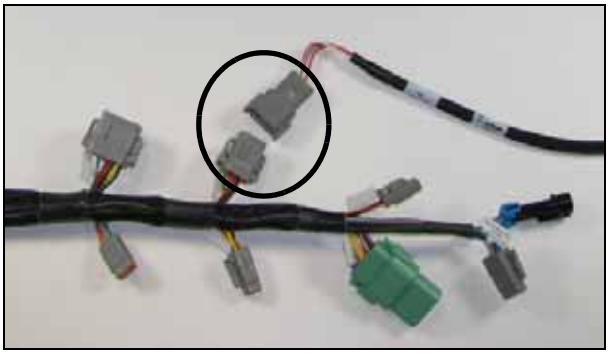

Preparing the CFX-750 display

Step 1

Locate the CFX-750 display, the RAM mount, and the RAM mount clamp.



Step 2

Use the provided metric hardware to attach the RAM mount to the rear of the display.



Step 3

Attach the RAM mount to the rear of the display.



Installing the CFX-750 display

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the bar mount to the rail.

Attach the free end of the RAM mount to the bar mount and then tighten the clamp on the RAM mount so that the display is secure.

Step 2

Connect the cable to the B port of the CFX-750 display.

To connect power to the CFX-750 display, see Chapter 6, Power Harness Installation.



CFX - 750 display: Installing the wiring harness

Step 1

Locate the cable that connects the CFX-750 display to the NavController II.

Step 2

Connect the cable to the P3 connector on the NavController II main harness and then route the cable from the NavController II to the mounting location on the CFX-750 display.



FmX integrated display and CFX-750 display: Connecting accessory options

Note – *Unless otherwise stated, "the display" applies to FmX integrated display or the CFX-750 display.*

AgCam

The AgCam and AgCam cable are accessory items that you can purchase separately from the display. The FmX integrated display allows for up to four video inputs; the CFX-750 display allows up to two.

Step 1

Locate the AgCam and AgCam cable.

Step 2

Mount the AgCam in a secure location and then route the cable towards the display.



FmX display



CFX-750 display

Step 3

Connect the AgCam cable to the display adaptor cable.



Step 4

Connect the display to AgCam adaptor cable to one of the open 12 pin connectors on the back of the display.



Preparing the EZ-Guide 500 lightbar

Note – *Before you attach the lightbar to the RAM mount, connect the EZ-Guide 500 cables to the back of the lightbar.*

Step 1

Locate the EZ-Guide 500 lightbar, the RAM mount and hardware, and the RAM mount clamp.



Step 2

Attach the RAM mount diamond base to the display using the hardware provided.



Connecting the EZ-Guide 500 lightbar cables

Note – *Before you attach the lightbar to the RAM mount, connect the EZ-Guide 500 cables to the back of the lightbar.*

Step 1

Connect the port expansion cable (P/N 62609) to the AUX port on the back of the lightbar.



Step 2

Connect the EZ-Guide 500 power cable (P/N 62817) to the PWR port on the back of the lightbar.



Step 3

Connect the 2-pin connector on the port expansion cable and the 12-pin connector on the power cable to the matching connectors on the EZ-Guide 500-to-Autopilot cable (P/N 62754).

Step 4


Feed the GNSS antenna cable into the cab and then connect it to the antenna port on the back of the lightbar.




Step 5

With keypad

Connect the external interface cable (P/N 66030-00) to the serial port on the back of the lightbar.

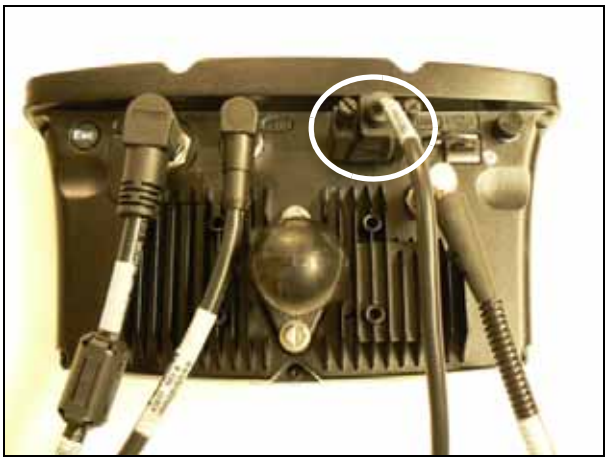


Connect the remote keypad to the KPAD serial port on the external interface cable.

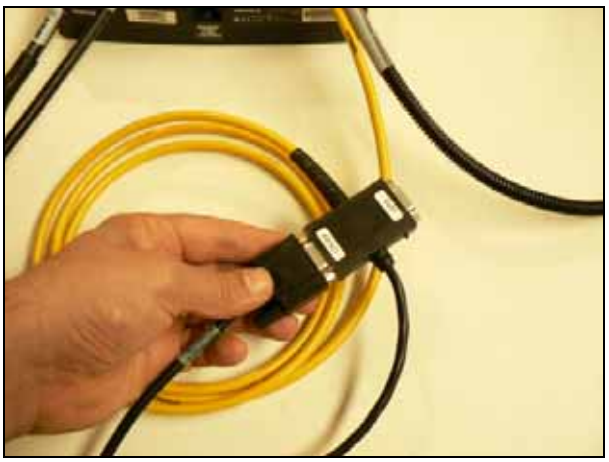


Connect the appropriate cable to the GNSS serial port on the interface cable:

Radio type	Cable to connect
SNB900 radio	EZ-Guide 500-to-radio cable (P/N 61158)
PDL 450 radio	PDL radio power/data cable (P/N 51861-00)

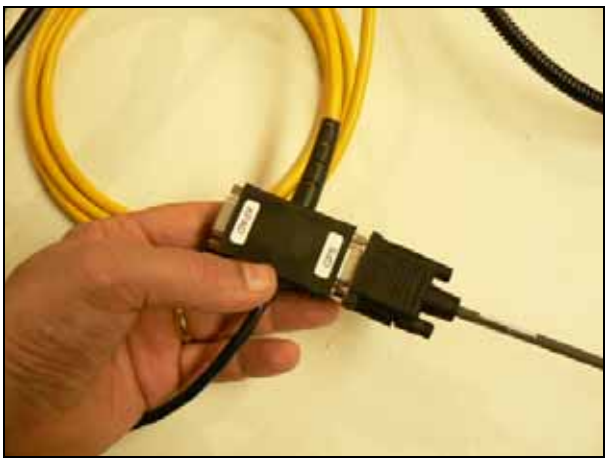

Without keypad

Connect the appropriate cable to the serial port on the back of the lightbar:

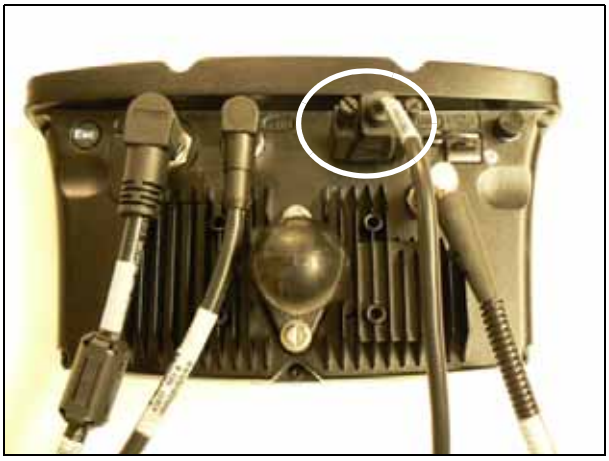

Radio type	Cable to connect
SNB900 radio	EZ-Guide 500-to-radio cable (P/N 61158)
PDL 450 radio	PDL radio power/data cable (P/N 51861-00)

Step 6

Connect the other end of the radio cable to the radio.

Step 7

Connect the remaining connector on the PDL radio power/data cable to the matching connector on the power tap cable (P/N 63185).

Connect the connector at the other end of the power tap cable to the EZ-Guide 500 power cable.

Installing the EZ-Guide 500 lightbar

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Test a location for the lightbar in the cab (there must be a bar that the RAM mount can be attached to); sit in the driver's seat and hold the lightbar in place.

Note – *Make sure the position allows comfortable access to the display buttons and does not obstruct instruments.*



Step 2

Attach the RAM mount to the ball on the rear of the lightbar.



Step 3

Attach the free end of the RAM mount to the bar mount, tighten the clamp on the RAM mount so that the lightbar is held securely in place and then adjust the angle of the RAM mount for ease of use.



EZ-Guide 500 lightbar, and CFX-750 and FmX displays: Installing the GNSS antenna and plate

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Note – *The V plate antenna bracket is available on the Autopilot price list. See* Antenna mounting kits, page 9*.*

Use one of the following methods:

- Spar mount
- VHB adhesive

Spar mount method

Trimble recommends that you use this method for RTK and OmniSTAR operations. For more information, see Antenna and receiver installation options, page 28.

Attach the V plate to the spar with the four supplied ¼"-20 flathead screws as shown. The narrow end points forward.



VHB adhesive method

Standard 4" x 6" plates are provided in most kits. You can use Very High Bond (VHB) to attach either a 4" x 6" plate or a V plate.

- **GLONASS, RTK, OmniSTAR, DGPS applications** – To use this method for high accuracy, the surface must be rigid and free of “oil panning”. For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a 4" x 6" plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


Note – *The VHB strips are pre-applied to the 4" x 6" plate.*

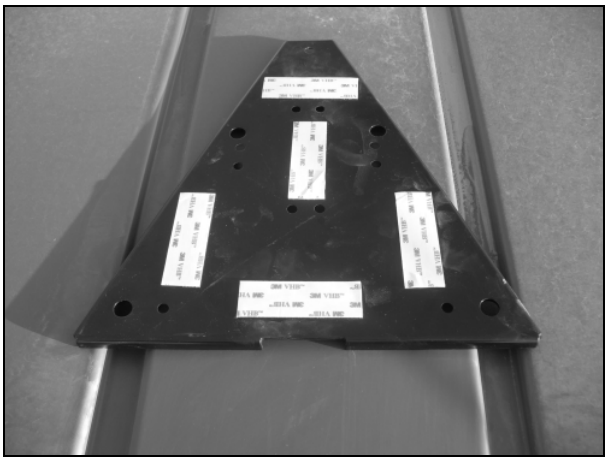


Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

Note – *The arrow in this figure points to the front of the vehicle.*

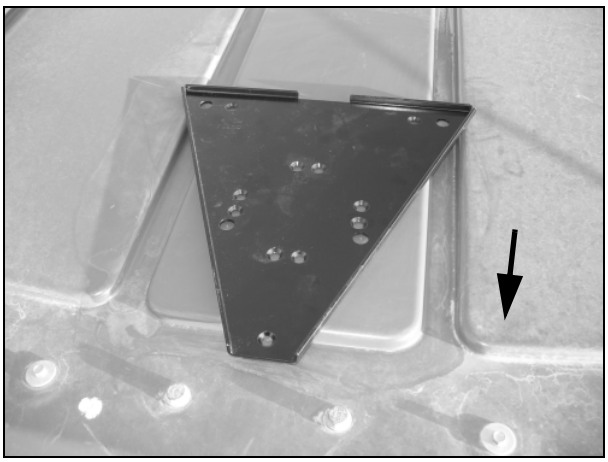


V plate

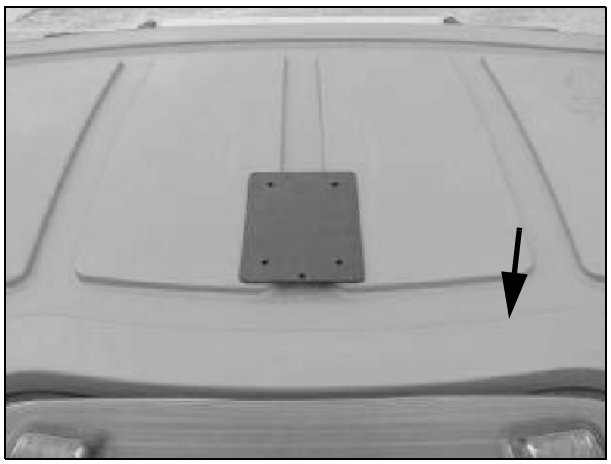

4" x 6" plate

Step 4

If the antenna has magnets built in, omit this step.

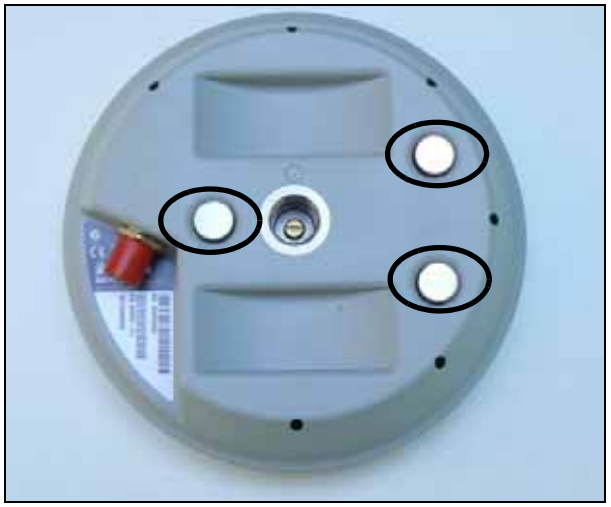

Otherwise, attach the large magnet with a $^{5}/_{8}$" stud to the GNSS antenna.



Step 5

RTK, OmniSTAR, DGPS, GLONASS applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



WAAS, EGNOS, VBS, Beacon applications

Attach the antenna to the center of the 4" x 6" plate.



Step 6

Both models

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



EZ-Guide 500 lightbar, and CFX-750 and FmX displays: Installing the RTK radio antenna

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Connect the radio antenna to the magnetic antenna base



Step 2

Attach the magnetic radio antenna base to the rear f the V plate on the roof. If the cable does not reach the V plate, use the 4" x 6" plate with the VHB provided to relocate the antenna.



Step 3

Route cable from the vehicle roof into the cab, and connect the radio cable to the display.

CHAPTER

6


Power Harness Installation

In this chapter:

- FmX integrated display components
- CFX-750 display components
- EZ-Guide 500 lightbar components
- Installing the power harness for the display
- Configuring the power bus options for the display
- Configuring the power bus options for the EZ-Guide 500 lightbar

This chapter describes how to install the power harness in the vehicle.

FmX integrated display components

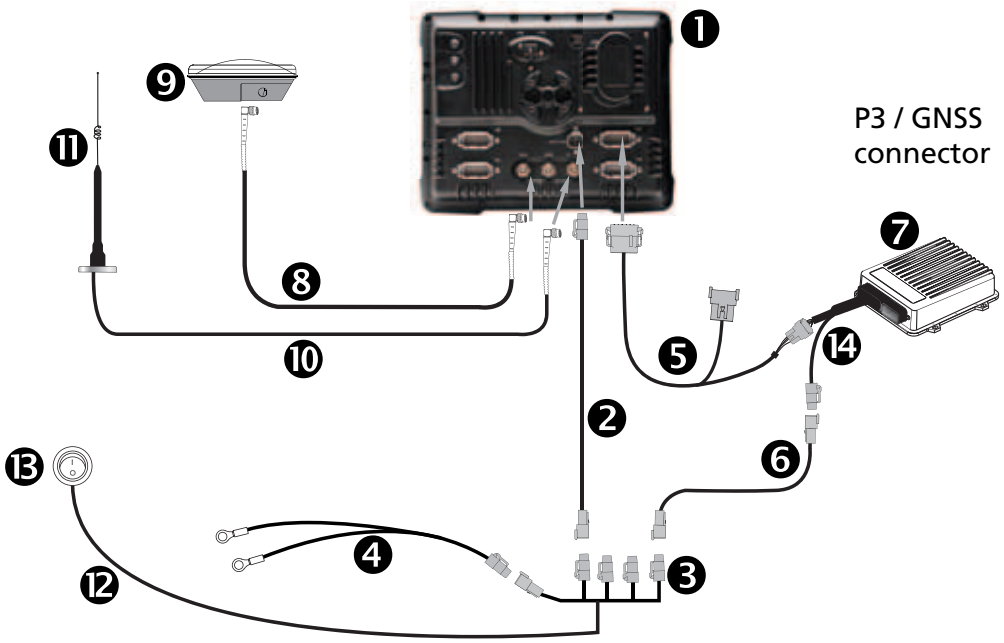


CAUTION – Connecting the Port Replicator on the FmX to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓮ will result in damage to the FmX/FM-1000 integrated display, and will void the warranty.

Item	Description	Trimble part number
❶	FmX integrated display	93100-02
❷	FmX power cable	66694
❸	FmX power cable with relay and switch (power bus)	67259
❹	Basic power cable	67258
❺	FmX to NavController II cable with port replicator	75741
❻	2 pin DTM to 2 pin DT power adaptor	67095
❼	NavController II	55563-00
❽	8 m GNSS TNC/TNC RT angle cable	50449
❾	AG25 GNSS antenna	77038-00
❿	NMO to TNC 20ft antenna cable and base	62120
⓫	900 MHz radio antenna kit	22882-10
⓬	External switch cable included with kit	Part of P/N 67259

Item	Description	Trimble part number
⓫	Switch	67095
⓮	NavController II harness	54601

CFX-750 display components

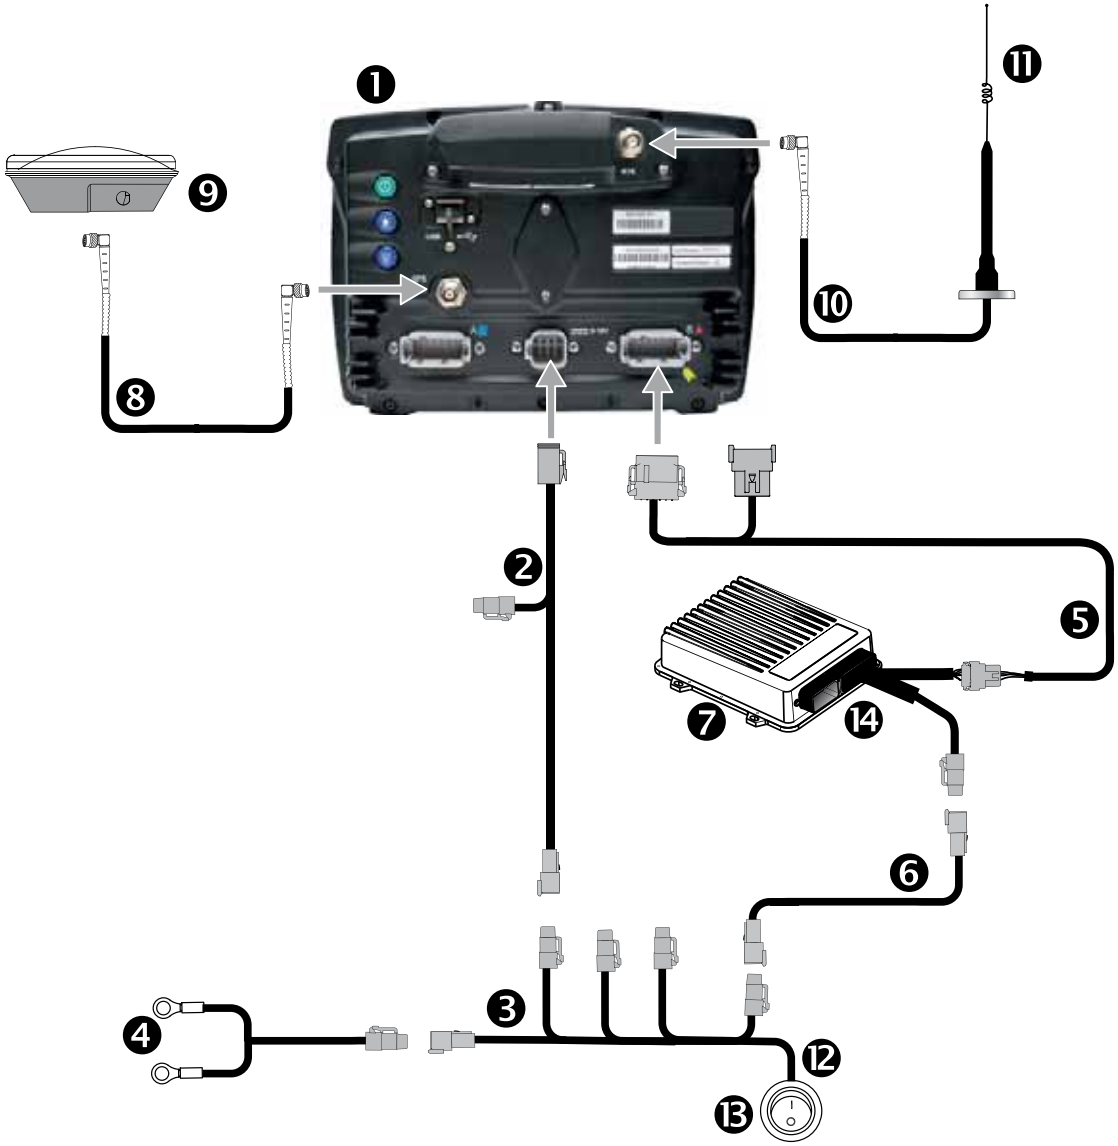


CAUTION – Connecting the Port Replicator on the CFX-750 display to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓮ will result in damage to the CFX-750 display and will void the warranty.

Item	Description	Trimble part number
❶	CFX-750 display ***Note –*** *RTK password required.*	94100-02
❷	CFX-750 power cable	77282
❸	CFX-750 power cable with relay and switch (power bus)	67259

Item	Description	Trimble part number
❹	Basic power cable	67258
❺	CFX-750 to NavController II cable with port replicator	75741
❻	2 pin DTM to 2 pin DT power adaptor	67095
❼	NavController II	55563-00
❽	8 m GNSS TNC/TNC RT angle cable	50449
❾	AG25 GNSS antenna	77038-00
❿	NMO to TNC 20ft antenna cable and base	62120
⓫	900 MHz radio antenna kit	22882-10
⓬	External switch cable included with kit	Part of P/N 67259
⓭	External switch included with kit	Part of P/N 67259
⓮	Main NavController II cable	54601

EZ-Guide 500 lightbar components

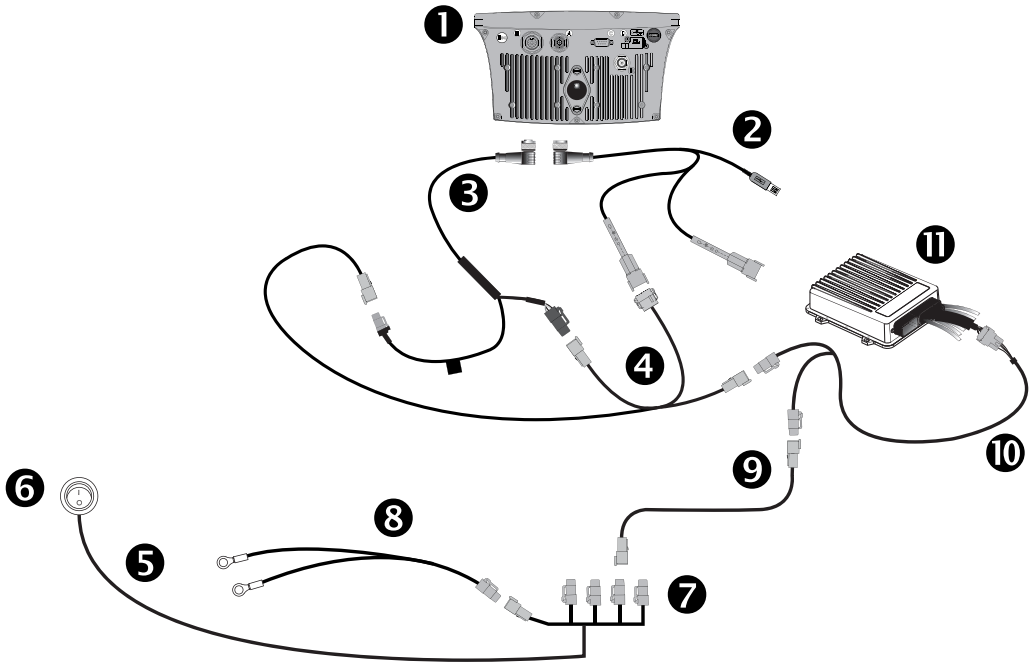

Item	Description	Trimble part number
❶	EZ-Guide 500 lightbar	
❷	EZ-Guide 500 lightbar 19 pin port expansion cable	62069
❸	EZ-Guide 500 lightbar/CAN 90° 5 pin connector	62817
❹	EZ-Guide 500 lightbar port A to NavController II cable	62754
❺	Switch cable	Part of 67259
❻	Switch	67095
❼	FmX power cable with relay and switch	67259
❽	FmX basic power cable	67258
❾	2 pin DTM to 2 pin 2 DT power adaptor	67095
❿	NavController II main cable	54601
⓫	NavController II	55563-00

Installing the power harness for the display

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.


Step 1

Connect the basic power cable to the vehicle battery and then route the cable into the cab.



Step 2

Locate and connect the 4-pin Deutsch DTP receptacle on the power bus ❶ to the 4-pin Deutsch DTP plug ❷ on the basic power cable and then remove the protective cap from the 4-pin Deutsch DTP plug ❸ on the power bus and connect the plug to the 4-pin Deutsch DTP receptacle ❹ on the display power adaptor.

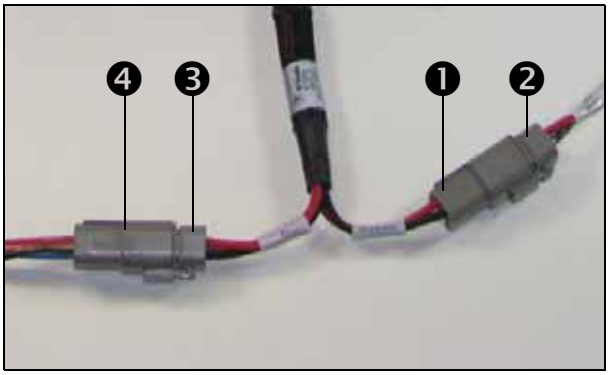

Step 3

Route the display power adaptor to the display mounting location and then connect it to the display.



FmX display



CFX-750 display

Configuring the power bus options for the display


WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

When you use the power bus cable, use one of the following configuration methods to turn on the Autopilot system:

- Display power button is used to turn on the Autopilot system
- External switch is used to turn on the Autopilot system
- Ignition is used to turn on the Autopilot system

Display power button is used to turn on the Autopilot system

Connect the 2 pin connectors labeled R2 and P2 on the power bus.

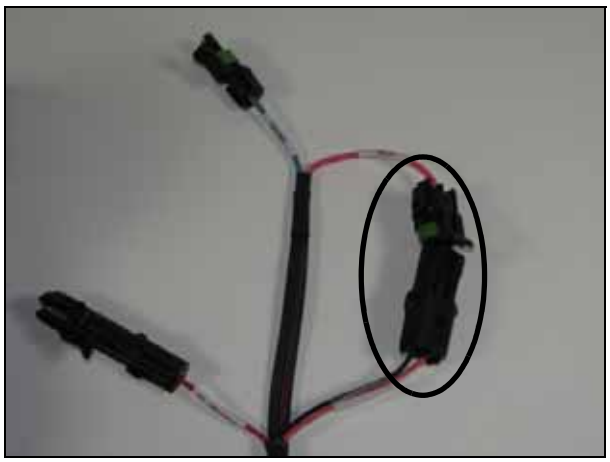


External switch is used to turn on the Autopilot system

Step 1

Connect the cable labeled R7 switch ❶ (included with the power bus) to connector labeled P2 on the power bus ❷ and then route the cable labeled R7 to a switch location.


Note – *To install the switch provided, drill a ¾" hole.*

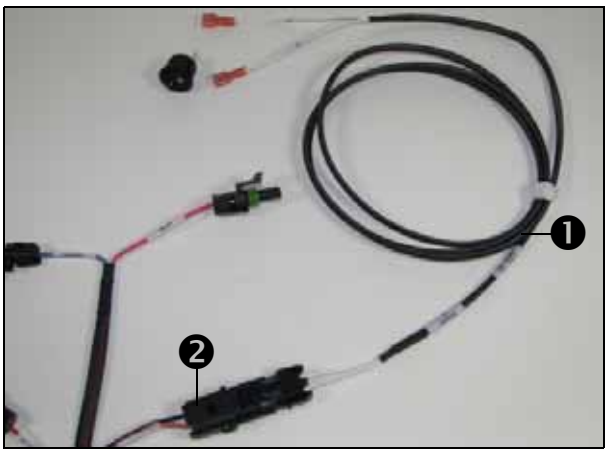

Step 2

Connect the cable labeled R7 to the switch pins.

Note – *Polarity is not important.*

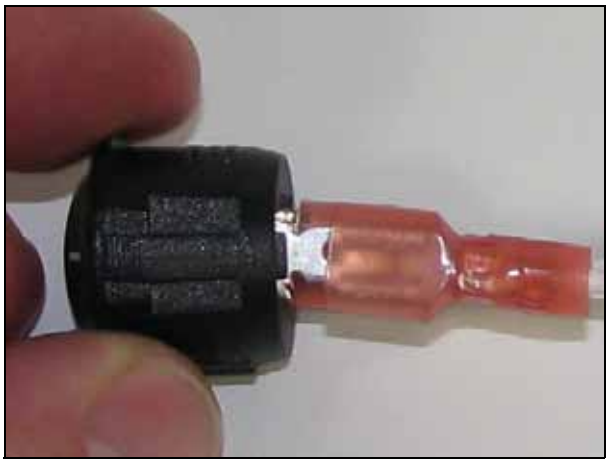

Installing the optional illuminated full or standard Euro switch

Step 1

Find an available knockout location on the vehicle console.

Note – *An alternative location is required for the switch provided.*




Step 2

Route the cable labeled R7 to the switch location and then connect the cable to the illuminated switch.

Connect the wire labelled S1 to pin 5 on the switch and then connect the wire labelled S2 to pin 4 on the switch.


Note – *Polarity **is** important.*

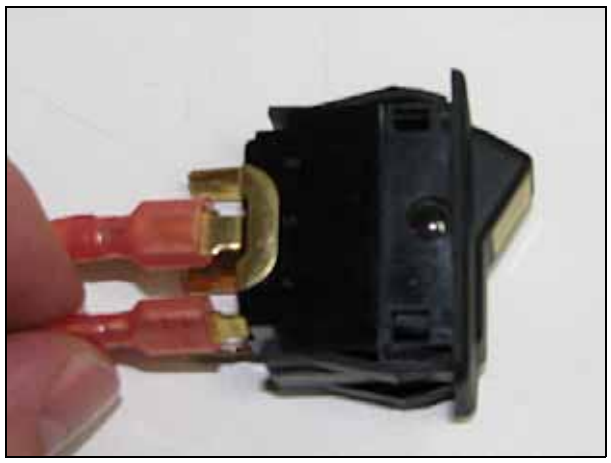

Step 3

Connect a separate wire to pin 3 on the switch using a spade connector. Route the wire and then connect it to the vehicle switched power.

Note – *This additional wire is required to allow the switch to illuminate.*

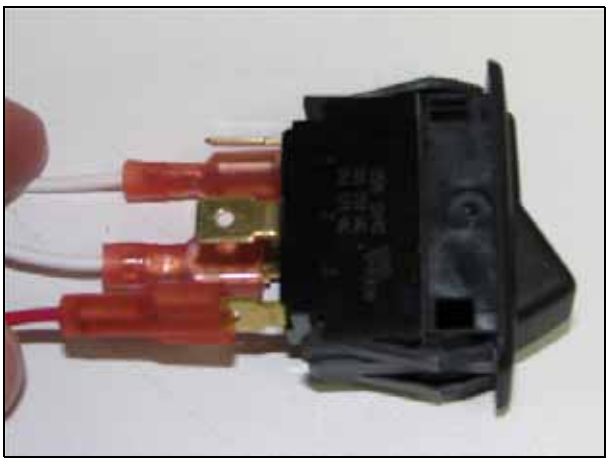


Ignition is used to turn on the Autopilot system

Note – *For more information on how to use the ignition sensing option, see the FmX Integrated Display User Guide.*


Step 1

Note – *Connect the 2-pin connectors labeled R2 and P2 on the power bus.*

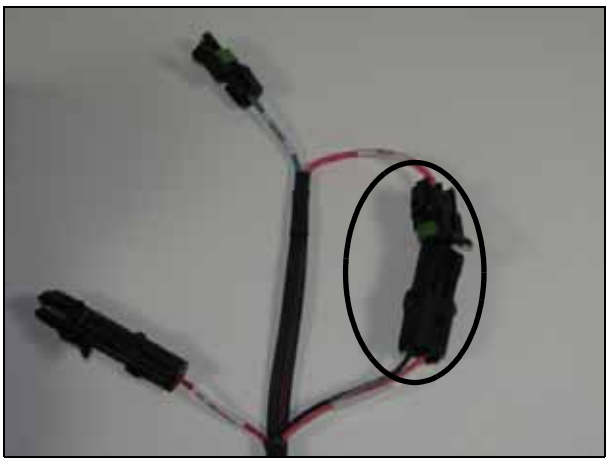

Step 2

Connect the cable labeled R8 Ignition (included with the power bus) to connector P3 Ignition on the power bus.

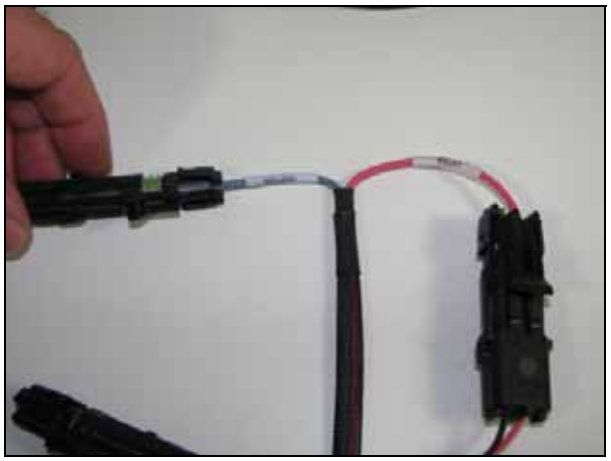


Step 3

Route the cable to the vehicles ignition.

Step 4

Connect the red ignition sense wire to the vehicle ignition using the spade or ring terminal provided.

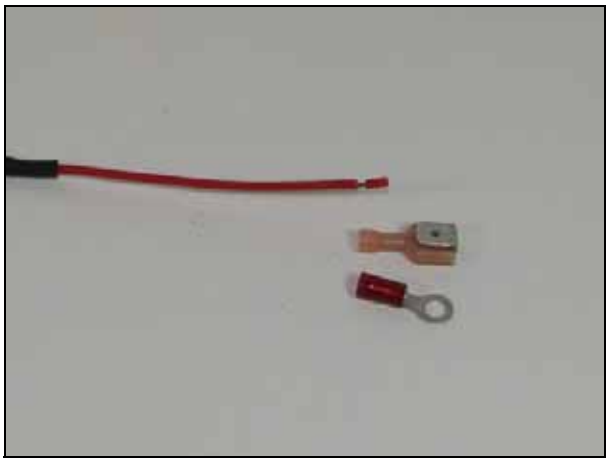

Configuring the power bus options for the EZ-Guide 500 lightbar

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Note – *For the EZ-Guide 500 lightbar cable installation instructions see,* EZ-Guide 500 lightbar components, page 82*.*


Step 1

Locate and connect the basic power cable to the vehicle battery and then route the cable into the cab.



Step 2


Locate and connect the 4-pin Deutsch DTP receptacle on the power bus to the 4-pin Deutsch DTP plug on the basic power cable.

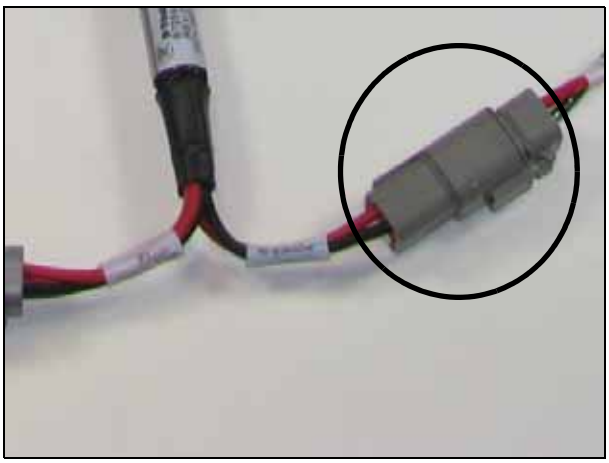

Step 3

Verify that the protective receptacle is installed on the power bus.


Note – *Damage to the system may result if the protective receptacle is not in place.*

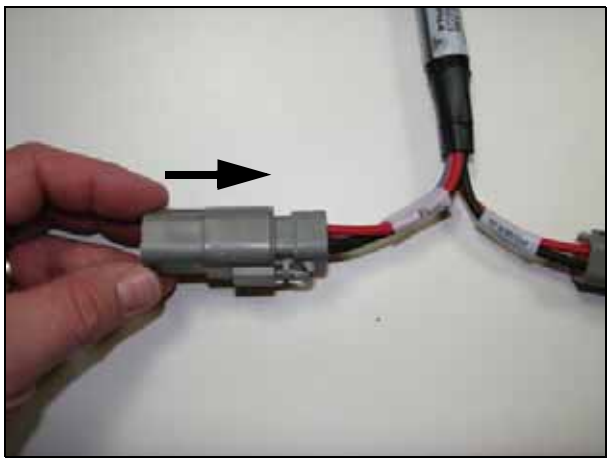

Step 4

Connect the cable labeled R7 switch ❶ (included with the power bus) to connector labeled P2 on the power bus ❷ and then route the cable labeled R7 to a switch location.


Note – *To install the switch provided, drill a ¾" hole.*

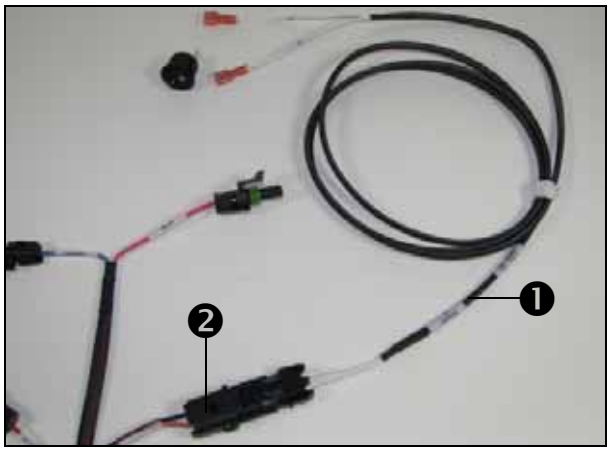

Step 5

Connect cable labeled R7 to the switch pins

Note – *Polarity is not important.*

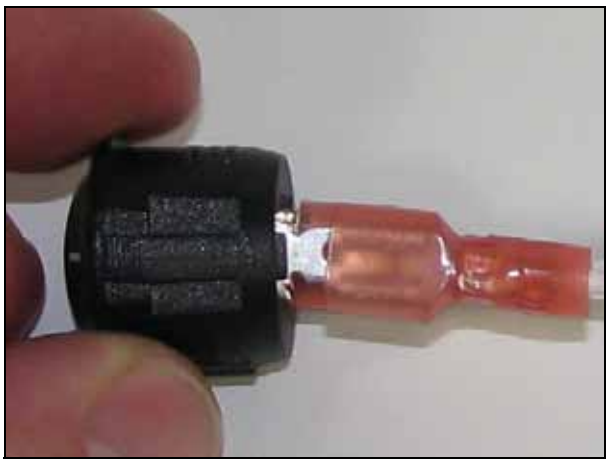

Installing the optional illuminated full or standard Euro switch

Step 1

Find an available knockout location on the vehicle console.

Note – *An alternative location is required for the switch provided.*




Step 2

Route the cable labeled R7 to the switch location and then connect the cable to the illuminated switch.

Connect the wire labelled S1 to pin 5 on the switch and then connect the wire labelled S2 to pin 4 on the switch.


Note – *Polarity **is** important.*

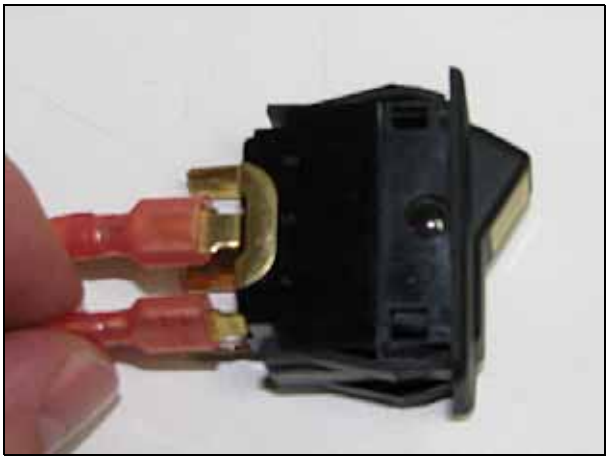

Step 3

Connect a separate wire to pin 3 on the switch using a spade connector. Route the wire and then connect it to the vehicles switched power.

Note – *This additional wire is required to allow the switch to illuminate.*

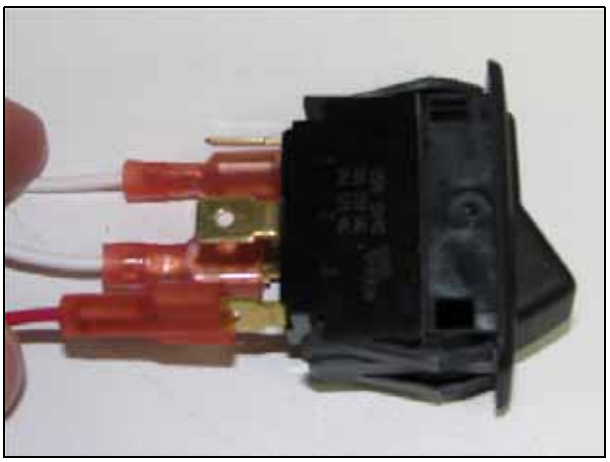

CHAPTER

7

Remote Engage Switch Installation

In this chapter:

- Remote engage switch components: Rocker switch
- Remote engage switch components: Foot switch
- Preparing the remote engage cable
- Using the remote engage switch

This chapter describes how to install the remote engage switch.


Remote engage switch components: Rocker switch



Item	Description
❶	DTM receptacle
❷	Remote engage rocker switch

Note – *This is a Full or Standard Euro switch, depending on the kit ordered.*

Remote engage switch components: Foot switch

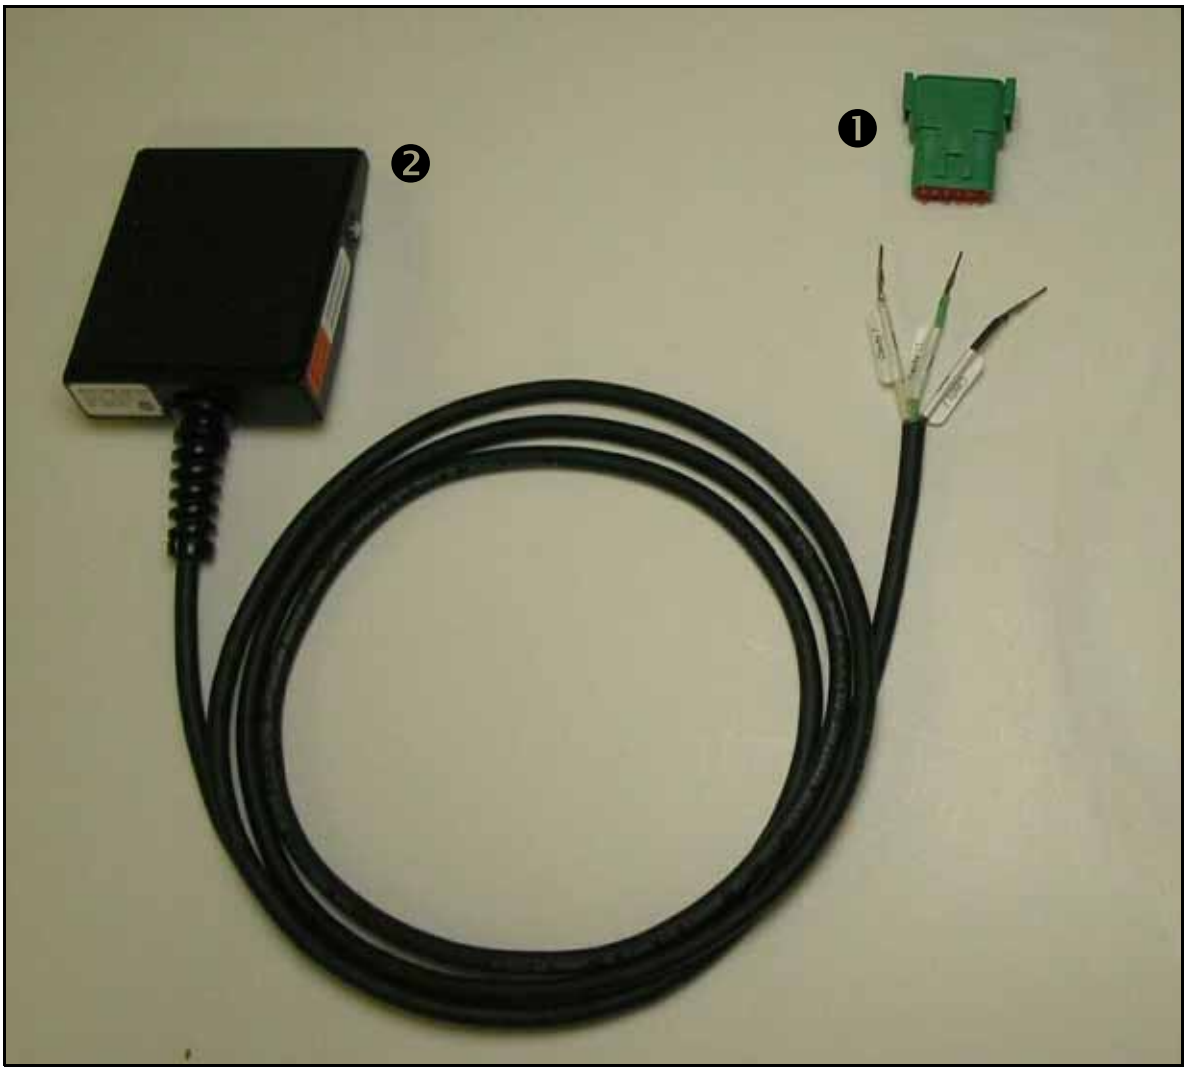


Item	Description
❶	DTM receptacle
❷	Remote engage foot switch

Preparing the remote engage cable


Step 1

Locate the green 12-pin Deutsch receptacle on the P-5 leg of the main controller harness. For more information, see Chapter 8, Controller Installation.

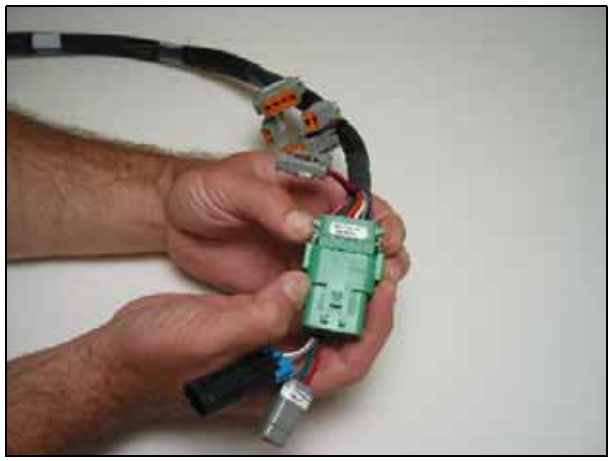

Step 2


Remove the wedge from the connector.

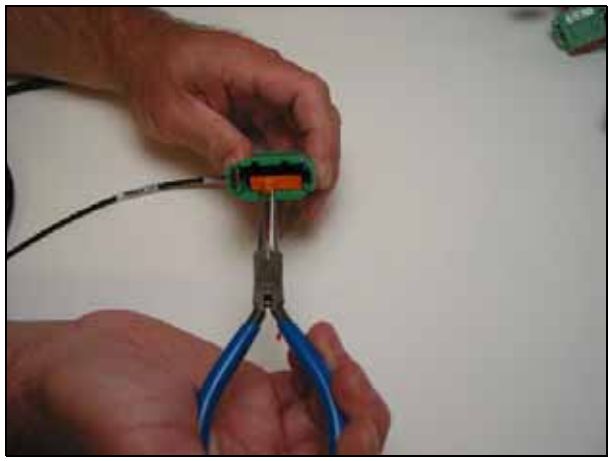

Step 3


Rocker switch only

Remove the plugs from cavity 2 and cavity 7.

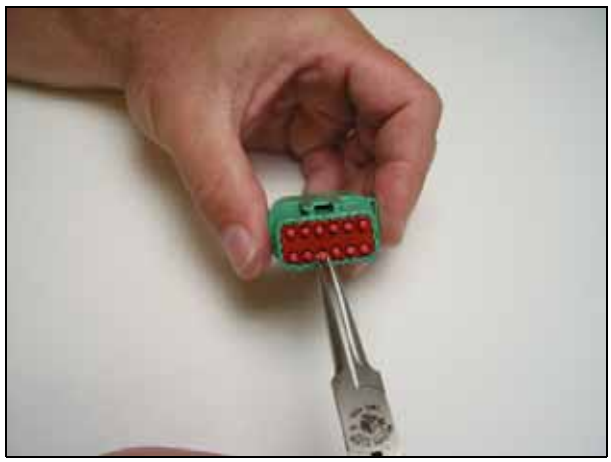

Foot Switch Only


Remove the plugs from cavity 2, cavity 7, and cavity 11.

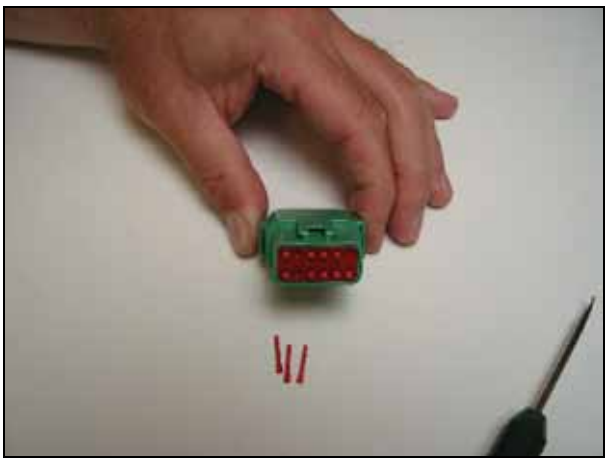

Step 4


Rocker switch only

Insert the DTM pins into cavity 2 and cavity 7, according to the labels on the wires.

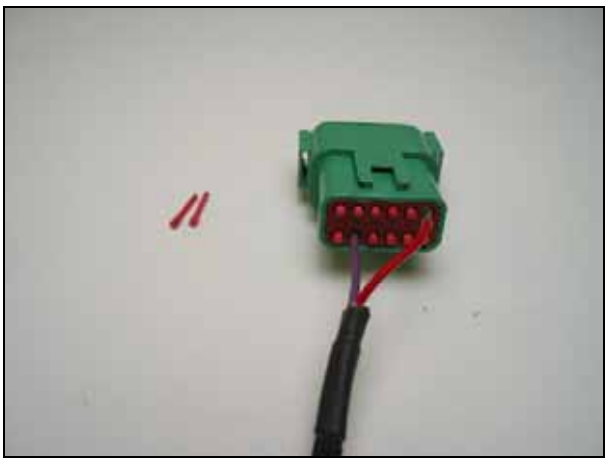


Foot switch only

Insert the DTM pins into cavity 2, cavity 7, and cavity 11, according to the labels on the wires.

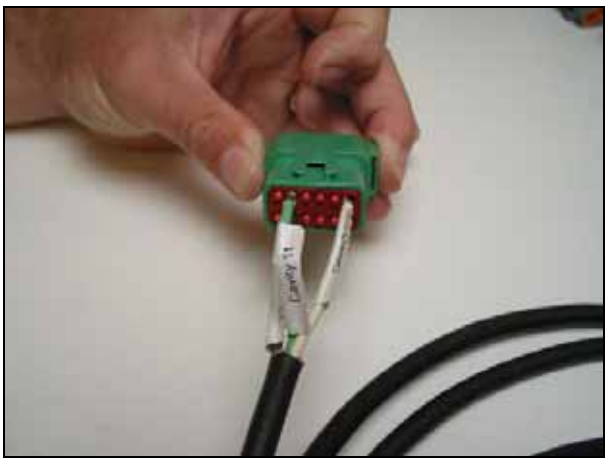

Step 5

Pull on the wires to seat them in place and then replace the wedge in the connector.

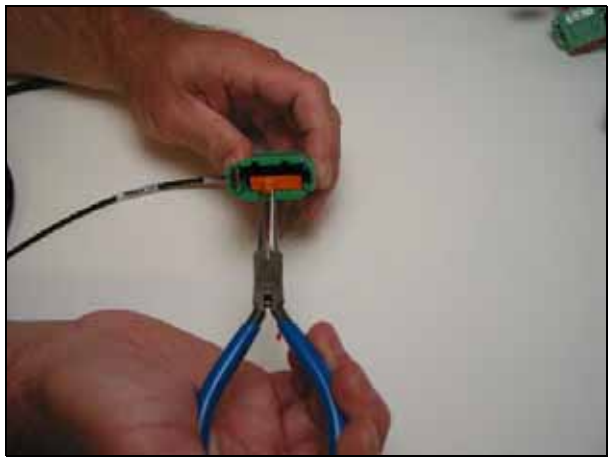

Step 6

Replace the receptacle on the P5 plug of the NavController II harness.

Step 7

Rocker switch only

Run the spade ends of the cable to a knockout location in the operator console.



Foot switch only


Run the cable to a clear location on the floor board. Use double-sided tape to secure the pedal. Route the cable under the floor mat.



Step 8

Rocker Switch Only

Connect the wires to the switch. Match the print on the switch body with the labels on the wires.

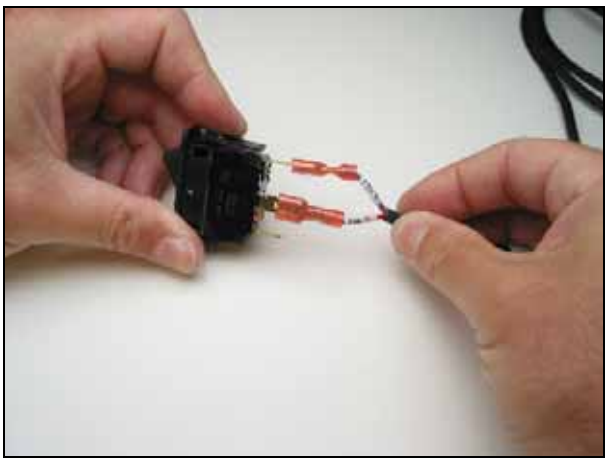

Step 9

Rocker Switch Only

Place the switch in the console.



Using the remote engage switch

To use NavController II to engage the system:

- Firmware versions 5.20 and earlier: Hold down the remote engage switch for longer than 0.5 seconds and less than 4 seconds.
- Firmware 5.21 and later: Hold the switch down for longer than 0.15 seconds and less than 4 seconds.

The system engages when you release the switch.

CHAPTER

8

Controller Installation

In this chapter:

- Installing the controller
- Controller connections

This chapter describes how to install the controller unit.




WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Installing the controller

Mount the NavController II on the left side of the cab, with the label facing to the right, and connectors pointing to the rear of the vehicle. Use the supplied mounting plate (P/N 54828) to provide a firm mounting surface for the controller.



Controller connections

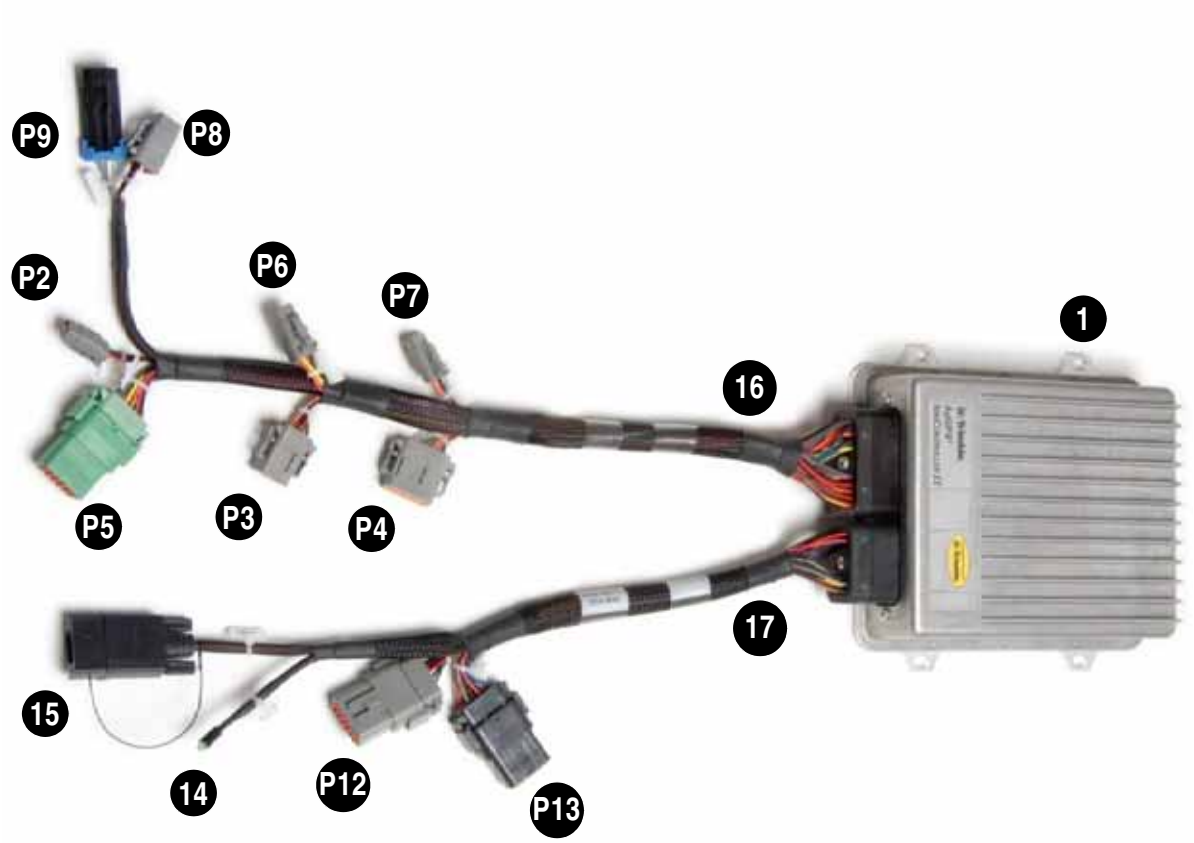


Item	Description
1	NavController II controller
P2	Power connector
P3	GNSS connector
P4	Display connector
P5	Vehicle sensors connector
P6	Steering sensor connector
P7	Manual override connector
P8	Hydraulic valve connector

Item	Description
P9	Sonalert connector
P12	Lightbar/spare connector
P13	Spare sensors connector
14	Status indicator
15	Laptop connector
16	Main harness
17	Auxiliary harness

Step 1

Connect the power cable connection to P-2, which is labeled “Power”. P-2 is located on the main wiring harness.


Note – *The power connection supplies power through the controller to all connected devices, including GNSS and displays.*

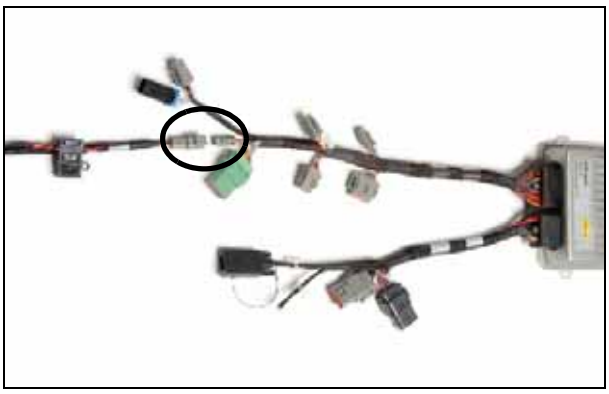

Step 2

Connect the GNSS cable connection to P-3, which is labeled “GPS”. P-3 is located on the main wiring harness.

Note – *If you are installing a CFX-750 or FmX display, plug the display in here.*

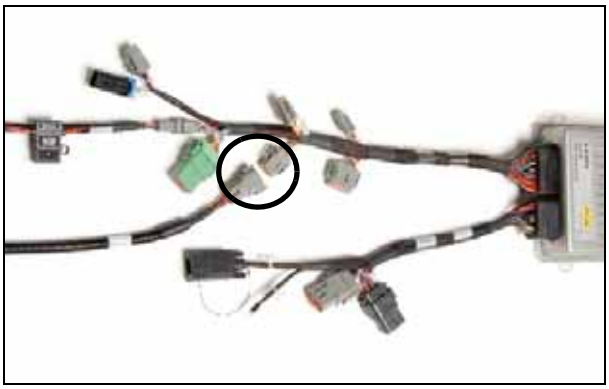


Step 3

Connect the primary display cable connection to P-4, which is labeled “Display”. P-4 is located on the main wiring harness.


Note – Do not *connect the cable to the connector labeled “Spare” on the auxiliary harness.*

Note – Do not *use this connection for CFX-750 or FmX display installations .*

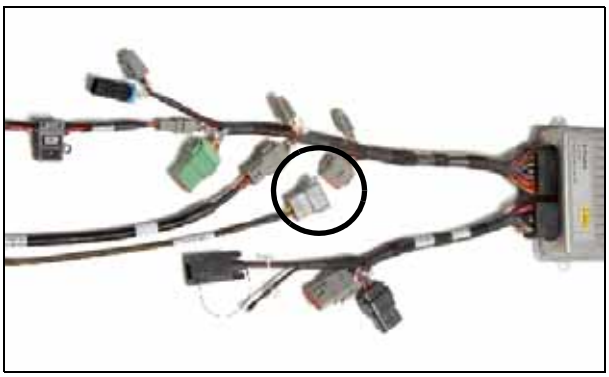


Step 4

Connect the steering sensor cable connection to P-6, which is labeled “Steering Sensor”. P-6 is located on the main wiring harness.

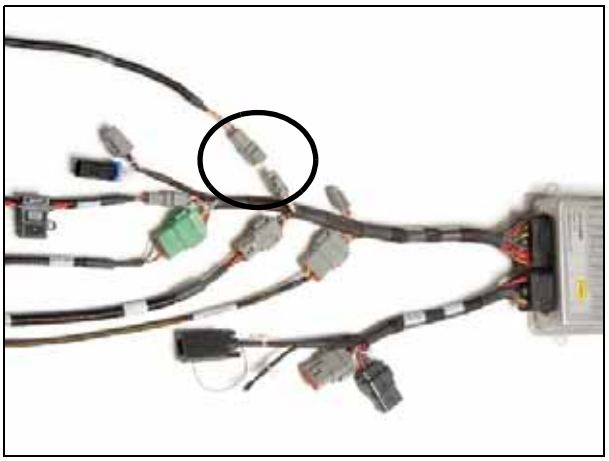


Step 5

Connect the hydraulic steering valve cable connection to P-8, which is labeled “Hydraulic Valve”. P-8 is located on the main wiring harness.

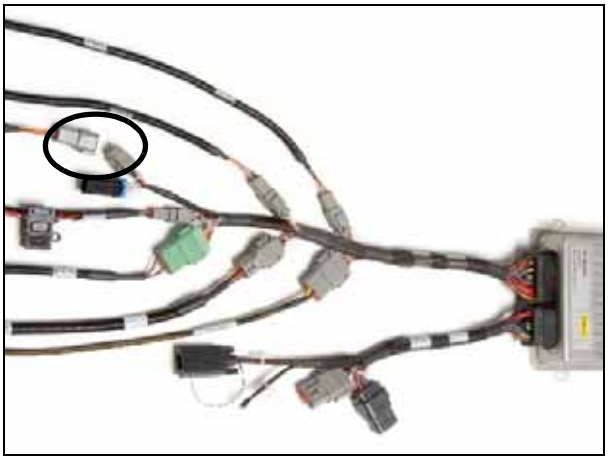


Step 6

Connect the Sonalert P-9 to the two pin Delphi connector on the main wiring harness. Route the cable so the Sonalert warning device is in a position that is audible to the operator.

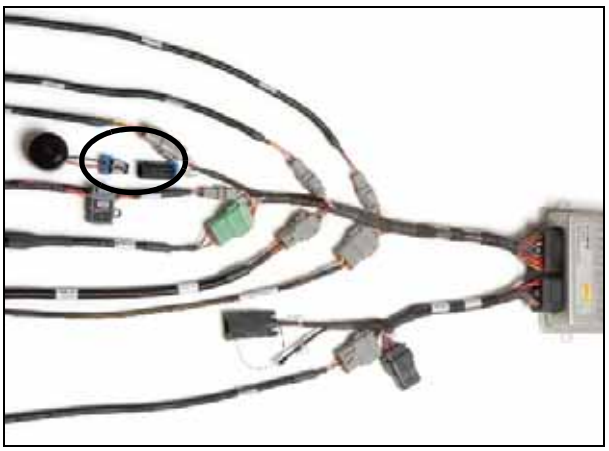

Step 7

Route the LED and laptop lead, which is located on the auxiliary wiring harness, to a location that allows the operator to determine the controller status. See controller LED status for status determination. Six flashes per second indicates a correctly functioning controller.

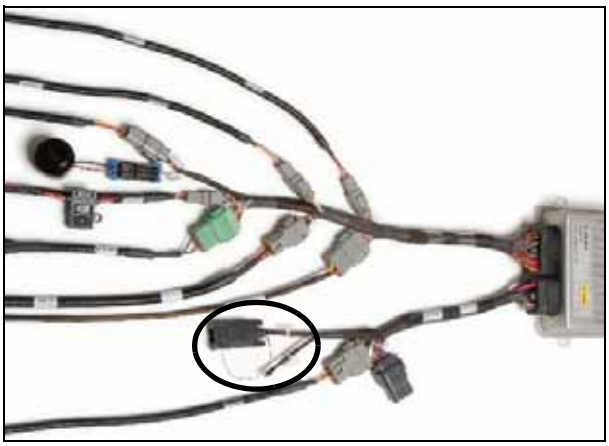

Step 8

Use the provided sleeving to secure the harness cables with tie wraps. Cover and route the cable bundle to avoid damage to connectors and strain on wire connections.

CHAPTER

9

Final Machine Check

In this chapter:

- Performing the final machine check

This chapter describes how to perform a final check of the vehicle.

Performing the final machine check

WARNING – To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

1. Connect the battery.
2. Start the machine and check for hydraulic leaks. Correct as needed.
3. Update the Trimble display and the Autopilot NavController II to the latest firmware from http://agpartners.trimble.com.

   You can use FlashLoader 200 software version 3.19 to update the Autopilot controller: Download it from http://agpartners.trimble.com.
4. Do the following:

   - Download the latest set of *External Vehicle Database* files from http://agpartners.trimble.com.

   You can use Autopilot Toolbox II software version 2.91 to load the proper external vehicle database file into the Autopilot controller. You can download the AutoPilot Toolbox II software from http://agpartners.trimble.com.
5. Calibrate the Autopilot system using the Trimble display or Autopilot Toolbox II software version 2.91. Depending on your machine type, the following items must be calibrated before you can use the Autopilot system:

   - NavController II mounting orientation
   - Manual override
   - Autosense mounting orientation
   - Valve deadzone
   - Autopilot P-gain
   - Antenna height/Antenna axle offset, and Roll offset