Autopilot

AUTOMATED STEERING SYSTEM

INSTALLATION INSTRUCTIONS

John Deere Sprayer ▶ R4023

Version 8.00
Revision A
October 2019
P/N 54037-25-E08

Trimble

Legal Notices

Agriculture Business Area

Trimble Agriculture Division
10368 Westmoor Drive
Westminster, CO 80021-2712
USA
www.trimble.com

Copyright and Trademarks

©1999–2019, Trimble Inc. All rights reserved.

Trimble, the Globe & Triangle logo, AgGPS, FmX, and OmniSTAR are trademarks of Trimble Inc., registered in the United States and in other countries. Autopilot, AutoSense, CFX-750, FM-750, FM-1000, GFX-750, and TMX-2050 are trademarks of Trimble Inc. Developed under a License of the European Union and the European Space Agency.

All other trademarks are the property of their respective owners.

Official Language

THE OFFICIAL LANGUAGE OF THESE TERMS AND CONDITIONS IS ENGLISH. IN THE EVENT OF A CONFLICT BETWEEN ENGLISH AND OTHER LANGUAGE VERSIONS, THE ENGLISH LANGUAGE SHALL CONTROL.

Release Notice

This is the October 2019 release (Revision A) of the *Autopilot Automated Steering System Installation Instructions*, part number 54037-25-E08. It applies to version 8.00 of the Autopilot automated steering system.

The following limited warranties give you specific legal rights. You may have others, which vary from state/jurisdiction to state/jurisdiction.

Product Limited Warranty

Trimble warrants that this Trimble product and its internal components (the "Product") shall be free from defects in materials and workmanship and will substantially conform to Trimble's applicable published specifications for the Product for a period of one (1) year, starting from the earlier of (i) the date of installation, or (ii) six (6) months from the date of product shipment from Trimble. This warranty applies only to the Product if installed by Trimble or a distributor authorized by Trimble to perform Product installation services.

Software Components and Enhancements

All Product software components (sometimes hereinafter also referred to as "Software") are licensed and not sold. Any Software accompanied by a separate End User License Agreement ("EULA") shall be governed by the terms, conditions, restrictions and limited warranty terms of such EULA notwithstanding the preceding paragraph. During the limited warranty period you will be entitled to receive, at no additional charge, such Fix Updates and Minor Updates to the Product software as Trimble may develop for general release, subject to the procedures for delivery to purchasers of Trimble products generally. If you have purchased the Product from an authorized Trimble distributor rather than from Trimble directly, Trimble may, at its option, forward the software Fix Update or Minor Update to the Trimble distributor for final distribution to you. Major Upgrades, new products, or substantially new software releases, as identified by Trimble are expressly excused from this enhancement process and limited warranty. Receipt of software updates shall not serve to extend the limited warranty period.

For purposes of this warranty the following definitions shall apply: (1) "Fix Update" means an error correction or other update created to fix a previous software version that does not substantially conform to its published specifications; (2) "Minor Update" occurs when enhancements are made to current features in a software program; and (3) "Major Upgrade" occurs when significant new features are added to software, or when a new product containing new features replaces the further development of a current product line. Trimble reserves the right to determine, in its sole discretion, what constitutes a significant new feature and Major Upgrade.

Warranty Remedies

Trimble's sole liability and your exclusive remedy under the warranties set forth above shall be, at Trimble's option, to repair or replace any Product that fails to confirm to such warranty ("Nonconforming Product"), and/or issue a cash refund up to the purchase price paid by you for any such Nonconforming Product, excluding costs of installation, upon your return of the Nonconforming Product to Trimble in accordance with Trimble's standard return material authorization process.

Such remedy may include reimbursement of the cost of repairs for damage to third-party equipment onto which the product is installed, if such damage is found to be directly cause by the Product as reasonably determine by Trimble following a root cause analysis. Where *Trimble* elects to replace a Product or parts, repair parts and replacement Products will be provided on an exchange basis and will be either new, equivalent to new, or reconditioned.

Warranty Exclusions and Disclaimer

These warranties shall be applied only in the event and to the extent that (i) the Products and Software are properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's relevant operator's manual and specifications, and; (ii) the Products and Software are not modified or misused. The preceding warranties shall not apply to, and Trimble shall not be responsible for defects or performance problems resulting from (i) the combination or utilization of the Product or Software with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Trimble; (ii) the operation of the Product or Software under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized, installation, modification, or use of the Product or Software; (iv) damage caused by accident, lightning or other electrical discharge, fresh or salt water immersion or spray; or (v) normal wear and tear on consumable parts (e.g., batteries). Trimble does not warrant or guarantee the results obtained through the use of the Product.

THE WARRANTIES ABOVE STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO PERFORMANCE OF THE PRODUCTS AND SOFTWARE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND BY EITHER TRIMBLE INC. OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCTS OR SOFTWARE. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

TRIMBLE INC. IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF GPS SATELLITES OR THE AVAILABILITY OF GPS SATELLITE SIGNALS.

Limitation of Liability

TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT OR SOFTWARE LICENSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANY

WAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS), REGARDLESS WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. NOTE: THE ABOVE LIMITED WARRANTY PROVISIONS MAY NOT APPLY TO PRODUCTS OR SOFTWARE PURCHASED IN THE EUROPEAN UNION. PLEASE CONTACT YOUR TRIMBLE DEALER FOR APPLICABLE WARRANTY INFORMATION.

Notices

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

Notice to Our European Union Customers

For product recycling instructions and more information, please go to: http://www.trimble.com/Corporate/Environmental_Compliance.aspx

Recycling in Europe: To recycle Trimble WEEE, Call +31 497 53 2430, and ask for the "WEEE Associate"

Or

Mail a request for recycling instructions to:

Trimble Europe BV
c/o Menlo Worldwide Logistics
Meerheide 45
5521 DZ Eersel, NL



Safety Information

Always follow the instructions that accompany a Warning or Caution. The information they provide is intended to minimize the risk of personal injury and/or damage to property. In particular, observe safety instructions that are presented in the following format:

⚠ **WARNING –** This alert warns of a potential hazard, which, if not avoided, can cause severe injury.

⚠ **CAUTION –** This alert warns of a hazard or unsafe practice which, if not avoided, can cause injury or damage.

NOTE – An absence of specific alerts does not mean that there are no safety risks involved.

Warnings

⚠ **WARNING –** When you are working on the vehicle's hydraulic systems, vehicle attachments that are suspended can drop. If you are working around the vehicle, you could suffer serious injury if an attachment dropped on you. To avoid this risk, lower all vehicle attachments to the ground before you begin work.

⚠ **WARNING –** If someone else attempts to drive the vehicle while you are working on or under it, you can suffer serious or fatal injuries. To avoid this possibility, install a lockout box on the battery terminal to prevent the battery from being reconnected, remove the key from the vehicle's ignition switch, and attach a "Do not operate" tag in the cab.

⚠ **WARNING –** Agricultural chemicals can pose serious health risks. If the vehicle has been used to apply agricultural chemicals, steam clean the vehicle to remove any chemical residue from the areas of the vehicle where you will be working.

⚠ **WARNING –** Vehicle cabs can be quite high in the air. To avoid potentially serious injury through falling from this height, always use the steps and handrails, and face the vehicle, when you enter or exit it.

Cautions

⚠ **CAUTION –** When the vehicle has been running, parts of the vehicle, including the engine and exhaust, can become extremely hot and can cause serious burns. To avoid burns, allow hot machine parts to cool before you begin working on them.

⚠ **CAUTION –** The system installation may bring you into contact with chemical substances, such as oil, which can cause poisoning. Wash your hands thoroughly after you finish working on the system.

⚠ **CAUTION –** Battery posts, terminals, and related accessories contain lead and lead compounds, which can cause serious illness. To avoid ingesting lead, wash your hands thoroughly after touching the battery.

⚠ **CAUTION –** Always wear protective equipment appropriate to the job conditions and the nature of the vehicle. This includes wearing protective glasses when you use pressurized air or water, and correct protective welder's clothing when welding. Avoid wearing loose clothing or jewelry that can catch on machine parts or tools.

⚠ **CAUTION –** Parts of the vehicle may be under pressure. To avoid injury from pressurized parts, relieve all pressure in oil, air, and water systems before you disconnect any lines, fittings, or related items. To avoid being sprayed by pressurized liquids, hold a rag over fill caps, breathers, or hose connections when you remove them. Do not use your bare hands to check for hydraulic leaks. Use a board or cardboard instead.


⚠ **CAUTION –** Do not direct pressurized water at:
- Electronic or electrical components or connectors
- Bearings
- Hydraulic seals
- Fuel injection pumps
- Any other sensitive parts or components



Set the hose pressure as low as practicable, and spray at a 45° to 90° angle. Keep the nozzle of the power washer away from the machine at the distance recommended by the manufacturer.

⚠ **CAUTION –** To prevent damage to the system, make sure that no wires or hoses interfere with or catch on any mechanical linkages, or contact any machine parts that get hot.

⚠ **CAUTION –** If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is *not* directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example.
Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

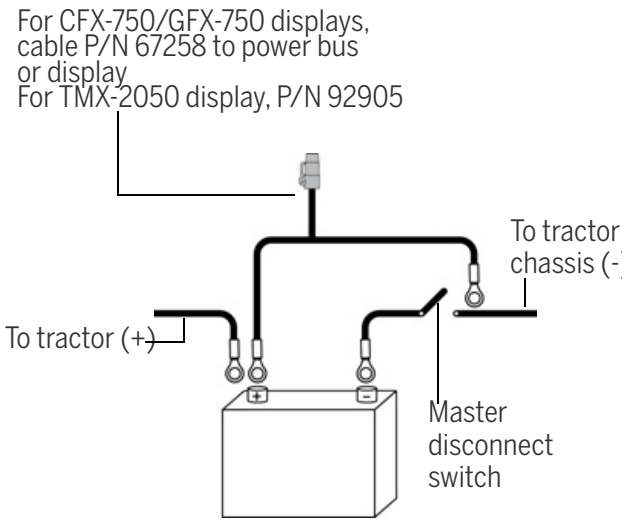

Legal Notices 2
Safety Information. 4
Warnings. 4
Cautions 4
1 Introduction. 9
Technical assistance. 9
Manual system upgrade to Autopilot. 10
Trimble displays 10
Required components 10
Antenna mounting kits 11
Accessory kits 11
Autopilot hardware organization: As shipped. 11
Preparing the vehicle for installation 12
2 AutoTrack Harness Component Connections 13
Installing the steering sensor adapter cable 17
3 IMD-900 Steering Device Installation 20
4 Antenna/Receiver Installation. 26
Possible mounting methods. 27
Attaching the plate with VHB adhesive 27
NAV-900 guidance receiver: Connecting an external radio (as required) 37
5 Display Installation 39
CFX-750 display: Installing the wiring harness 42
TMX-2050 display: Components 43
TMX-2050 display: Preparation 44
Installing the display and mount 44
TMX-2050 display: Installing the wiring harness 47
Spar mount method 51
VHB adhesive method 51
GFX-750/XCN-1050 display: Preparation 58
6 Power Harness Installation. 63
CFX-750 display: Components 64
CFX-750 and GFX-750 displays: Configuring the power bus options. 69
Display power button is used to turn on the Autopilot system 69
External switch is used to turn on the Autopilot system 69
Ignition is used to turn on the Autopilot system 71
TMX-2050 display: Components 72
TMX-2050 display: Installing the power harness 73
TMX-2050 display: Configuring the power options 75
Ignition sensing 75

7 Remote Engage Switch Installation 77
Remote engage switch components: Rocker switch 78
Remote engage switch components: Foot switch 79
Installing the Remote Engage push button (P/N 101250) 83
Using the remote engage switch 88
8 Controller Installation 89
Installing the controller 89
Controller connections 90
9 Final Machine Check 93

1

Introduction

- Technical assistance
- Manual system upgrade to Autopilot
- Required components
- Autopilot hardware organization: As shipped
- Preparing the vehicle for installation

This manual describes how to install the Trimble® Autopilot™ automated steering system.

Even if you have used other Global Navigation Satellite System (GNSS) such as the United States', Trimble recommends that you spend some time reading this manual to learn about the special features of this product. If you are not familiar with GNSS, visit the Trimble website (www.trimble.com) for an interactive look at Trimble and GNSS.

Technical assistance

If you have a problem and cannot find the information you need in the product documentation, contact Trimble technical support:

1. Log into http://agpartners.trimble.com.
2. Click the **Feedback** link at the right of the screen. A form appears.
3. Complete the form and then click **Submit Feedback.**

Manual system upgrade to Autopilot

Trimble displays

Retain
CFX-750™ display: P/N 94110-xx
Power cable CFX-750 display: P/N 77282
Antenna for display: P/N 60600-02 (DGPS) or 77038-00 (OmniSTAR®/RTK)
Antenna to receiver cable: P/N 50449
Basic cable (CFX-750 display): P/N 67258
TMX-2050™ display: P/N 96700-00
TM-200 Module: P/N 95060-00
TM-200 Module to display cable: P/N 93843
TM-200 Module power I/O cable: P/N 92676
TM-200 Module battery cable: P/N 92905
GFX-750™/XCN-1050: P/N 121000-XX
Power cable GFX-750/XCN-1050: P/N 110551
Base power cable: P/N 67258
NAV-900 guidance controller: P/N 108993-05
GFX-750 to NAV-900 Comms cable: P/N 110540

Required components

Kits required	Special tools
Platform kit: P/N 54037-25	Drill
TMX-2050/CFX -750 installations: P/N 64425-07	5/16'' drill bit
GFX-750 Installations: P/N 64425-08	2" hole saw
	8mm socket wrench
	30mm or 1 3/16 socket wrench

Antenna mounting kits

Kits required
Ag15 antenna mounting plate: P/N 62034
Bracket, GPS - V base plate indexing: P/N 62388-02
Optional spar mounts (must measure application for proper part number):
P/N 64898: Bracket, GPS Spar 16.5"– 28.5"
P/N 55349: Bracket, GPS Spar 27.5"– 37.5"
P/N 53676: Bracket, GPS Spar 36.5"– 46.5"
P/N 55348: Bracket, GPS Spar 45"– 55"
P/N 66774: Bracket, GPS Spar 54"– 64"
For quick release mounting of the NAV-900 to a Spar mount, use P/N 110308: Bracket, NAV-900, Spar Quick Release Adapter

Accessory kits

Accessory options
Remote engage switch assembly – standard Euro: P/N 57227-10
Remote engage switch assembly – full Euro: P/N 57227-20
Remote engage foot pedal: P/N 57259
Remote engage push button: P/N 101250

Autopilot hardware organization: As shipped

Hardware	Component	See...
Platform kit: P/N 54037-25	Steering control valve cable and lock out	Chapter 2
	Manual override cable	
	IMD-900 steering device and cabling	Chapter 3
	IMD-900 mounting bracket and hardware	
	Power switch	Chapter 6
	Bolt kit controller	Chapter 8
Common parts	Controller	Chapter 8
	Controller mounting bracket	Chapter 1
	Cable kit: • Main wiring harness • Power bus auxiliary wiring harness • Sonalert alarm	Chapter 8
GNSS receiver	GNSS receiver	Chapter 4
	GNSS antenna	
	GNSS receiver power/data cable	
	RTK radio, cable, and radio antenna	

Hardware	Component	See...
Display	CFX-750 display, GFX-750 display	Chapter 5
	TMX-2050 display	
	Display cable	
	Mounting bracket	
	CFX-750 display, GFX-750 display	
Roof bracket kit: P/N 62388-02	Roof brackets	Chapter 4
	Bolt kit, roof bracket	

Preparing the vehicle for installation

1. Park the vehicle on a hard, level surface. Block the front and rear wheels.
2. Align the steering straight ahead. On an articulated vehicle, install the articulation locks.
3. Remove all dirt and debris from the areas of the vehicle where the Autopilot system will be installed.
4. Open all kit boxes and check the contents of the box against the packing list/s. Lay all of the parts out on a clean workbench.

NOTE – The left and right sides of the vehicle are referenced while standing behind the unit, facing the normal direction of travel.

2

AutoTrack Harness Component Connections

- Valve connections
- Installing the steering sensor adapter cable

Valve connections

Step 1

Lift the cab's floor mat and remove the plastic cap on the circular cutout in the front right of the cab.



Remove the access panel located in the center of the floor. The 8 bolts can be removed with an 8 mm wrench.




Step 2

Locate the machine' steering valve by looking through the floor panel towards the front of machine.

Remove the existing harness from the steering valve.

Plug the J3 connector from cable P/N 57536 into the steering valve as shown.

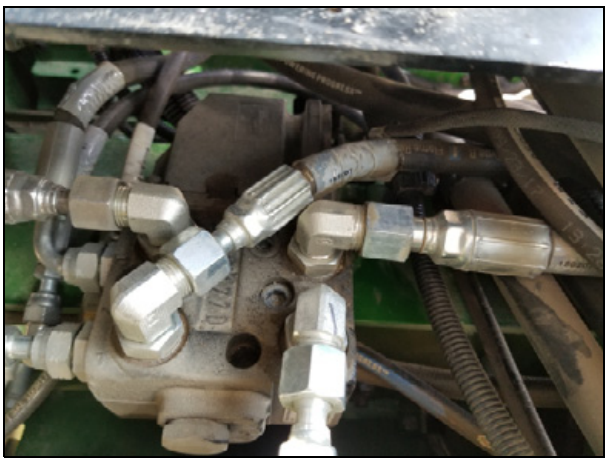



NOTE – It may be difficult to reach the steering valve by reaching through the floor alone. It may be easer to reach the valve connector from the outside *when the engine and exhaust are cool*.





Step 3

Route P8 on cable P/N 57536 into the cab through the circular access hole in the front right corner of the cab floor. Plug it into P8 on the NavController harness P/N 54601.



Installing the steering sensor adapter cable

Step 1

The connector for the steering shaft sensor is located inside the steering column. To gain access to this area, look under the steering column cover on the right side of the column.



Find the push fastener holding the electrical connectors as shown and then pull the connectors on the other side loose (you need to reach over the sheet metal to gain access to the connectors).



Step 2

Disconnect the connector pair as shown.




Step 3

Plug R1 and P1 from P/N 81349 cable into the machine harness as shown.



Step 4

Plug R5 and R13 on the steering sensor jumper cable (P/N 81349) into connectors P5 and P13 of the NavController harnesses as shown.

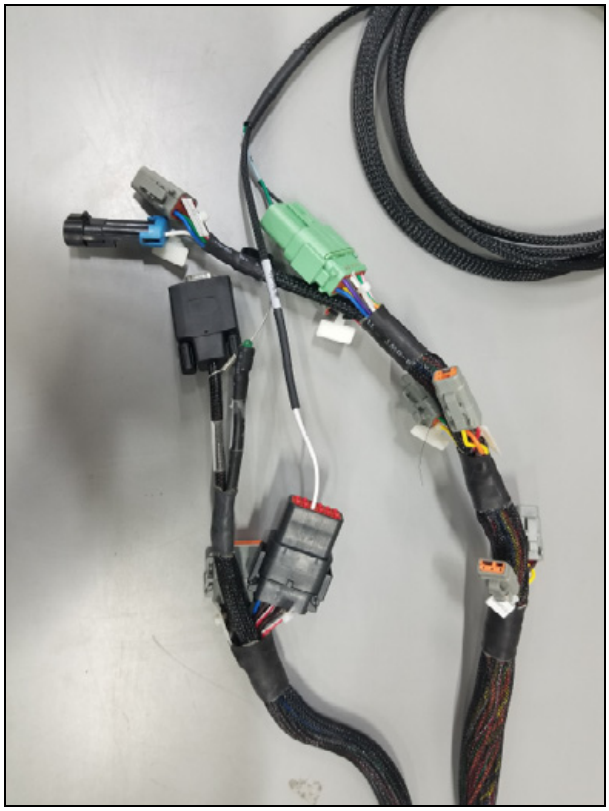

3

IMD-900 Steering Device Installation

- IMD-900 steering device components
- Installing the IMD-900 steering device

This chapter describes how to install the AutoSense™/IMD-900 steering device.


If the required mounting location is not accessible, chose a different place. To ensure proper function, the AutoSense device must be located where it is free of obstructions and can rotate with the wheels when they turn.

On articulated vehicles, mount the AutoSense device on the opposite side of the pivot point to the Autopilot controller.

Mount the device base down or base up so that it maintains a level orientation. Do not mount it on its side. An angle of up to 10° in any direction is acceptable.

To avoid stretching the cable, leave adequate length on the service loop.

IMD-900 steering device components

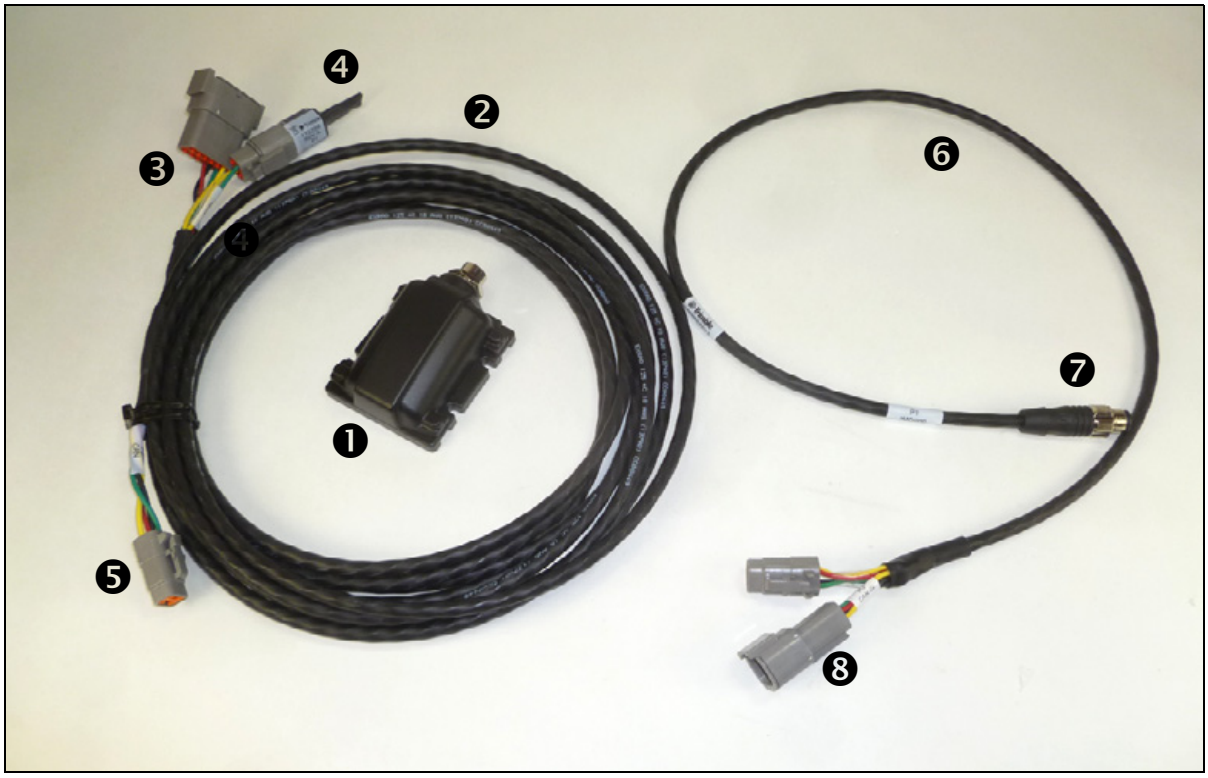

Item	Description
1	IMD-900 steering sensor (P/N 109256-00)
2	Cable (P/N 114675)
3	R1-CAN connector
4	CAN terminator (× 2)
5	P3 CAN connector
6	Cable (P/N 112759)
7	P1-IMD-900
8	P3/R3 CAN out/CAN in

Installing the IMD-900 steering device

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Locate the mounting location on the right steering pivot.



Step 2

Loosen the steering pivot bolt using a 30 mm or 1 3/16 inch wrench, enough to slide bracket P/N 58042 under the head of the bolt. *Do not completely remove the bolt*.



Step 3

Mount the IMD-900 steering sensor to the P/N 58042 sensor bracket as shown.



Step 4

Mount the AutoSense device with the connector pointing toward the back of the vehicle, and the label facing down.

Secure the device to the machine: tighten the pivot bolt and then connect the steering cable to the sensor. Plug P1 on cable P/N 112759 into the steering sensor.


Make sure the sensor will not interfere with anything while steering or changing the transport width.

Route the steering cable from the device along the existing hoses. Leave adequate length on the service loop to avoid stretching the cable.




Step 5

Plug the extra terminator provided with cable P/N 114675 into P3 on cable P/N 112759.

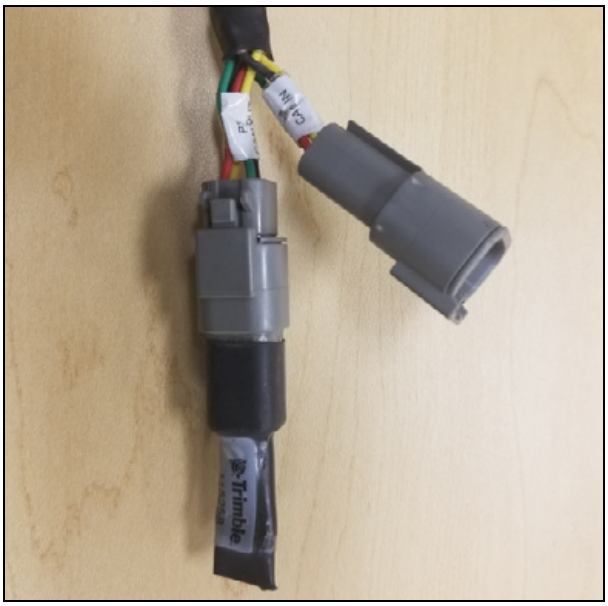


Step 6

Attach R3 on cable P/N 112759 to P3 on cable P/N 114675.

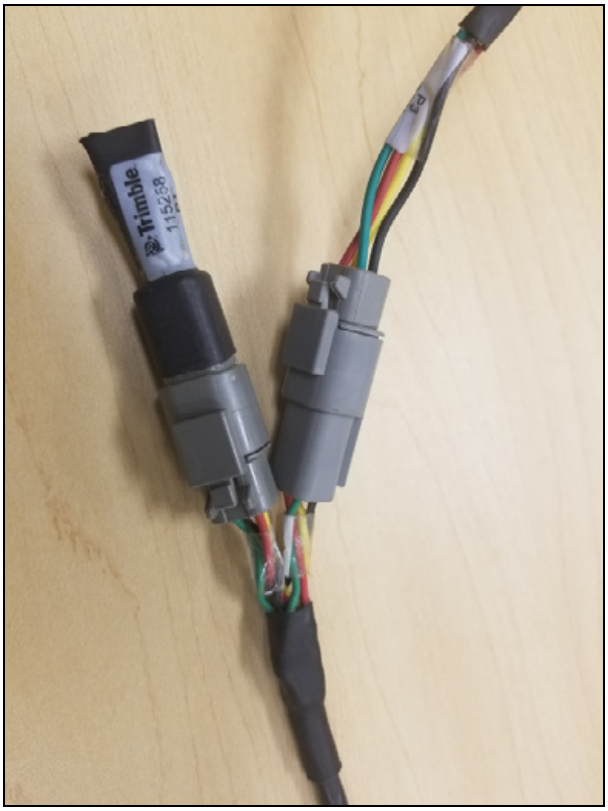

Step 7

Route R1 on cable P/N 114675 to P12 on NavController harness cable P/N 54602.

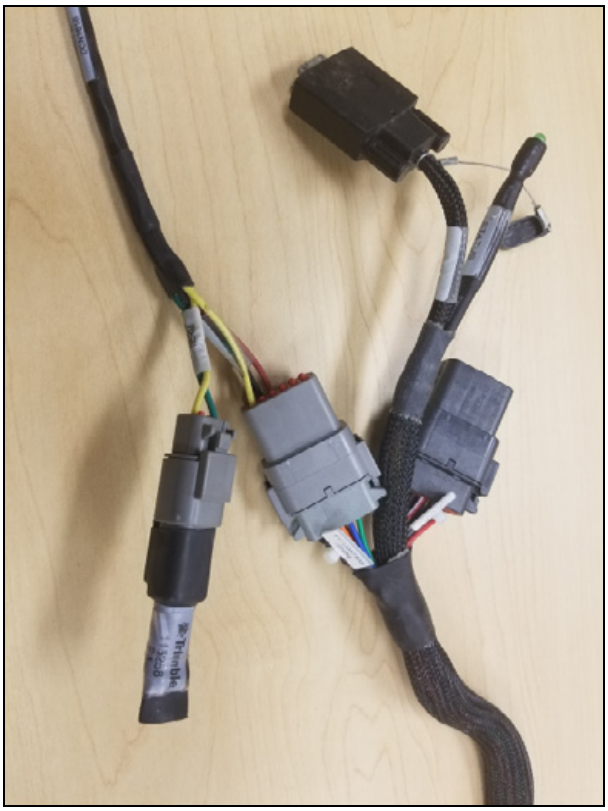

NOTE – Cable P/N 114675 can be routed through the circular hole in the cab floor used to route the steering valve cable.



4

Antenna/Receiver Installation

- Antenna and receiver installation options
- Attaching the plate with VHB adhesive
- Installing the NAV-900 guidance receiver using a spar mount
- Optional: Using the P/N 110308 for quick release mounting of the NAV-900 from the spar
- NAV-900 guidance receiver: Connecting the cables - both methods
- NAV-900 guidance receiver: Connecting an external radio (as required)

This chapter describes how to install the required receiver and antenna, and radio module (if used). To install the antenna for the display, see Chapter 5, Display Installation.

Antenna and receiver installation options

There are several options for mounting components (the antenna, radio module, or GNSS receiver) on the cab roof depending on the accuracy required and the antenna type:

- **VHB mount** – Attach a P/N 62034 plate or a V plate directly to the roof with VHB (Very High Bond) adhesive for magnetic mounting. See page 27.
- **Magnetic mounting** – Magnetic mounting for quick release is available for both VHB and spar type mounting.

Possible mounting methods

GNSS receiver	VHB mounted plate	VHB V mounted plate
CFX-750 display TM-200 module	✓	✓

NOTE – For WAAS, EGNOS, OmniSTAR VBS, Beacon, and DGPS applications, place either of the plates in a firm location using the VHB.

Attaching the plate with VHB adhesive

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Standard P/N 62034 plates are provided in most kits. You can use the VHB mounting method to attach either a P/N 62034 plate or a V plate.

- **RTK, OmniSTAR, DGPS, GLONASS applications** – To use this method for high accuracy, the surface must be rigid and free of "oil panning". For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a P/N 62034 plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust. Apply force to the roof to find a firm location.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


NOTE – The VHB strips are pre-applied to the P/N 62034 plate.

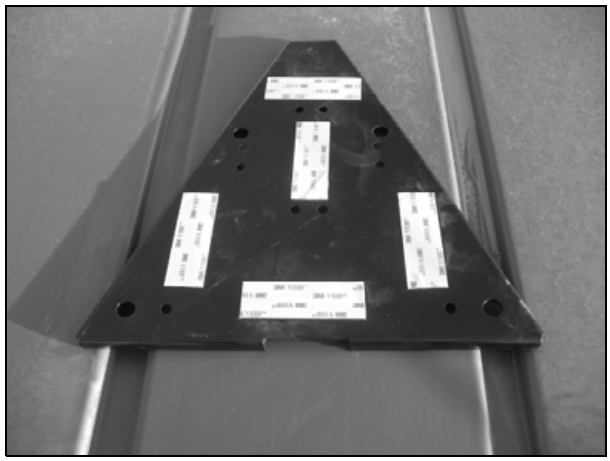

Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end of the plate points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

NOTE – The arrow points to the front of the vehicle.

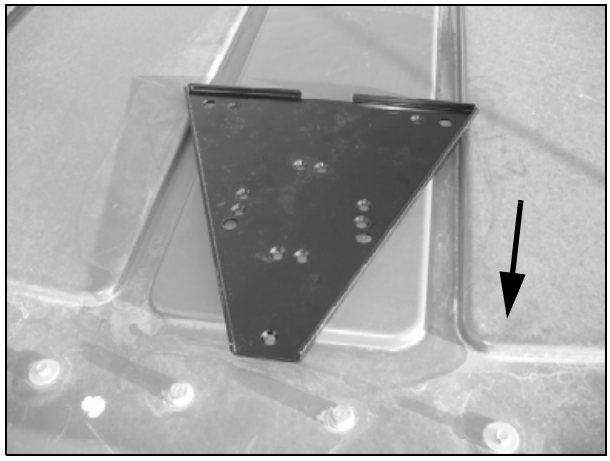

V plate



P/N 62034


Installing the NAV-900 guidance receiver using a spar mount

For vehicles that do not have factory mounting methods or the factory mounting method is already in use, spar mounts are available to span between rigid bolts on the roof.

Lengths available are:

- P/N 64898: 16.5" – 28.5"
- P/N 55349: 27.5" – 37.5"
- P/N 53676: 36.5" – 46.5"
- P/N 55348: 45" – 55"
- P/N 66774: 54" – 64"

The guidance controller plate has a four-bolt pattern that directly attaches to the spar mounts:

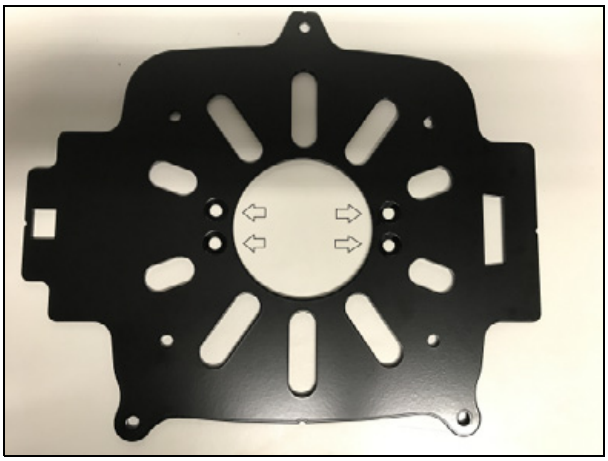


Step 1

Remove the spar from the box and lay out the hardware.




Step 2

Align the four holes on the base mounting plate with the four holes in the spar. Install the supplied ¼-20 × ½" countersunk bolts and tighten appropriately.

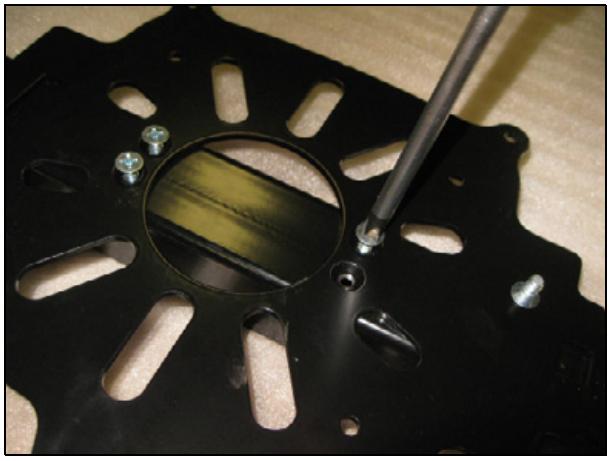

Step 3 .

Lay the guidance controller on its top.

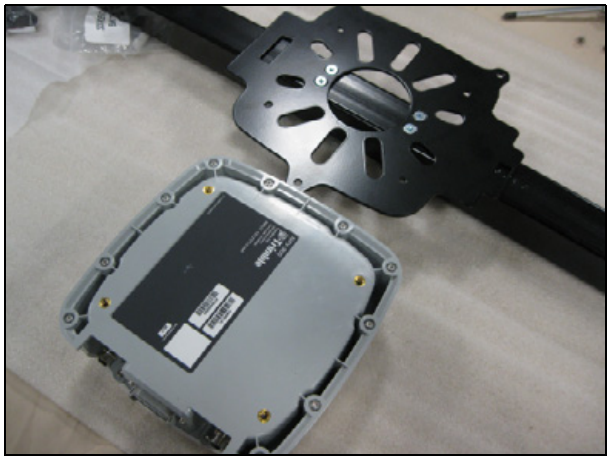

Step 4

Lay the mounting plate with spar attached over on top. Attach the plate to the guidance controller with the four 6 mm bolts and lock washers. Tighten the bolts. Take care not to over-tighten the bolts as damage may result.







Step 5

Loosen and remove the large bolts on the cab that are to be used to fasten down the spar.



Step 6

Place the supplied spacer on the cab mounting point. The thickness of the spacer will vary by kit.



Step 7

Locate the provided longer bolts to be use for securing the spar. Put both the original washer and the larger provided washer on the bolt.



Step 8

Place the spar on the space and insert the bolt.



Step 9

Insert the bolt on the other side of the cab. Center the spar on the cab using a measuring tape. Then tighten the bolts.






Optional: Using the P/N 110308 for quick release mounting of the NAV-900 from the spar

Step 1

Using the 4 bolts in the GFX-750 display kit, mount the Quick release bracket to the spar.

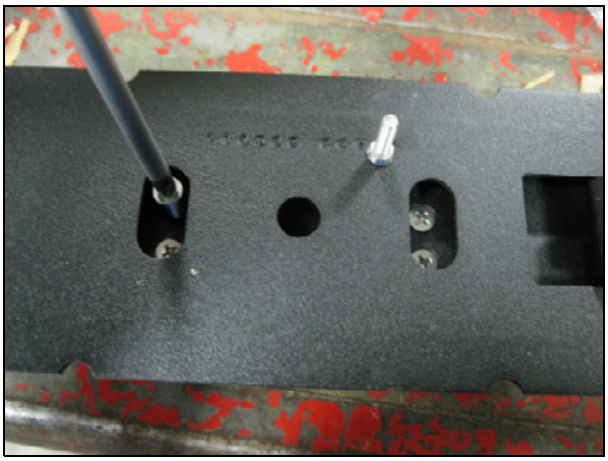

Step 2

Attach the NAV-900 base plate to the NAV-900 controller.

Step 3

Slip the slot of the base plate over the tang on the bracket and then use the latch to secure the receiver.





NAV-900 guidance receiver: Connecting the cables - both methods

Step 1


Plug the P1 connector on cable P/N 110550 into the back of the NAV-900 guidance receiver.






Step 2

Connect P2 of the P/N 110540 cable to the 4-pin M12 connector on the left side of the NAV-900 controller.

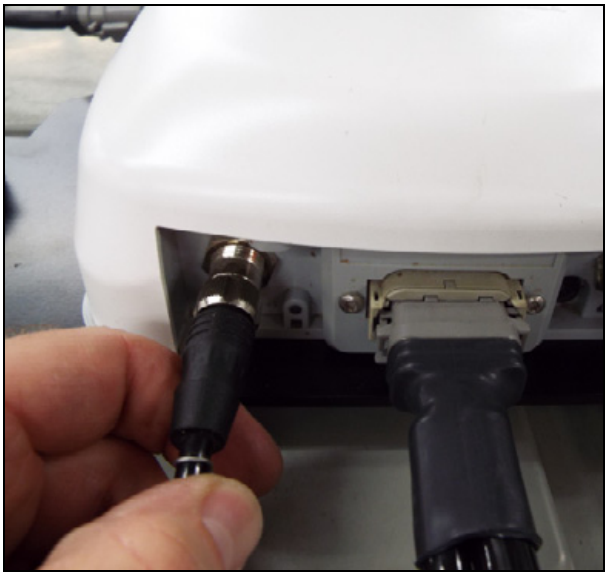


Step 3


Connect the Sonalert to the cable P/N 110550.

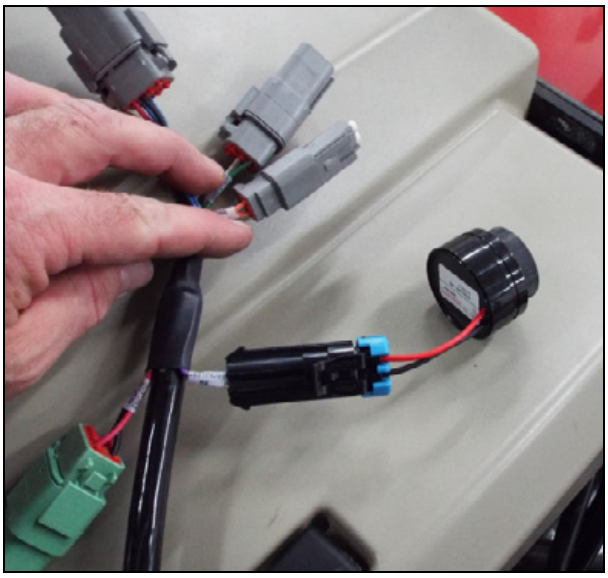

Connect the NMEA output and modem power as needed.

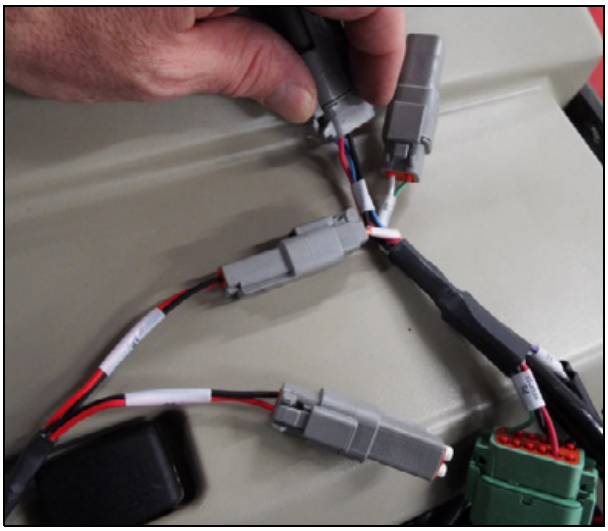


NAV-900 guidance receiver: Connecting an external radio (as required)

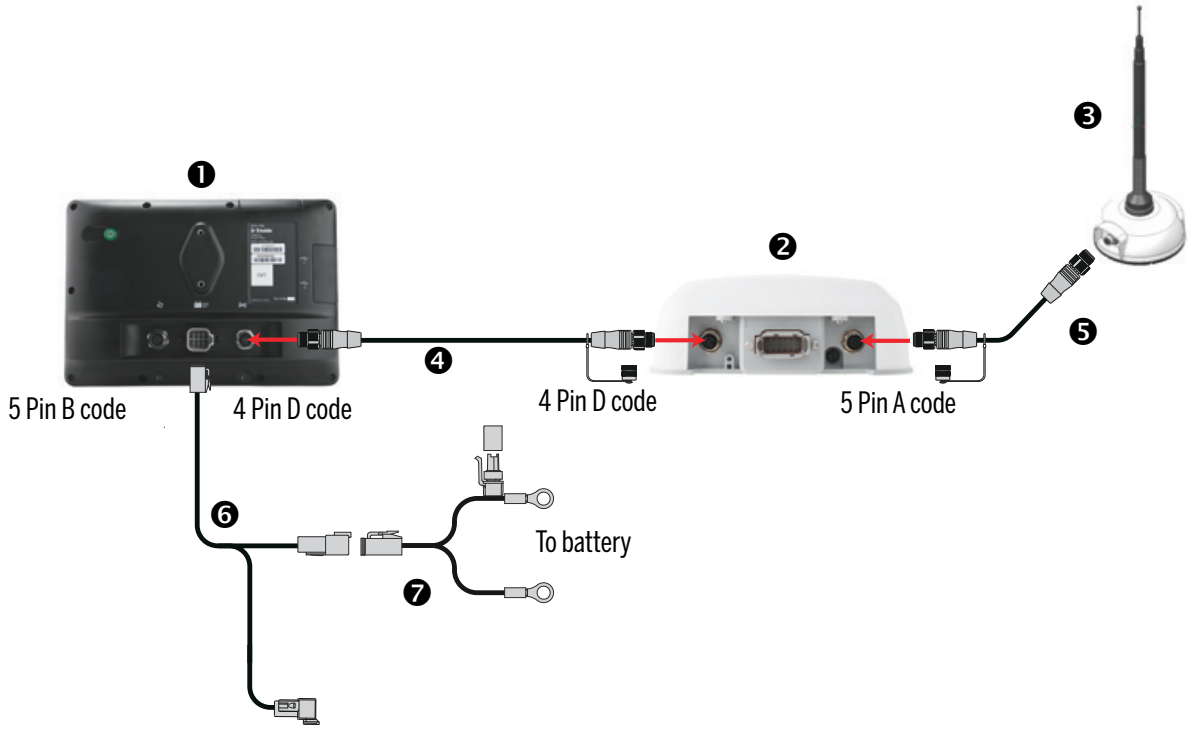

Item	Description	Trimble P/N
1	GFX-750/XCN-1050 display, with PIQ App	121000-XX
2	NAV-900 Guidance Controller	108993-05
3	Ag-820 radio kit, 430-450 MHz Ag-820 radio kit, 450-470 MHz Ag-820 radio kit, 900 MHz	123500-44 123500-46 123500-90
4	Cable Assy, NAV-900 to in-cab RTK Radio, DTM06, 4.5 m	110540
5	Cable Assy, NAV-900 to Ag-820	113295
6	Cable Assy, GFX-750/XCN-1050, Power to display, CAN, 2.5 m	110551
7	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Basic Power, 4 m	67258

Step 1

Connect the radio interface cable (P/N 113295) to the right 5-pin M12 connector on the NAV-900 controller.

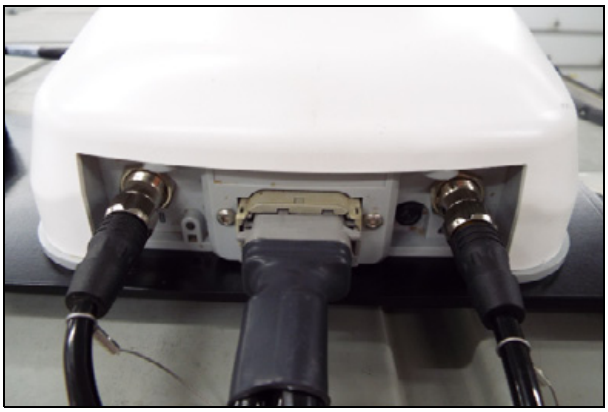

Step 2

Attach the radio to the roof or bracket in a secure fashion.




5

Display Installation

- CFX-750 display: Components
- CFX-750 display: Preparation
- CFX-750 display: Installation
- CFX-750 display: Installing the wiring harness
- TMX-2050 display: Components
- TMX-2050 display: Preparation
- TMX-2050 display: Installing the wiring harness
- TMX-2050 display: AG-25 GNSS antenna
- CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate
- CFX-750 and TMX-2050 displays: Installing the RTK radio antenna
- GFX-750/XCN-1050 display: Components
- GFX-750/XCN-1050 display: Preparation
- GFX-750/XCN-1050 display: Installation
- GFX-750/XCN-1050 display: Installing the wiring harness

CFX-750 display: Components

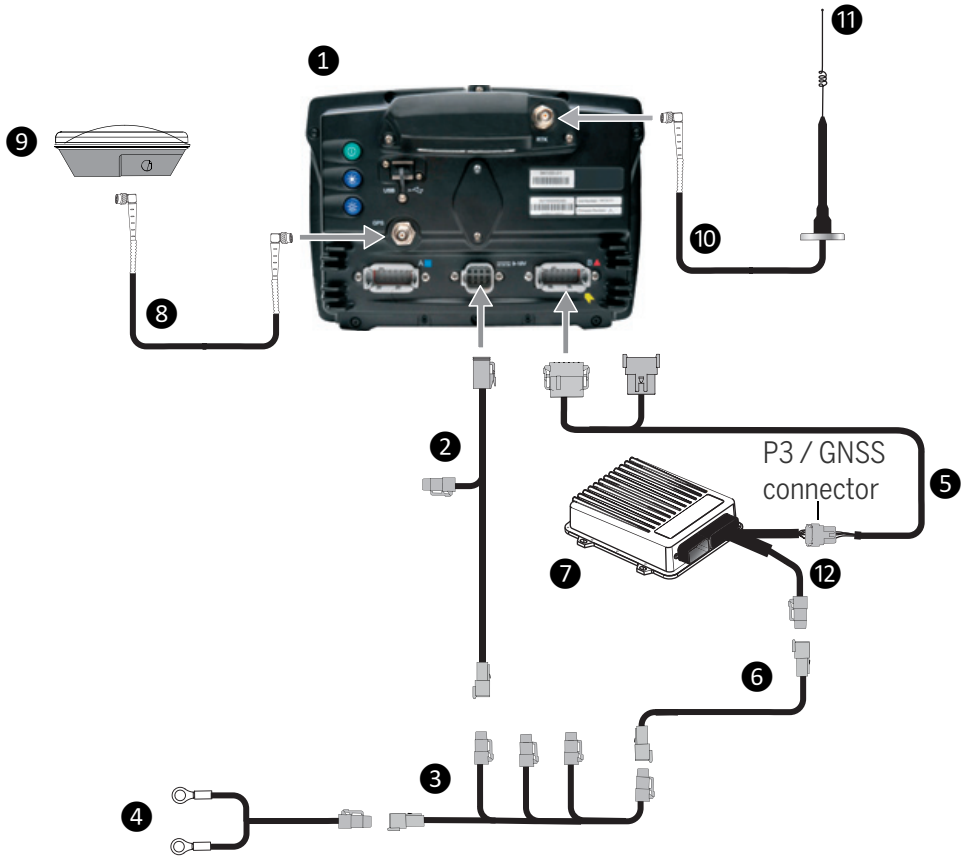

⚠ **CAUTION –** Connecting the Port Replicator on the CFX-750 to NavController cable ❺ to the P4 or P12 connector of the NavController harness ⓬ will result in damage to the display, and will void the warranty.

Item	Description	Trimble part number
1	CFX-750 display **NOTE –** RTK password required.	93100-02
2	CFX-750 power cable	66694
3	CFX-750 power cable with relay and switch (power bus)	67259
4	Basic power cable	67258
5	CFX-750 to NavController cable with port replicator	75741
6	2 pin DTM to 2 pin DT power adaptor	67095
7	NavController III	64425-07
8	8 m GNSS TNC/TNC RT angle cable	50449
9	AG25 GNSS antenna	77038-00
10	NMO to TNC 20ft antenna cable and base	72122
11	900 MHz radio antenna kit	22882-10
12	Main NavController cable	54601

CFX-750 display: Preparation

Step 1

Locate the CFX-750 display, the RAM mount, and the RAM mount clamp.



Step 2

Use the provided metric hardware to attach the RAM mount to the rear of the display.



Step 3

Attach the RAM mount to the rear of the display.



CFX-750 display: Installation

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1


Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the bar mount to the rail.

Attach the free end of the RAM mount to the bar mount and then tighten the clamp on the RAM mount so that the display is secure.

Step 2

Connect the cable to the B port of the CFX-750 display.

To connect power to the CFX-750 display, see Chapter 8, Controller Installation.

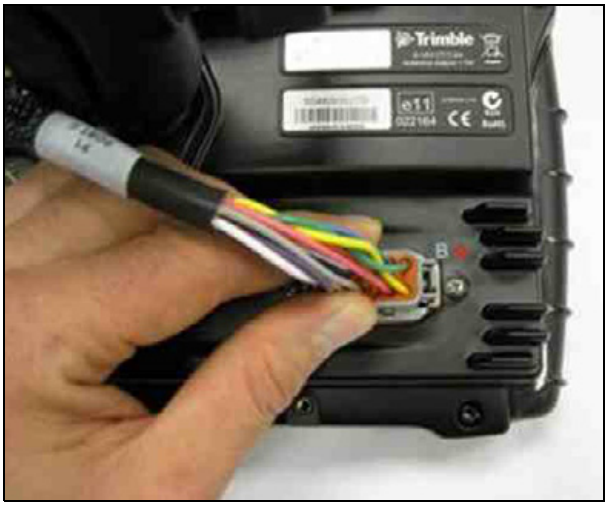

CFX-750 display: Installing the wiring harness

Step 1

Locate the cable that connects the CFX-750 display to the NavController.


Step 2

Connect the cable to the P3 connector on the NavController main harness and then route the cable from the NavController to the mounting location on the CFX-750 display.



TMX-2050 display: Components

This graphic shows how to connect the TM-200 Module and the Autopilot system for after-market installations.

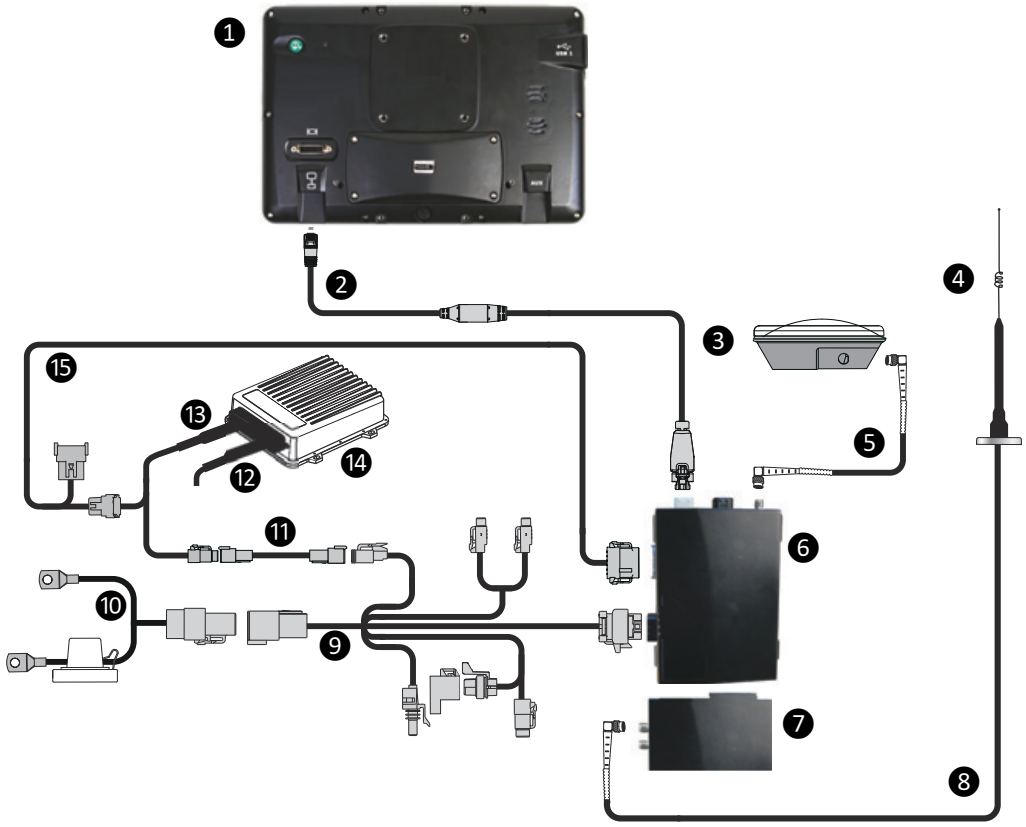

Item	Description	Trimble part number
1	TMX-2050 display	96700-00
2	TM-200 Module to display cable	93843
3	AG-25 GNSS antenna	77038-00
4	900 MHz radio antenna kit	22882-10
5	8 m GNSS TNC/TNC RT angle cable	50449
6	TM-200 Module	95060-00
7	AG-815 radio	
8	NMO-to-TNC 20 ft antenna cable and base	72122
9	TM-200 Module power and I/O cable	92676
10	Cable, battery	92905
11	2-pin DTM to 2-pin DT power adapter cable	67095
12	Cable, NavController diagnostic	54602
13	Main NavController cable	54601
14	NavController	55563-00 55566-00
15	TM-200 Module to NavController cable with port replicator	75741

TMX-2050 display: Preparation

The display mount attaches to a rail in the cab of the vehicle. The TMX-2050 display connects to the display mount.

The TM-200 Module connects to the display with a single cable.

Additional components to install depend on your connection and correction services, and the features you are using.

⚠ **CAUTION –** Make sure the vehicle power is off when you are connecting system components.

Installing the display and mount

Use the mounting hardware supplied in the display kit to mount the display in the vehicle cab.

⚠ **CAUTION –** Make sure the vehicle power is off when you are connecting system components.

Before completing installation steps, select a position in the cab where the bar mount (4) can be attached to a rail. Hold the display in the selected location and make sure that it:

- Is easy to see, but does not block the driver's view.
- Is within the driver's reach so that the USB drive is easy to remove and replace.
- Does not interfere with the driver getting in or out of the cab, or any other activities.

.

Item	Description
1	Mounting plate
2	Zirkona mount
3	Tightening arm
4	Bar mount



Step 1

Locate the TMX-2050 display and the Zircona mount and mounting hardware.



Step 2

Use the provided hardware to attach the Zircona mount to the display as shown





Step 3

Decide where you will mount the display in the vehicle cab and then use the provided bolts to attach the rail mount of the Zircona display mount to the rail of the vehicle.



Step 4

The Zircona mount has a tightening arm 3. Loosen the arm to let the display move on the mount.

Step 5

Adjust the TMX-2050 display until it is positioned where you want it.

Turn the tightening arm clockwise to tighten the Zircona mount and lock the display in the desired position.

Step 6

Connect the display cable to the display.



Step 7

Route the other end of the display cable to the TM-200 Module and then connect it to the TM-200 Module.



TMX-2050 display: Installing the wiring harness

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the P5 and P2 connectors on the harness, P/N 106111, to the TM-200 Module.

Step 2

On the TM-200 Module locate the display connection point.




Step 3

Connect the display cable P/N 93843 to the TM-200 Module.



Step 4

Route the cable between the TMX-2050 display and the TM-200 Module.

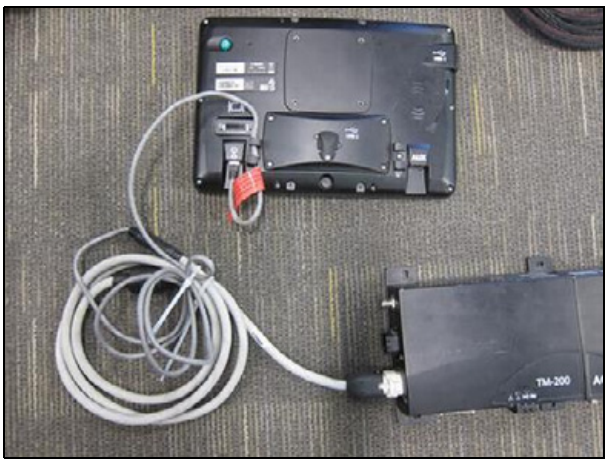


Step 5

Locate the Port labeled **A** on the TM-200 Module and then connect NavController connection cable, P/N 75741.




Step 6

Route the other end of the P/N 75741 cable to the plug on the P/N 54601 harness labeled **GPS**.

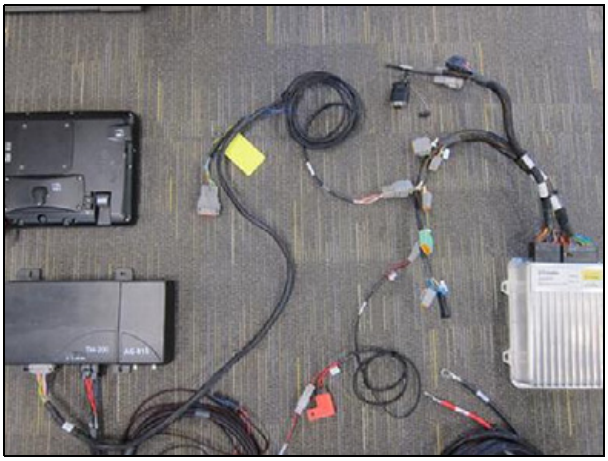

Step 7


Connect the cable to the P3 connector on the NavController main harness.

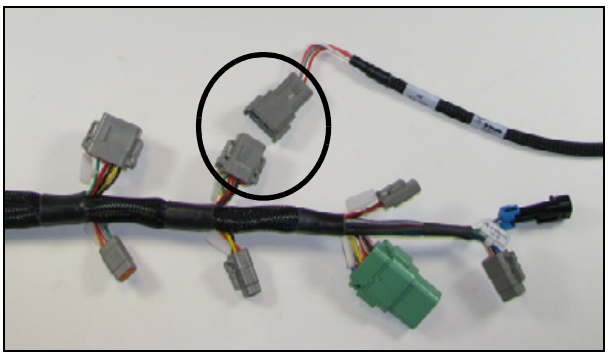

TMX-2050 display: AG-25 GNSS antenna

The AG-25 GNSS antenna is required for all correction services. It enables the GNSS receiver in the TM-200 Module to receive GPS / GNSS corrections. The antenna connects to the antenna connector on the TM-200 Module

⚠ **CAUTION –** Wireless cellular radio and GNSS signals can interfere with each other. For best performance, mount antennas at least 1 meter away from each other.

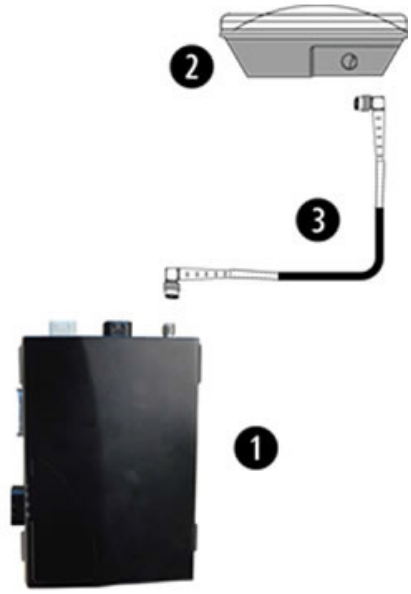

Item	Description
1	TM-200 Module
2	AG-25 GNSS antenna
3	AG-25 antenna to TM-200 Module cable

The AG-25 GNSS antenna has integrated magnets for easy installation. To attach the antenna to a non-metal surface, use the mounting plate.

NOTE – If you are using the AG-25 GNSS antenna with a steering system, refer to the installation instructions for the steering system to determine the correct location for mounting the antenna.

CFX-750 and TMX-2050 displays: Installing the GNSS antenna and plate

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

NOTE – The V plate antenna bracket is available on the Autopilot price list. See Antenna mounting kits, page 11.

Use one of the following methods:

- Spar mount
- VHB adhesive

Spar mount method

Trimble recommends that you use this method for RTK and OmniSTAR operations. For more information, see Antenna and receiver installation options, page 27.

Use a ⅝" bolt to attach the AG25 antenna to the spar, as shown.



Measure the length between the bolts on the roof of the vehicle and order the appropriate spar:

- P/N 64898: 16.5” – 28.5”
- P/N 55349: 27.5” – 37.5”
- P/N 53676: 36.5” – 46.5”
- P/N 55348: 45” – 55”
- P/N 66774: 54” – 64”

NOTE – For quick release mounting of the NAV-900 to a Spar mount, use P/N 110308: Bracket, NAV-900, Spar Quick Release Adapter.

VHB adhesive method

Standard 4" x 6" plates are provided in most kits. You can use Very High Bond (VHB) to attach either a 4" x 6" plate or a V plate.

- **GLONASS, RTK, OmniSTAR, DGPS applications** – To use this method for high accuracy, the surface must be rigid and free of “oil panning”. For RTK or OmniSTAR HP corrections, the spar method is recommended. The V plate provides repeatable positioning of the antenna.
- **WAAS, EGNOS, OmniSTAR VBS, Beacon applications** – Use a 4" x 6" plate for simplified installation in applications where high accuracy is not critical.

Step 1

Clean the antenna location on the roof of the cab with a light solvent to remove oil and dust.




Step 2

V plate only

Remove the backing from one side of the VHB strips provided and then apply the strips to the plate.


NOTE – The VHB strips are pre-applied to the 4" x 6" plate.

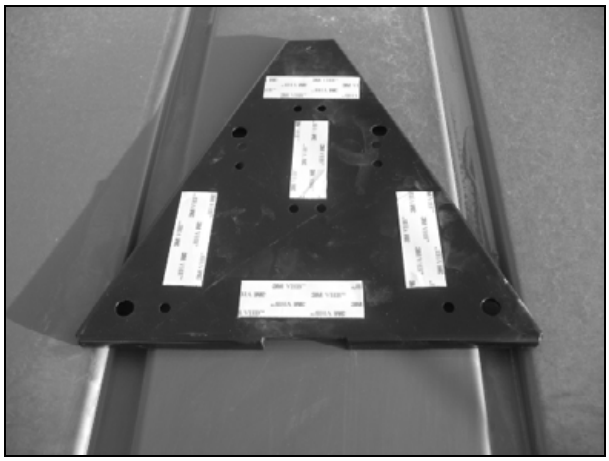


Step 3

Remove the backing from the other side of the VHB strips and then apply the plate to the cab roof. The narrow end points forward. Ensure that the VHB strips make even contact with the surface. Apply pressure and then leave for approximately 30 minutes to adhere.

NOTE – The arrow in this figure points to the front of the vehicle.

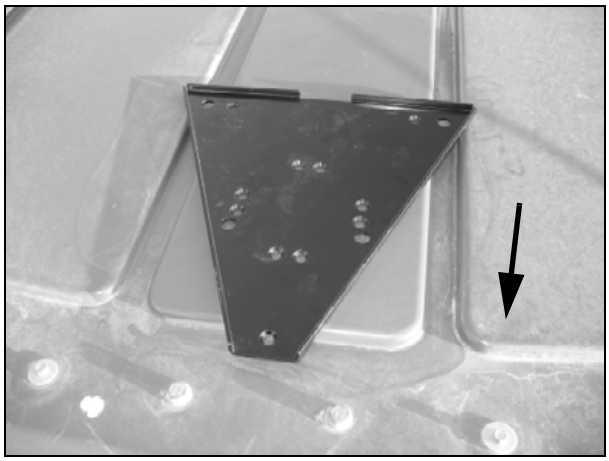


V plate

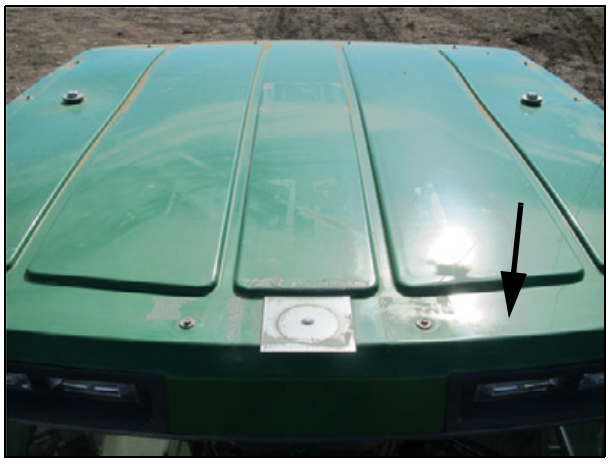

4" x 6" plate

Step 4

If the antenna has magnets built in, omit this step.

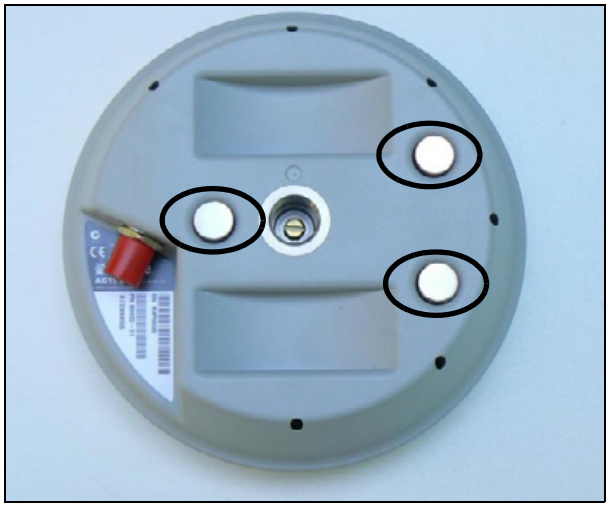

Otherwise, attach the large magnet with a ⅝" stud to the GNSS antenna.



Step 5

GLONASS, RTK, OmniSTAR, DGPS, applications

For repeatable positioning, place the antenna against the lip at the narrow end of the V plate.



WAAS, EGNOS, VBS, Beacon applications

Attach the antenna to the center of the 4" x 6" plate.



Step 6

Both models

Attach the antenna/receiver cable to the antenna and then route the cable into the cab through the rubber grommet at the base of the rear window. Secure the cable along the way.



CFX-750 and TMX-2050 displays: Installing the RTK radio antenna

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the radio antenna to the magnetic antenna base.



Step 2

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the 4" x 6" plate with the VHB provided to relocate the antenna.



Step 3

Attach the magnetic radio antenna base to the rear of the V plate on the roof. If the cable does not reach the V plate, use the P/N 62034 plate with the VHB provided to relocate the antenna.


Step 4

Route cable from the vehicle roof into the cab, and connect the radio cable to the display.



GFX-750/XCN-1050 display: Components

This graphic shows the Autopilot system using NAV-900 as an external guidance device.

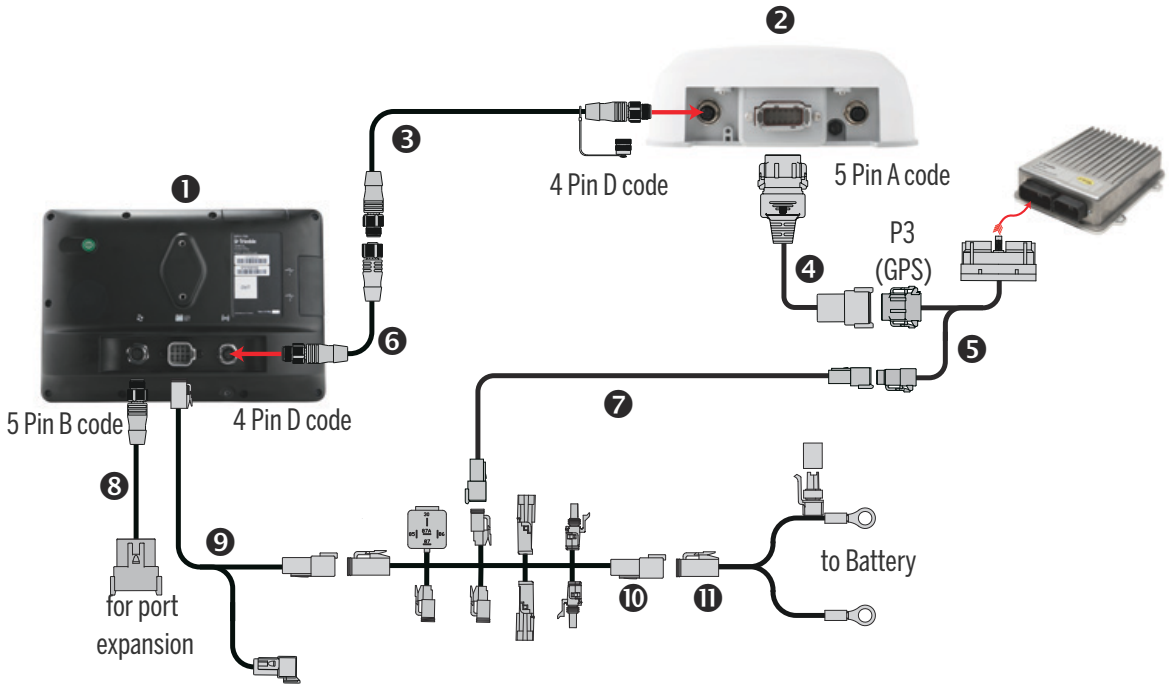

Item	Description	Trimble part number
1	GFX-750/XCN-1050 display, with PIQ App	121000-XX
2	NAV-900 Guidance controller	108993-05
3	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR), 5 m	110540
4	Cable Assy, NAV-900 to Nav II/III, AutoPilot™	110547
5	Cable, NavController II/III, Main	54601
6	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR) Extension, 2.5 m. Optional extension for large vehicles	112082
7	Cable Assy, 2 PIN DTM to 2 PIN DT Power Adapter	67095
8	Cable Assy, GFX-750/XCN-1050, Expansion Port Basic, RS-232, Dig I/O, 2.5 m	110545
9	Cable Assy, GFX-750/XCN-1050, Power to display, CAN, 2.5 m	110551
10	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Power with Relay and Switch (Acc)	67259
11	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Basic Power, 4 m	67258

GFX-750/XCN-1050 display: Preparation

The GFX-750/XCN-1050 display utilizes the RAM mount system.



Attach the diamond-based ram mount to the back of the display using the provided fasteners.



GFX-750/XCN-1050 display: Installation

Step 1

Use the supplied V bolts or alternate (non-supplied) hardware to affix the RAM base mount to the desired location in the cab. Ideally this position should be readily viewable and within easy reach of the operator.



Step 2

Use the supplied RAM clamp to connect the RAM base mount to the RAM ball attached to the display.



Step 3

Position the display as desired and then tighten the clamp.




GFX-750/XCN-1050 display: Installing the wiring harness

The GFX-750 display requires a nominal 12 volt power source. The P/N 67258 cable has ring terminal leads for connecting to a battery or other cable mount point.

⚠ **WARNING –** If the machine has a master electrical disconnect, ensure that the display/receiver will be disconnected from the battery when the master disconnect is used. Failure to do so may result in hardware damage and void warranty. Additionally, it is suggested to utilize power terminals located within the cab of the vehicle that ground in the same location as the cab components to avoid ground shifts between the display and any vehicle ECUs.

Step 1

Connect the other 4-pin Deutsch connector of cable P/N 110551 to the P/N 67258 base power cable.

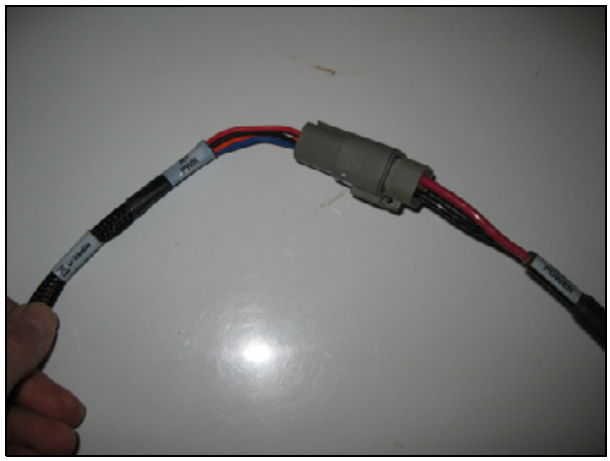

Step 2

Connect the 6-pin DT power/CAN cable P/N 110551 to the middle port of the display.



Step 3

Connect the 4-pin M12 connector to the 4-pin receiver connector. Note the Keying and number of pins.






6

Power Harness Installation

- CFX-750 display: Components
- GFX-750/XCN-1050 display: Components
- CFX-750 and GFX-750 displays: Installing the power harness
- CFX-750 and GFX-750 displays: Configuring the power bus options
- TMX-2050 display: Components
- TMX-2050 display: Installing the power harness
- TMX-2050 display: Configuring the power options

CFX-750 display: Components

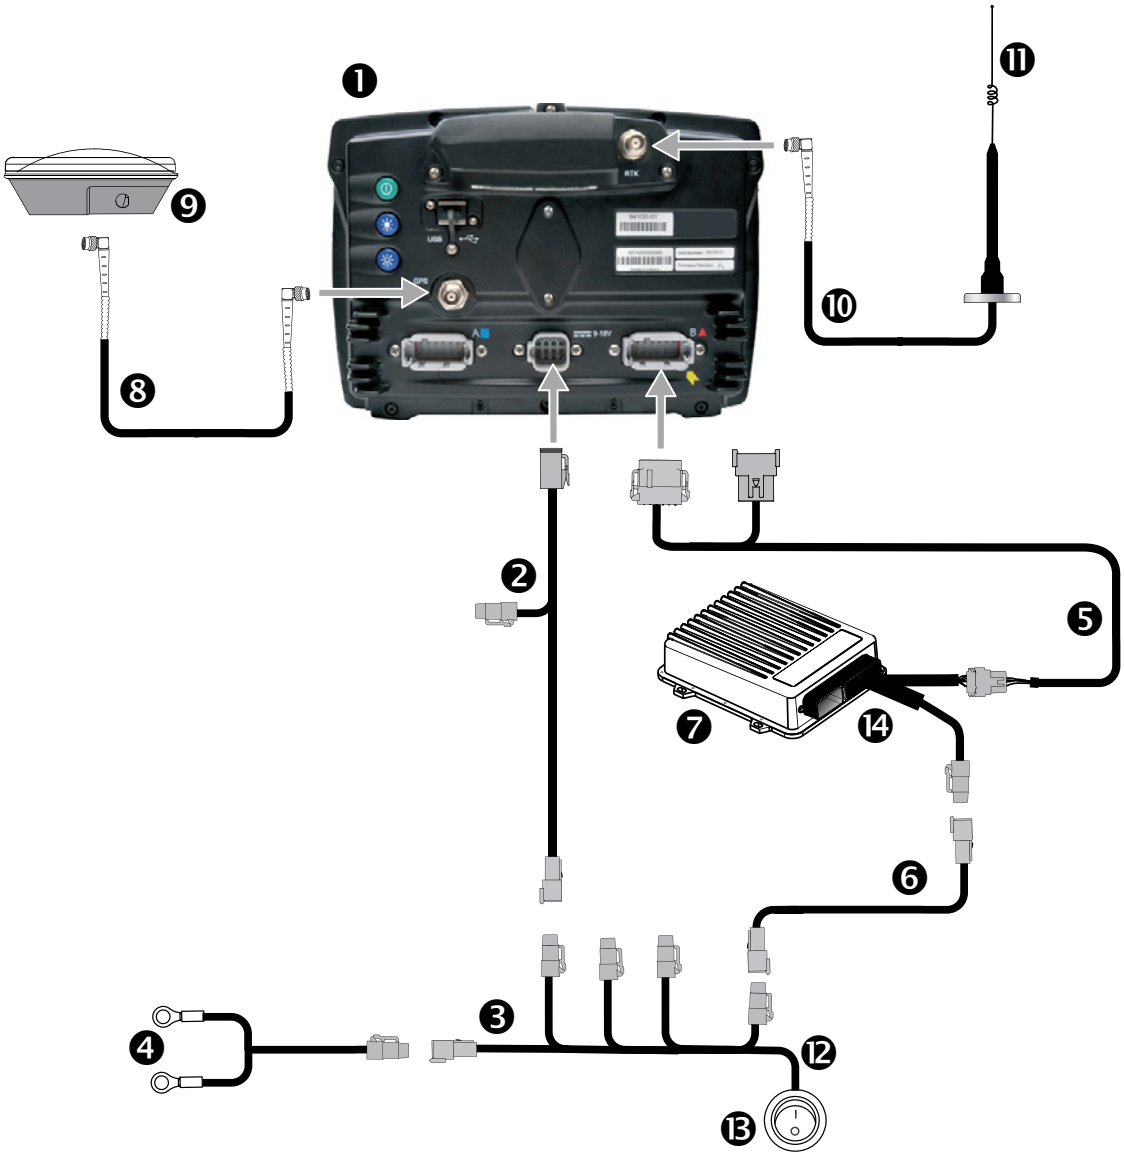


⚠ **CAUTION –** Connecting the Port Replicator on the CFX-750 display to NavController II cable ❺ to the P4 or P12 connector of the NavController II harness ⓮ will result in damage to the CFX-750 display and will void the warranty.

Item	Description	Trimble part number
1	CFX-750 display **NOTE –** RTK password required.	94100-02
2	CFX-750 power cable	77282
3	CFX-750 power cable with relay and switch (power bus)	67259
4	Basic power cable	67258
5	CFX-750 to NavController II cable with port replicator	75741

Item	Description	Trimble part number
6	2 pin DTM to 2 pin DT power adaptor	67095
7	NavController II	55563-00
8	8 m GPS TNC/TNC RT angle cable	50449
9	AG25 GNSS antenna	77038-00
10	NMO to TNC 20ft antenna cable and base	62120
11	900 MHz radio antenna kit	22882-10
12	External switch cable included with kit	Part of P/N 67259
13	External switch included with kit	Part of P/N 67259
14	Main NavController II cable	54601

GFX-750/XCN-1050 display: Components

This graphic shows the Autopilot system using NAV-900 as an external guidance device.

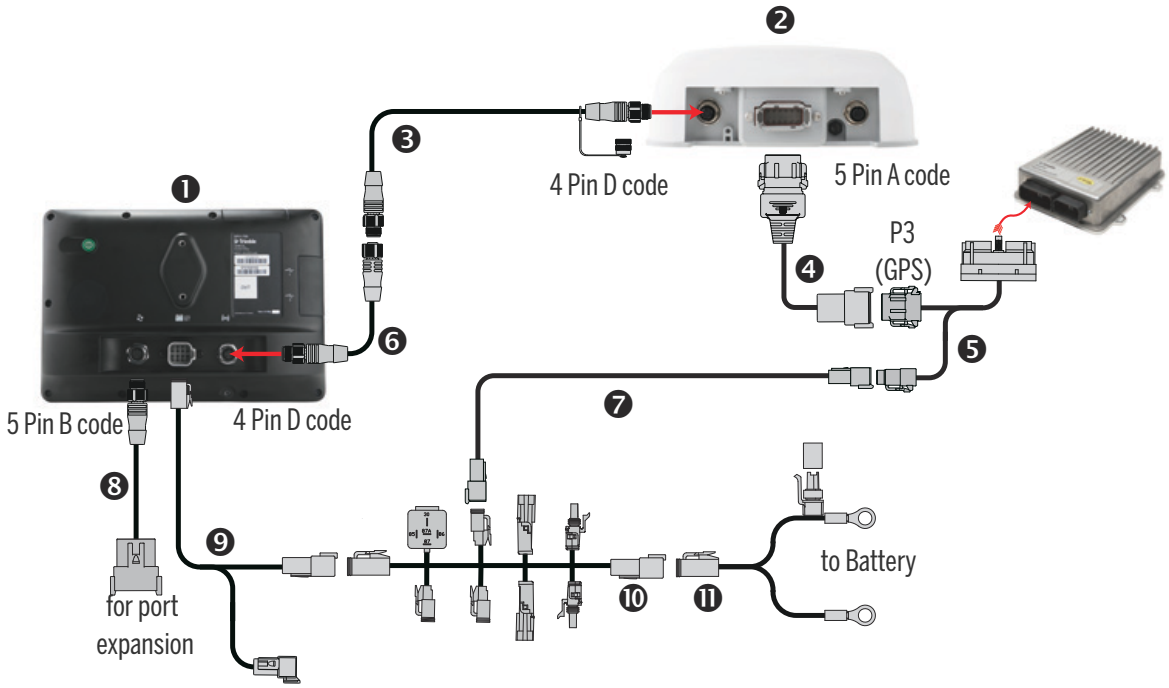

Item	Description	Trimble part number
1	GFX-750/XCN-1050 display, with PIQ App	121000-XX
2	NAV-900 Guidance controller	108993-05
3	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR), 5 m	110540
4	Cable Assy, NAV-900 to Nav II/III, AutoPilot™	110547
5	Cable, NavController II/III, Main	54601
6	Cable Assy, GFX-750/XCN-1050 to NAV-900, Power/Ethernet (BRR) Extension, 2.5 m. Optional extension for large vehicles	112082
7	Cable Assy, 2 PIN DTM to 2 PIN DT Power Adapter	67095
8	Cable Assy, GFX-750/XCN-1050, Expansion Port Basic, RS-232, Dig I/O, 2.5 m	110545
9	Cable Assy, GFX-750/XCN-1050, Power to display, CAN, 2.5 m	110551
10	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Power with Relay and Switch (Acc)	67259
11	Cable Assy, GFX-750/CFX-750/FM-750/XCN-1050/FmX/FM-1000 Basic Power, 4 m	67258


CFX-750 and GFX-750 displays: Installing the power harness

NOTE – Unless otherwise stated, instructions for "the display" refer to the CFX-750 display.


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Step 1

Connect the basic power cable to the vehicle battery and then route the cable into the cab.

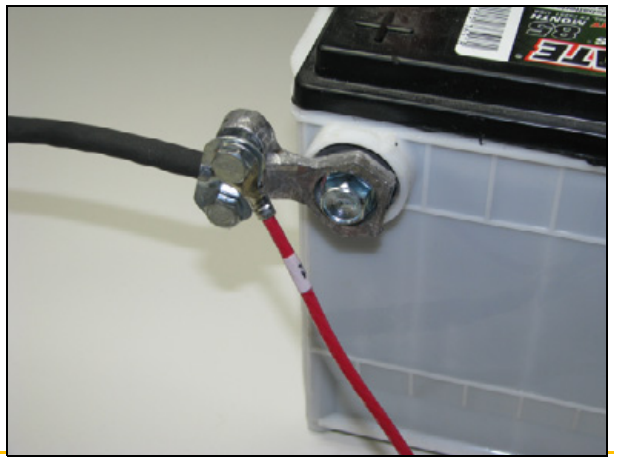


CAUTION – If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example.
Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

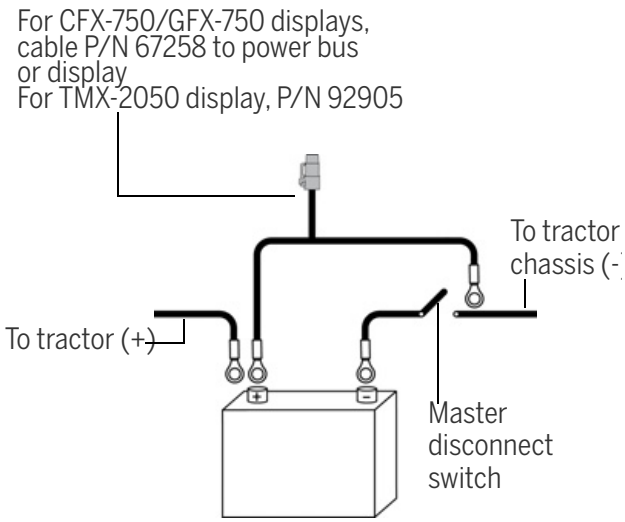

Step 2

Locate and connect the 4-pin Deutsch DTP receptacle on the power bus ❶ to the 4-pin Deutsch DTP plug ❷ on the basic power cable and then remove the protective cap from the 4-pin Deutsch DTP plug ❸ on the power bus and connect the plug to the 4-pin Deutsch DTP receptacle ❹ on the display power adaptor.

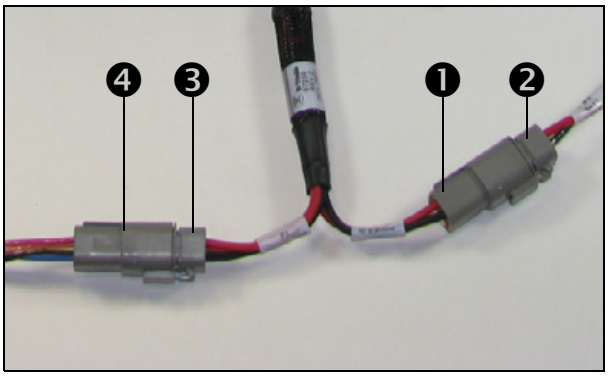

Step 3

Route the display power adaptor to the display mounting location and then connect it to the display.



CFX-750 display

CFX-750 and GFX-750 displays: Configuring the power bus options

NOTE – Unless otherwise stated, instructions for "the display" refer to either the GFX-750 or the CFX-750 display.


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

When you use the power bus cable, use one of the following configuration methods to turn on the Autopilot system:

- Display power button is used to turn on the Autopilot system
- External switch is used to turn on the Autopilot system
- Ignition is used to turn on the Autopilot system

Display power button is used to turn on the Autopilot system

Connect the 2 pin connectors labeled **R2** and **P2** on the power bus.

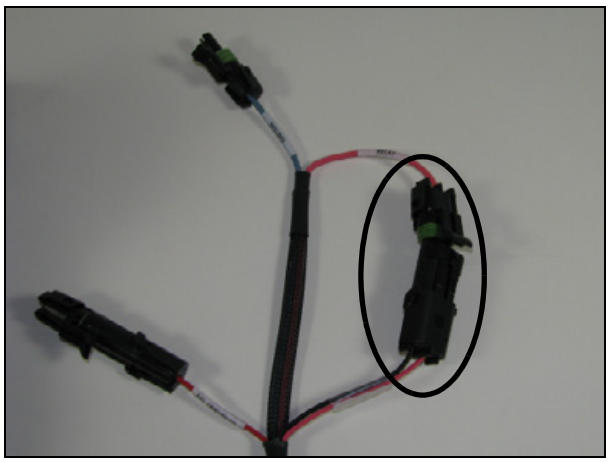


External switch is used to turn on the Autopilot system

Step 1

Connect the cable labeled **R7** switch ❶ (included with the power bus) to connector labeled **P2** on the power bus ❷ and then route the cable labeled **R7** to a switch location.


NOTE – To install the switch provided, drill a ¾" hole.

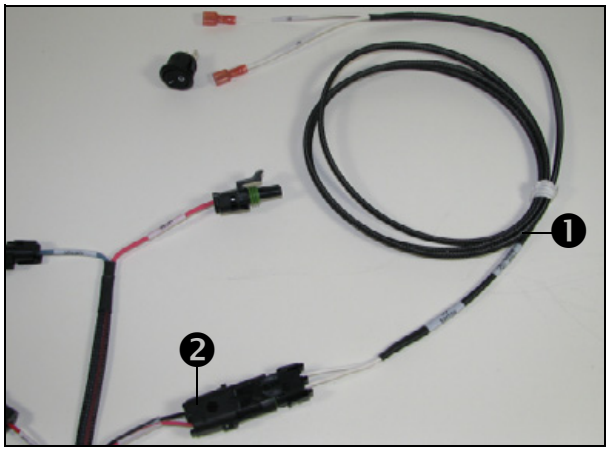

Step 2

Connect the cable labeled **R7** to the switch pins.

NOTE – Polarity is not important.

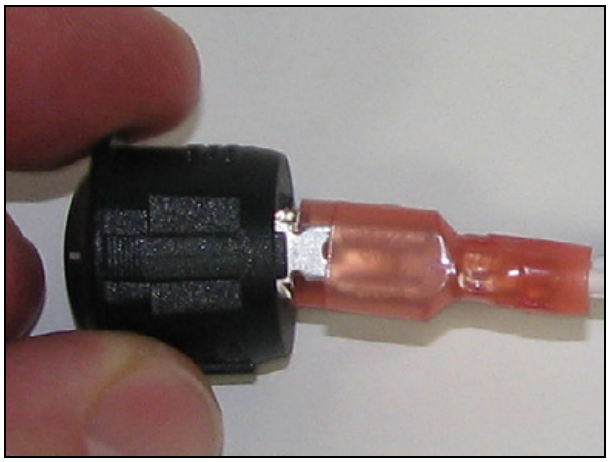


Installing the optional illuminated full or standard Euro switch

Step 1

Find an available knockout location on the vehicle console.

NOTE – An alternative location is required for the switch provided.

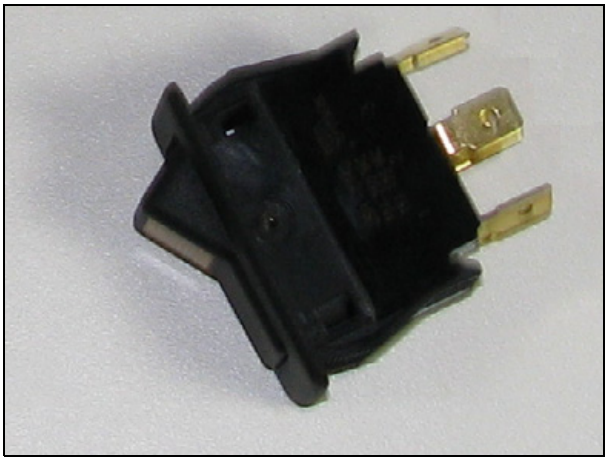


Step 2

Route the cable labeled **R7** to the switch location and then connect the cable to the illuminated switch.

Connect the wire labeled **S1** to pin 5 on the switch and then connect the wire labeled **S2** to pin 4 on the switch.


NOTE – Polarity is important.

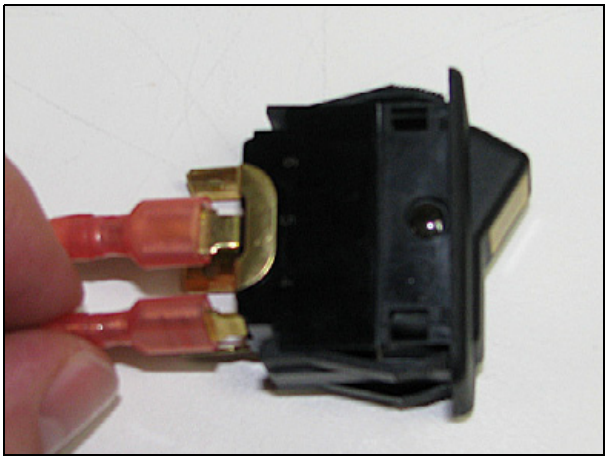

Step 3

Connect a separate wire to pin 3 on the switch using a spade connector. Route the wire and then connect it to the vehicle switched power.


NOTE – This additional wire is required to allow the switch to illuminate.

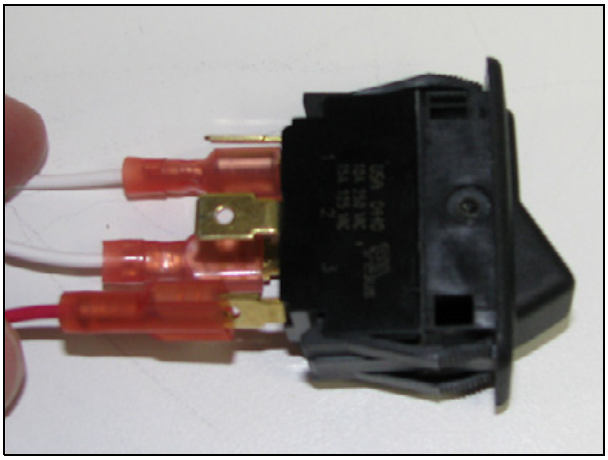

Ignition is used to turn on the Autopilot system

Step 1

Connect the 2-pin connectors labeled **R2** and **P2** on the power bus.

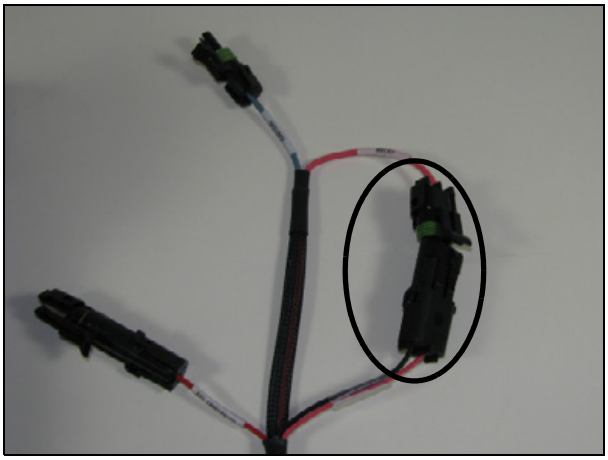


Step 2


Connect the cable labeled **R8 Ignition** (included with the power bus) to connector **P3 Ignition** on the power bus.

Step 3

Route the cable to the vehicles ignition.

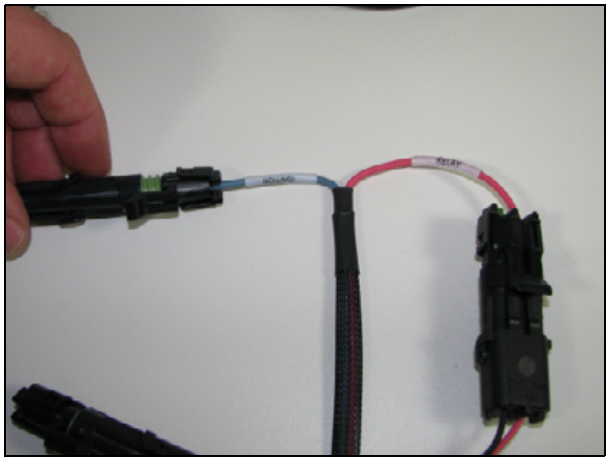

TMX-2050 display: Components

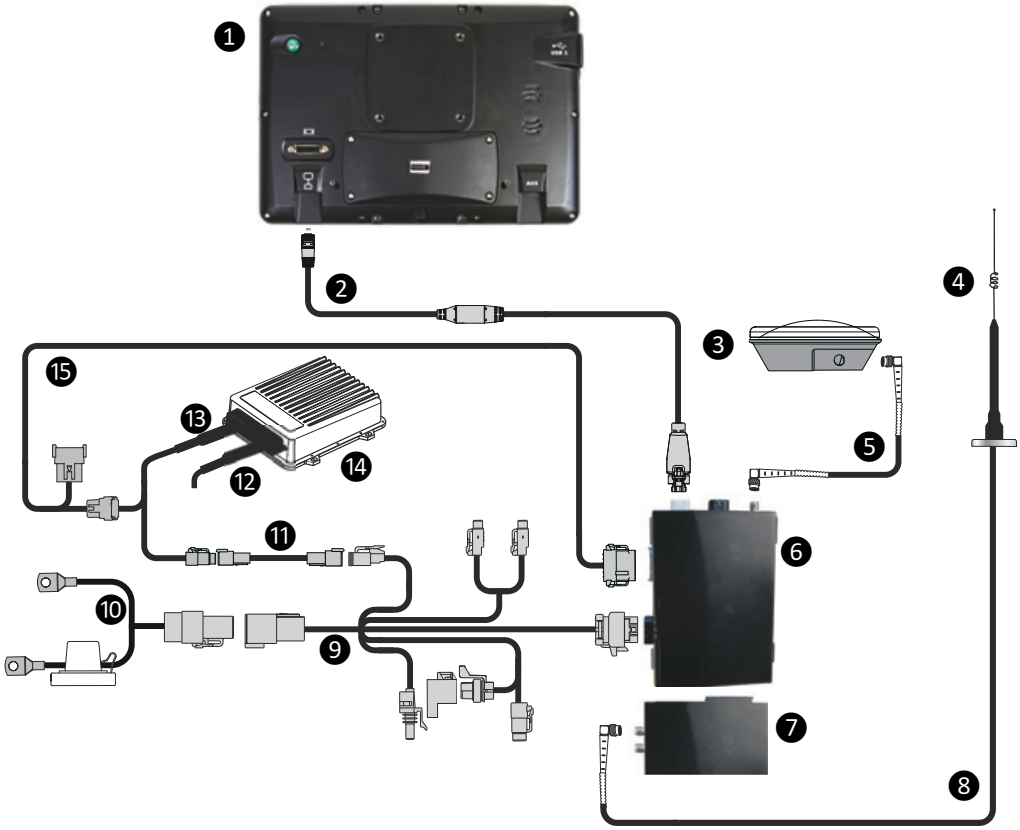


Item	Description	Trimble part number
1	TMX-2050 display	96700-00
2	TM-200 Module to display cable	93843
3	AG-25 GNSS antenna	77038-00
4	900 MHz radio antenna kit	22882-10
5	8 m GNSS TNC/TNC RT angle cable	50449
6	TM-200 Module	95060-00
7	AG-815 radio	
8	NMO-to-TNC 20 ft antenna cable and base	72122
9	TM-200 Module power and I/O cable	92676
10	Cable, battery	92905
11	2-pin DTM to 2-pin DT power adapter cable	67095
12	Cable, NavController diagnostic	54602
13	Main NavController cable	54601
14	NavController	55563-00 55566-00
15	TM-200 Module to NavController cable with port replicator	75741

TMX-2050 display: Installing the power harness


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

Step 1

Connect the basic power cable to the vehicle battery and then route the cable into the cab.

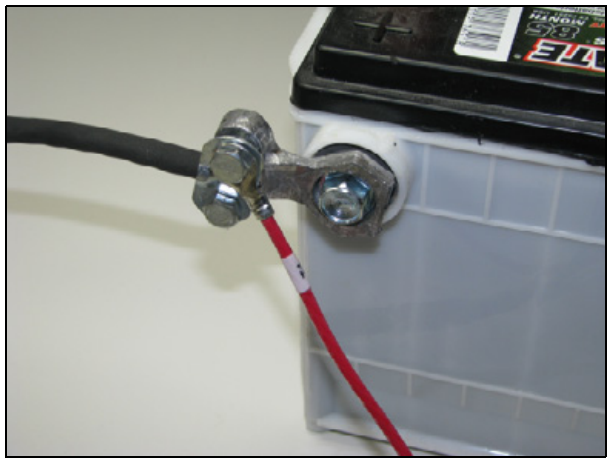

⚠ **CAUTION –** If the vehicle has a master electrical disconnect, make sure the basic power cable (P/N 67258 / 92905) is not directly attached to the battery terminal that is disconnected by the master switch - the negative pole in this example.
Attach this terminal side just past the main disconnect so that it is as close as possible to the battery but still gets disconnected when the master disconnect is turned off. Failure to do so can result in damaging the display.

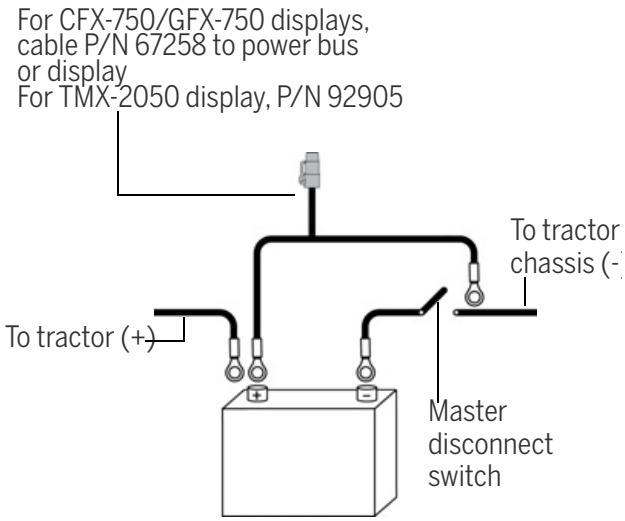


Step 2

Connect the power I/O cable P/N 92676 to the power port on the TM-200 Module.



Step 3


Route the power cable P/N 92905 that you previously connected to the battery and connect it to the R3 power in plug on the P/N 92676 cable.

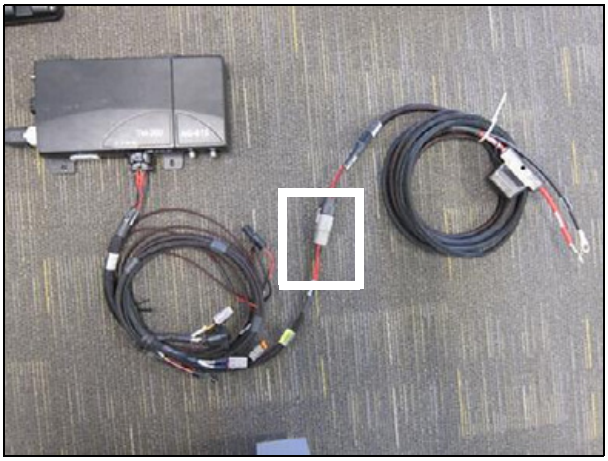

Step 4


Connect the 2-pin DTM to 2-pin DT power adaptor P/N 67095 to the P2 power out connector on the P/N 92676 cable.

Route the other end to the NavController harness P/N 54601.

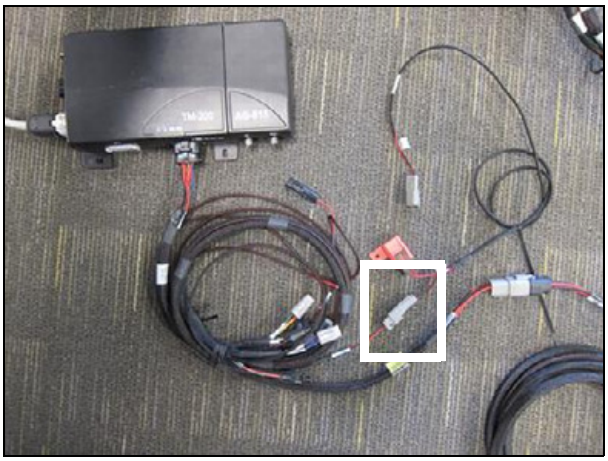

Step 5

Connect the other end of the P/N 67095 cable to the P2 power plug on the P/N 54601 cable.

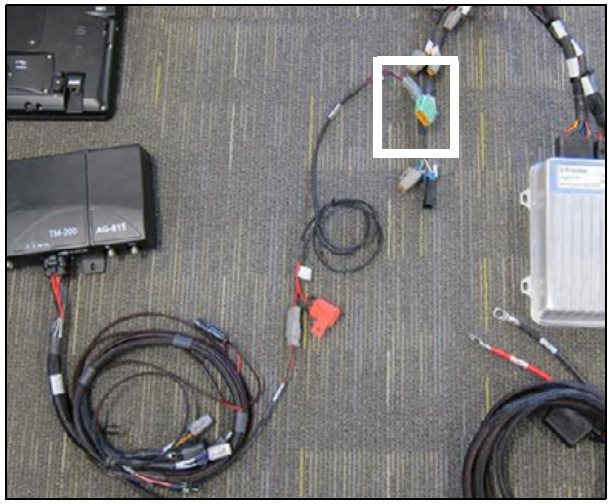

TMX-2050 display: Configuring the power options


⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information.

When you use the power bus cable, use one of the following methods to turn on the Autopilot system on the Trimble TMX-2050 displays:

- The display power button. No further changes need to be made to the power cables.
- Ignition sensing. See below.

Ignition sensing


For ignition sensing with the TMX-2050 display, connect the ignition on the power supply to the R1 connector on the harness, P/N 92676.

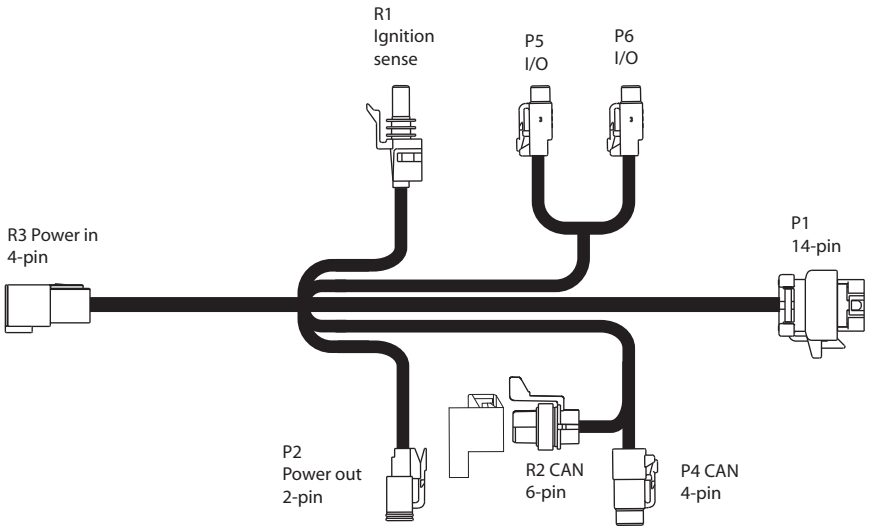

For more information on how to use the ignition sensing option, refer to the *TMX-2050 Display User Guide*.


Step 1

Locate the R1 ignition sensing plug on the P/N 92676 cable; also locate the ignition sensing wire provided with the P/N 92676 cable.

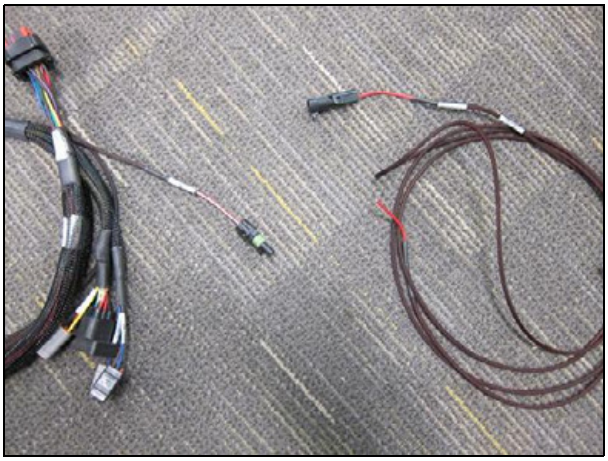

Step 2

Connect the red ignition sense wire to the vehicle ignition source then route to the plug on the harness and then connect it.

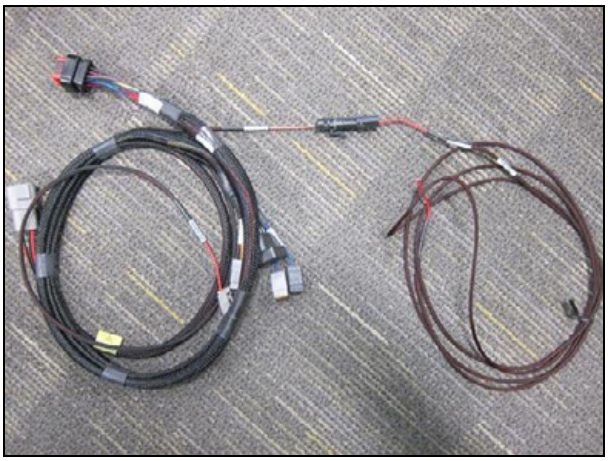

7

Remote Engage Switch Installation

- Remote engage switch components: Rocker switch
- Remote engage switch components: Foot switch
- Preparing the remote engage cable
- Installing the Remote Engage push button (P/N 101250)
- Using the remote engage switch


Remote engage switch components: Rocker switch



Item	Description
1	DTM receptacle
2	Remote engage rocker switch

NOTE – This is a Full or Standard Euro switch, depending on the kit ordered.

Remote engage switch components: Foot switch

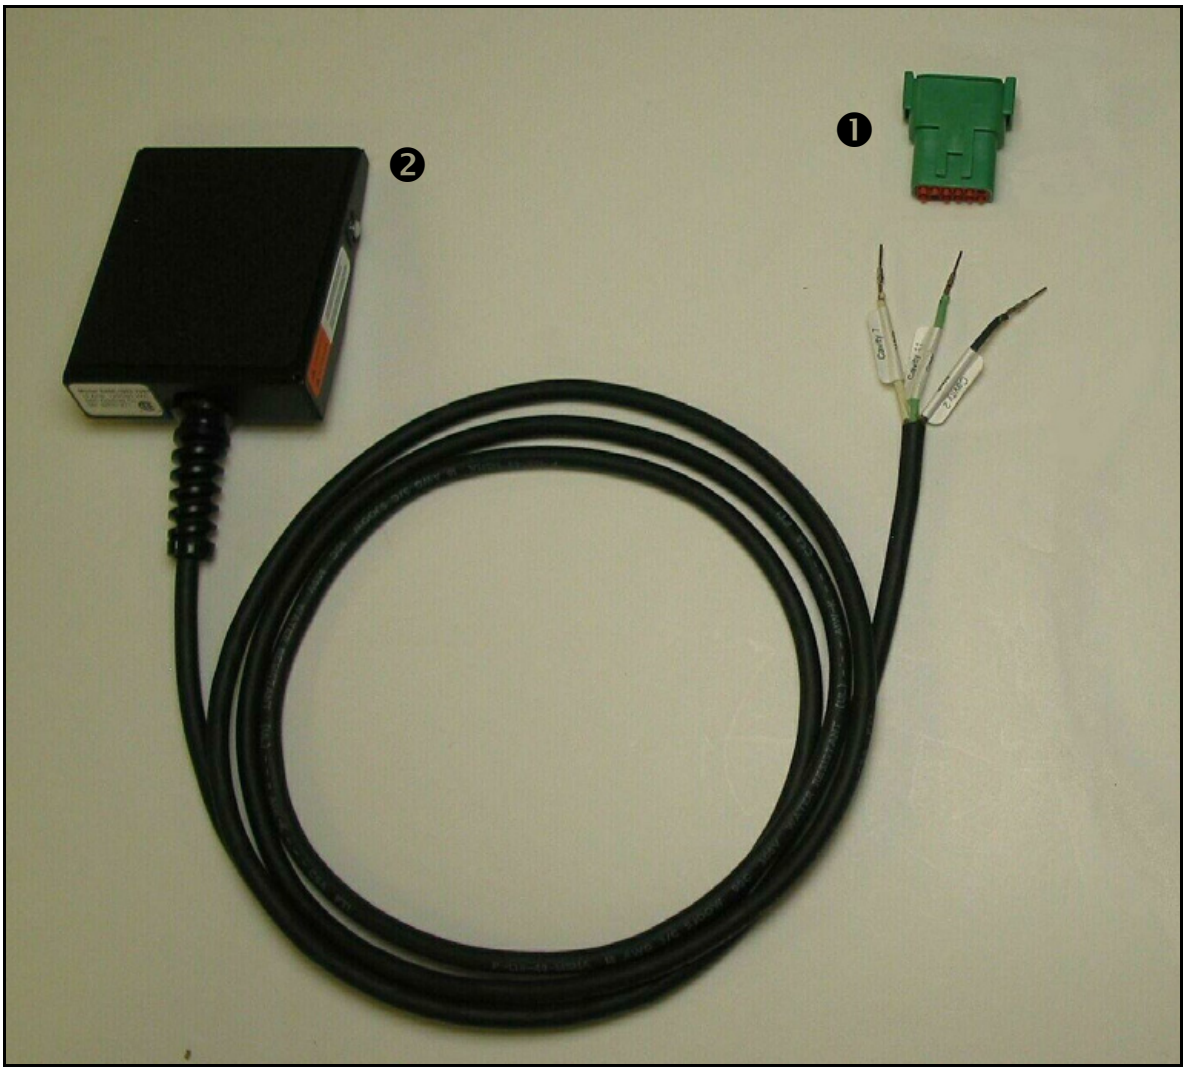


Item	Description
1	DTM receptacle
2	Remote engage foot switch

Preparing the remote engage cable


Step 1

Locate the green 12-pin Deutsch receptacle on the P-5 leg of the main controller harness. For more information, see Controller connections, page 90.

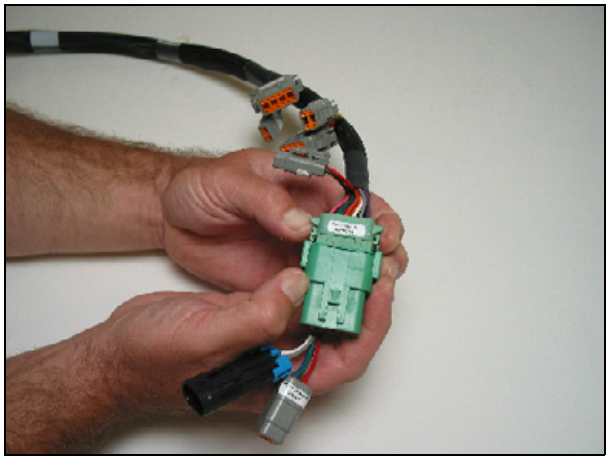

Step 2


Remove the wedge from the connector.

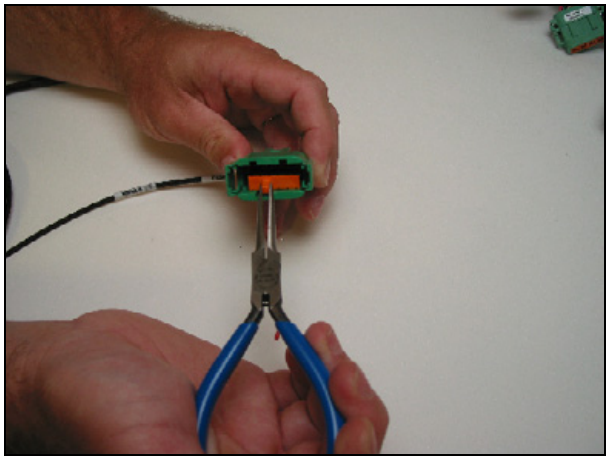

Step 3


Rocker switch only

Remove the plugs from cavity 2 and cavity 7.

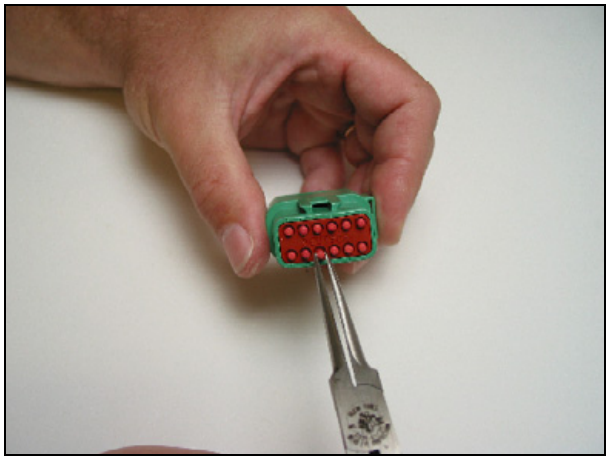

Foot Switch Only


Remove the plugs from cavity 2, cavity 7, and cavity 11.

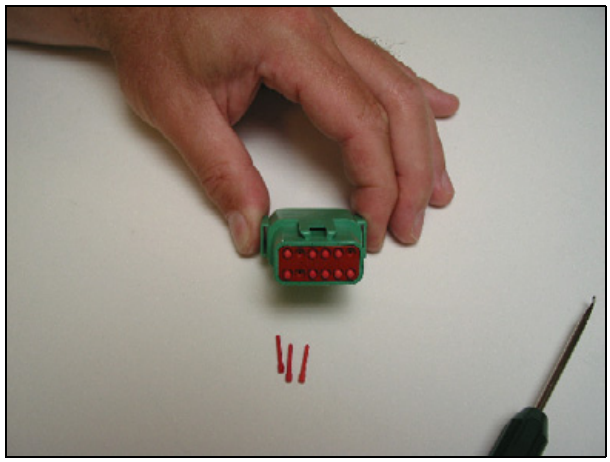

Step 4


Rocker switch only

Insert the DTM pins into cavity 2 and cavity 7, according to the labels on the wires.

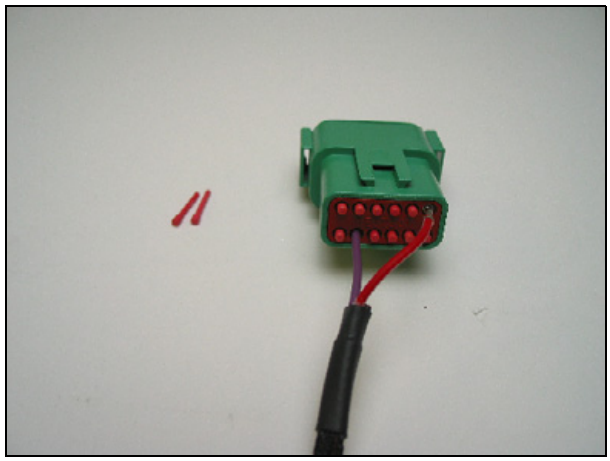


Foot switch only

Insert the DTM pins into cavity 2, cavity 7, and cavity 11, according to the labels on the wires.

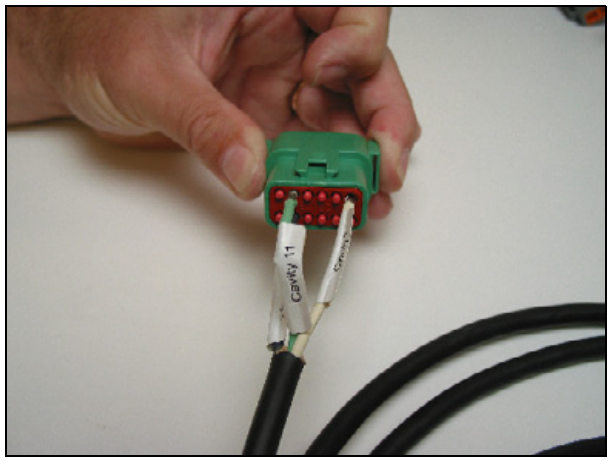

Step 5

Pull on the wires to seat them in place and then replace the wedge in the connector.

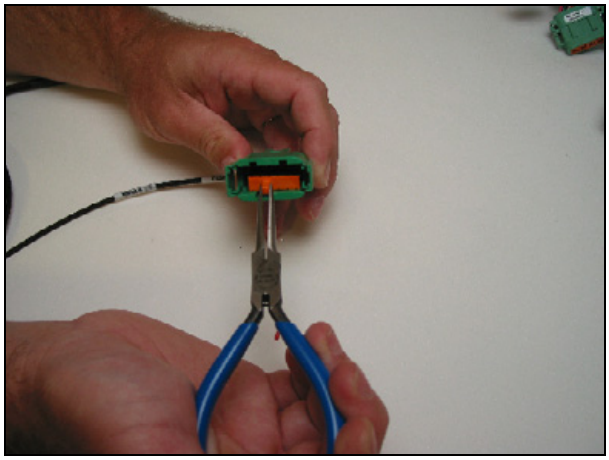

Step 6

Replace the receptacle on the P5 plug of the NavController II harness.

Step 7

Rocker switch only

Run the spade ends of the cable to a knockout location in the operator console.



Foot switch only


Run the cable to a clear location on the floor board. Use double-sided tape to secure the pedal. Route the cable under the floor mat.



Step 8

Rocker Switch Only

Connect the wires to the switch. Match the print on the switch body with the labels on the wires.

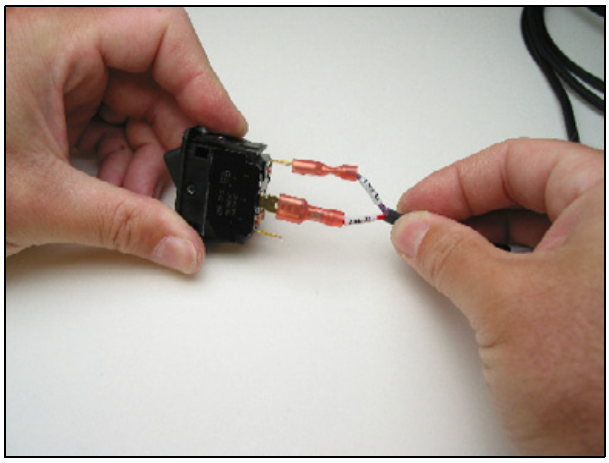

Step 9

Rocker Switch Only


Place the switch in the console.



Installing the Remote Engage push button (P/N 101250)

Step 1

Locate the push button cable assembly (P/N 101250) and verify that the 12-pin green Deutsch connector, wedgelock, and seal are included in the small Ziploc bag.

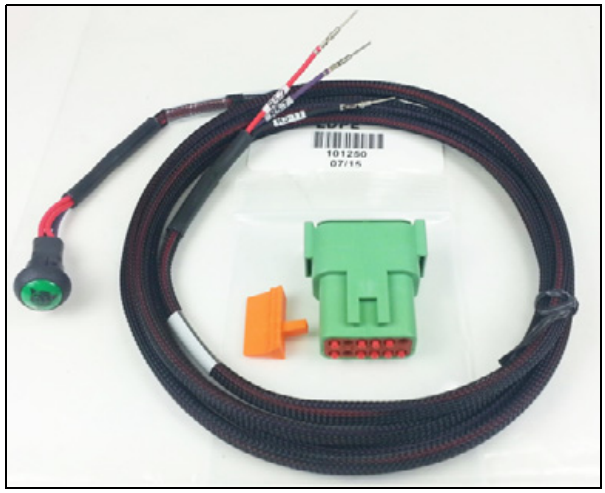

Step 2

Locate a convenient location on the machine to install the switch. It should be easily accessible while driving but should not interfere with any other machine controls.



Step 3

Remove the panel from the desired installation location to verify that there is adequate clearance for the switch and cable. Take care that the cable will not interfere with any gear levers.



Step 4

Drill a ½" hole for the switch.



Step 5

Thread the cable through the clear round seal, and slide it up until it reaches the switch.




Step 6

Thread the cable through the hole in the instrument panel.



Step 7

Push the button down until it seats. The locking tabs will hold it securely in place.

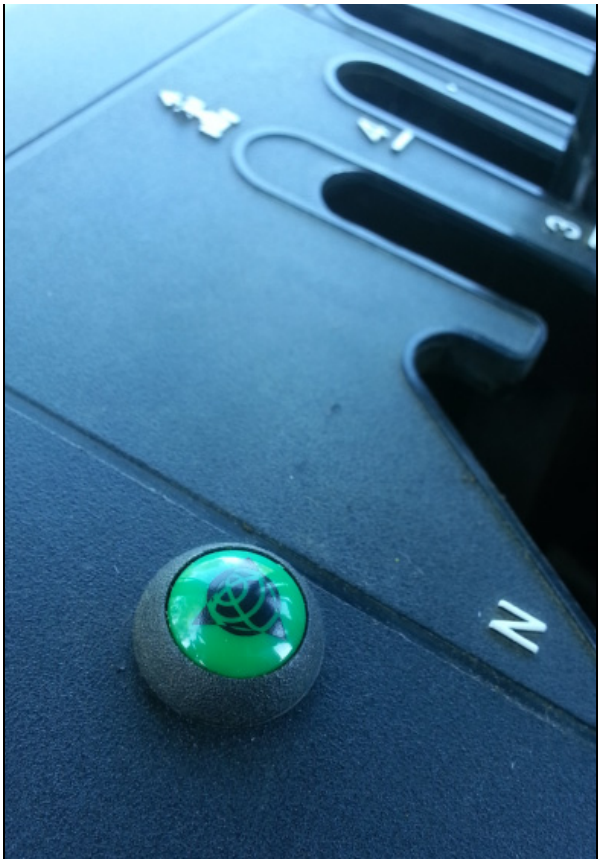


Step 8

Route the cable as desired, and insert the contacts into the 12-pin connector as labeled.



Step 9

Plug the 12-pin receptacle into the mating green plug (P5) on the NavController main harness (P/N 54601). Verify that the button works properly before proceeding. In dim lighting, the button has an LED backlight which will be visible whenever the NavController is powered on.

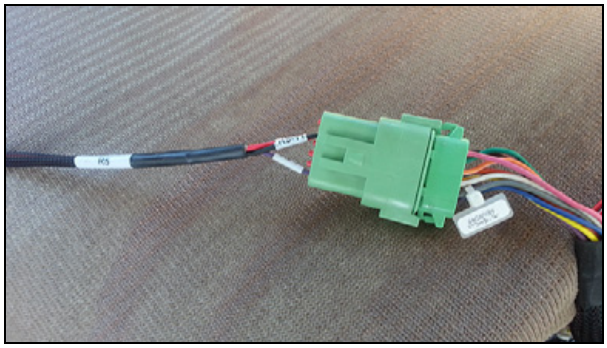

Step 10

Reinstall the panel and secure loose cables with wire ties.



Using the remote engage switch

To engage a system using NavController II do one of the following:

- Firmware versions 5.20 and earlier: Hold down the remote engage switch for longer than 0.5 seconds and less than 4 seconds.
- Firmware 5.21 and later: Hold the switch down for longer than 0.15 seconds and less than 4 seconds.

The system engages when you release the switch.

8

Controller Installation

- Installing the controller
- Controller connections


Installing the controller

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

Mount the NavController to the floor on the right side of the seat. Point the connectors to the rear of the vehicle. Use the supplied mounting plate (P/N 54828) to provide a firm mounting surface for the controller.



Controller connections

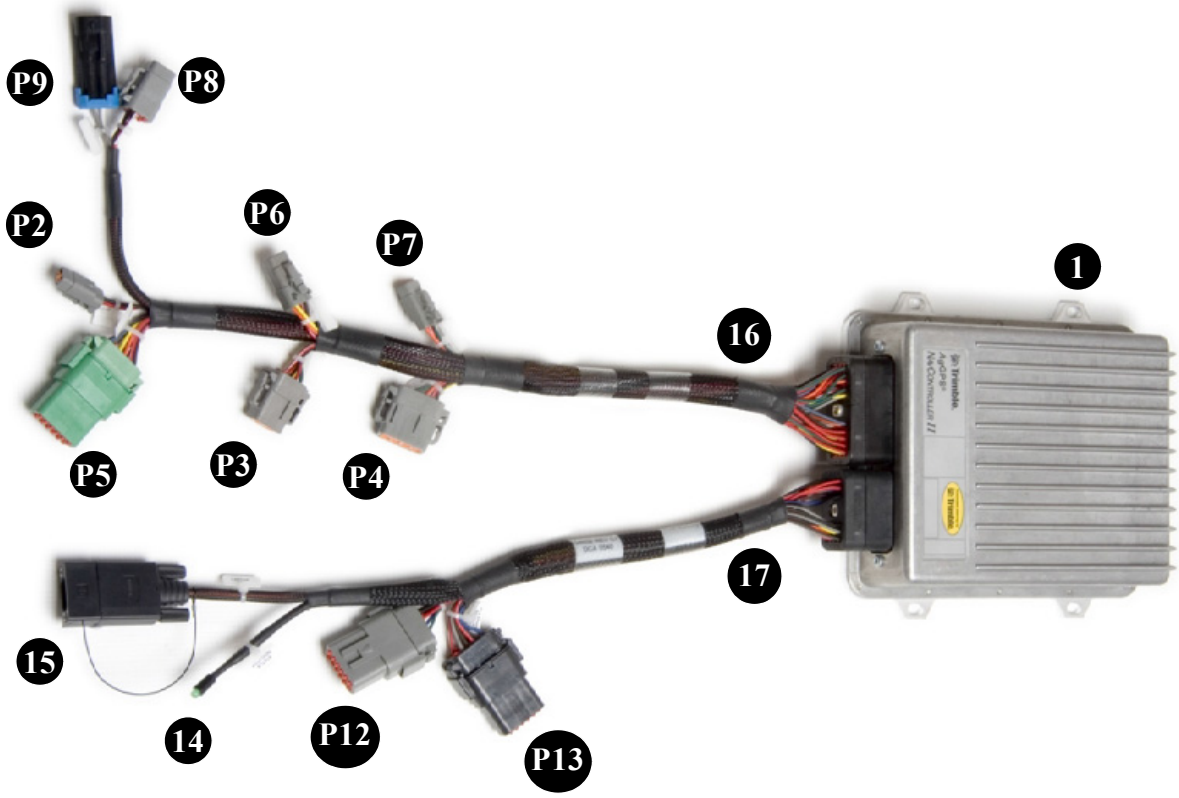


Item	Description	Item	Description
1	NavController II controller	**P9**	Sonalert connector
P2	Power connector	**P12**	Lightbar/spare connector
P3	GNSS connector	**P13**	Spare sensors connector
P4	Display connector	**14**	Status indicator
P5	Vehicle sensors connector	**15**	Laptop connector
P6	Steering sensor connector	**16**	Main harness
P7	Manual override connector	**17**	Auxiliary harness
P8	Hydraulic valve connector		

Step 1

Connect the power cable connection to P2, which is labeled **Power**. P2 is located on the main wiring harness.


NOTE – The power connection supplies power through the controller to all connected devices, including GNSS and displays.

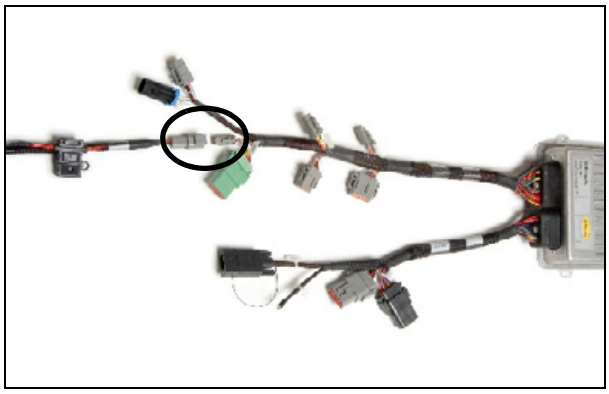

Step 2

Connect the GNSS cable connection to P3, which is labeled **GPS**. P3 is located on the main wiring harness.

NOTE – If you are installing a CFX-750 or TMX-2050 display, plug the display here, using cable P/N 75741.

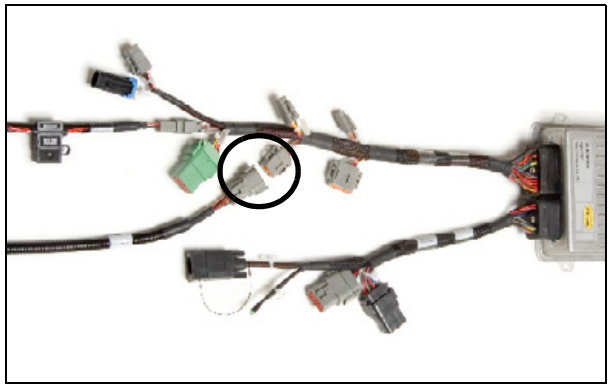


Step 3

With the P/N 114675 steering sensor cable routed to the NavController, the R1 connector will connect to the P12 connector on the 54602 harness on the NavController as shown.




Step 4

Connect R13 and R5 from steering wheel sensor cable P/N 81349 to P5 and P13 on cables 54601 and 54602 respectively.

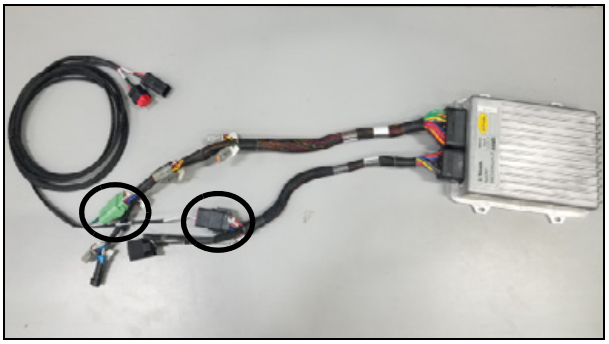


Step 5

Connect the hydraulic steering valve cable connection to P8, which is labeled **Hydraulic Valve**. P8 is located on the main wiring harness.

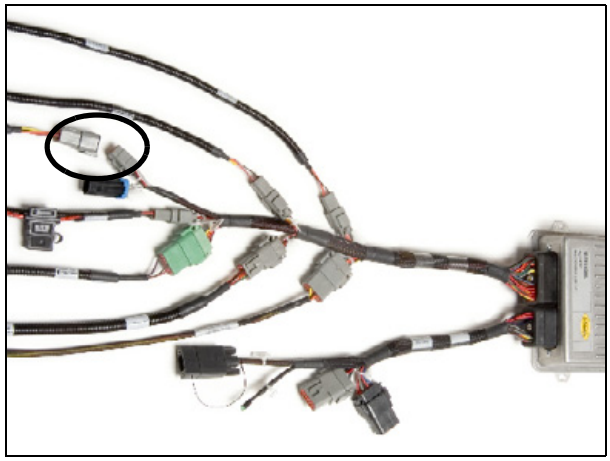


Step 6

Connect the Sonalert P9 to the 2-pin Delphi connector on the main wiring harness. Route the cable so the Sonalert warning device is in a position that is audible to the operator.

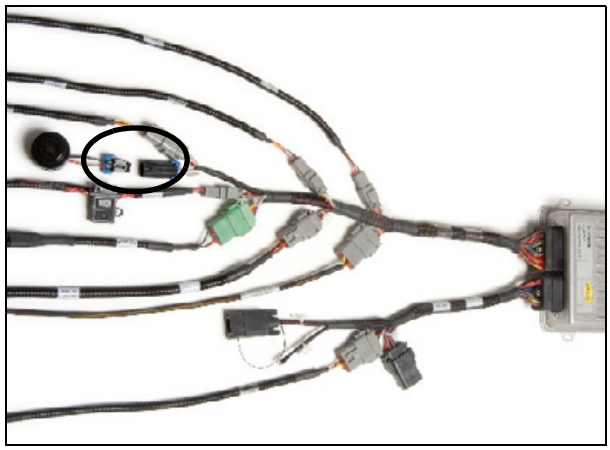

Step 7

Route the LED and laptop lead, which is located on the auxiliary wiring harness, to a location that allows the operator to determine the controller status. See controller LED status for status determination. Six flashes per second indicates a correctly functioning controller.

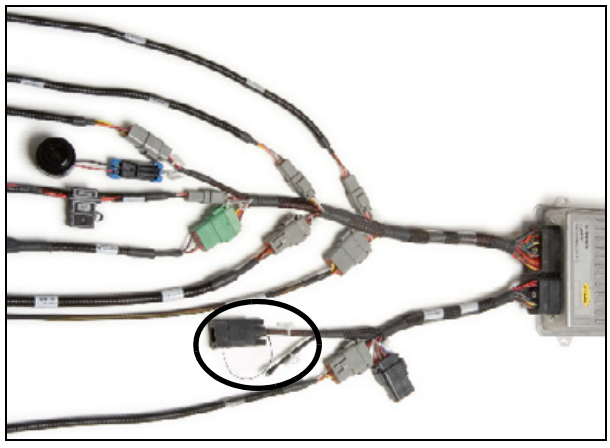

Step 8

Use the provided sleeving to secure the harness cables with tie wraps. Cover and route the cable bundle to avoid damage to connectors and strain on wire connections.

9

Final Machine Check

⚠ **WARNING –** To avoid potentially serious personal injury or illness, and to prevent damage to equipment, make sure that you read and understand the Safety Information chapter.

1. Connect the battery.
2. Start the machine and check for hydraulic leaks. Correct as needed.
3. Update the Trimble display and the Autopilot NavController II to the latest firmware from http://www.agpartners.trimble.com.

   You can use FlashLoader 200 software version 3.19 to update the Autopilot controller: Download it from http://agpartners.trimble.com.
4. Load the correct configuration file into the Autopilot NavControllerII for the vehicle model being used.

   Download the latest set of configuration files from http://www.agpartners.trimble.com.

   You can use Autopilot Toolbox II software version 2.92 to load the configuration file into the Autopilot controller. You can download the Autopilot Toolbox II software from http://agpartners.trimble.com.
5. Calibrate the Autopilot system using the Trimble display or the Autopilot Toolbox II software. Depending on your machine type, the following items must be calibrated before you can use the Autopilot system:
   - NavController II mounting orientation
   - Manual override
   - Autosense mounting orientation
   - Valve deadzone
   - Autopilot P-gain
   - Antenna height/Antenna axle offset, and Roll offset